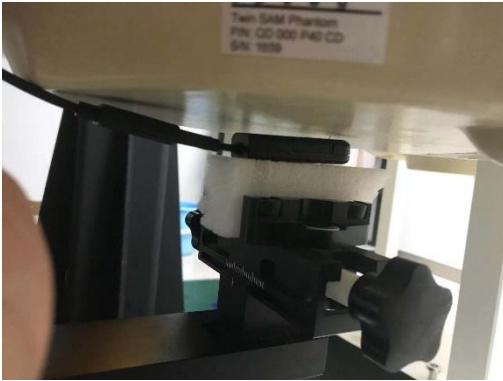
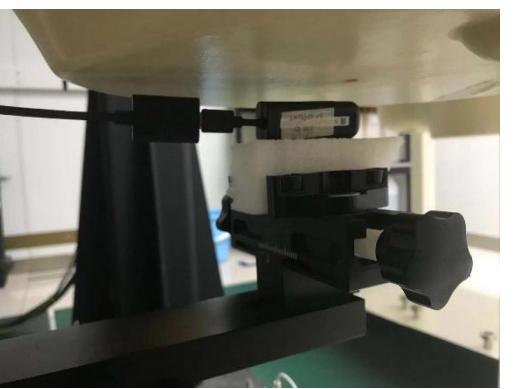
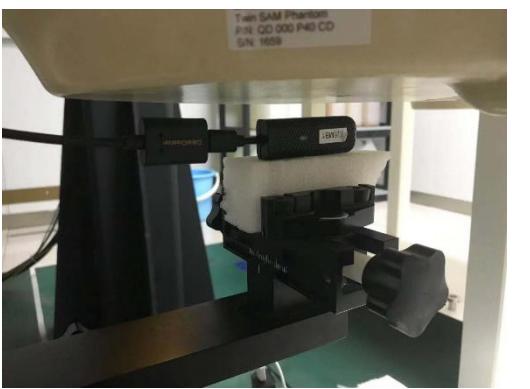
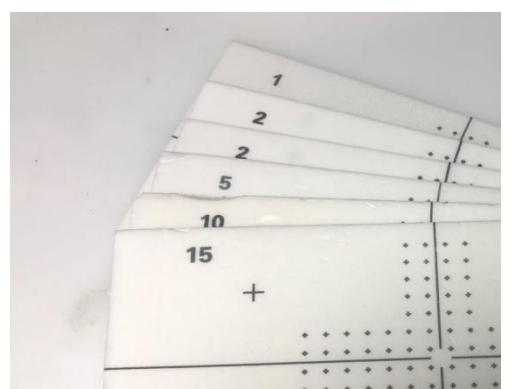



SAR TEST SETUP

(SAR Measurement)

	
Back (5mm with sensor on)	Front (5mm with sensor on)
	
Top (5mm with sensor on)	Bottom (5mm with sensor on)
	
Left (5mm with sensor on)	


	
<p>Back (19mm with sensor off)</p>	<p>Front (19mm with sensor off)</p>
	
<p>Top (19mm with sensor off)</p>	<p>Bottom (19mm with sensor off)</p>
	 <p>7 2 2 5 10 15 +</p>
<p>Left (19mm with sensor off)</p>	<p>Spacers (Trigger distances-1)</p>

(SAR sensor –Trigger distance)

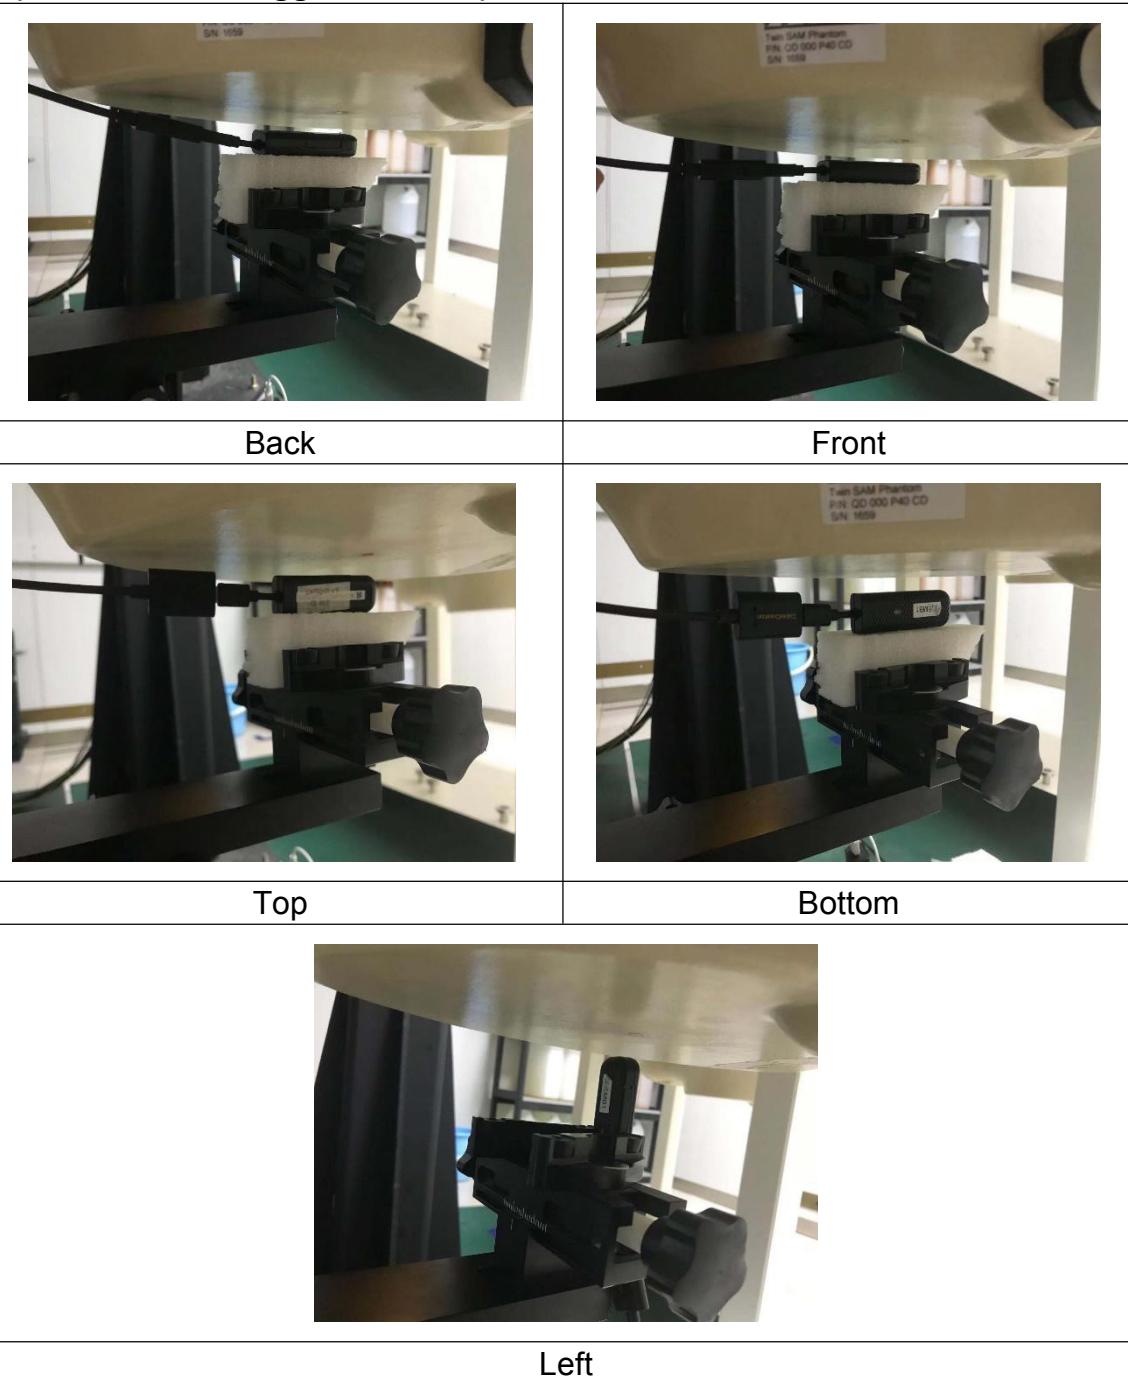

Note: Plastic foam and low dielectric materials will not trigger sensor.

(SAR sensor –Tilt angle)

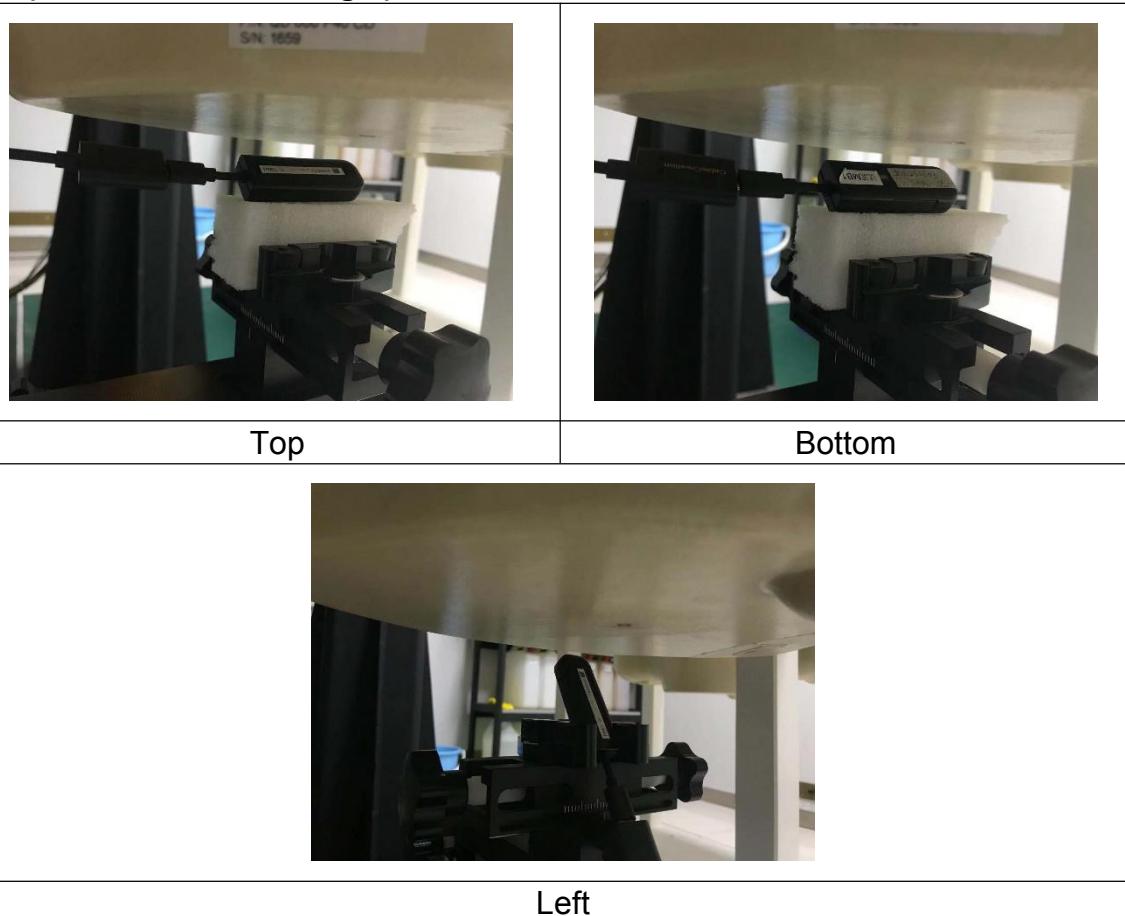

Note: Trigger angle measurement only apply to edges such as top/bottom/left.