



ENGLISH

FUNCTION OVERVIEW

GETTING STARTED

Power On / Off

- Press and hold the power button for 2-3s to turn on your tablet. Select your language and set up your tablet following the onscreen guides.
- Press and hold the power button for 2s, then release it. It will show Power off/Restart and Screenshot on the screen Tap Power off to turn off the tablet.
- Press and hold the power button for 10s to do a forced reboot when it's frozen.

* Google, Android, Google Play, YouTube and other marks are trademarks of Google LLC.

HOME SCREEN

Icons on the Bottom Menu

Home Settings, Widgets and Wallpapers

Tap and hold a blank part of the home screen to display the home screen settings and wallpaper.

- Click on the home screen setting to start customizing your home screen
- Add icons to the home screen
- Allow new applications installed on the Google Play to be displayed on the home screen.

EN

SETTING BASICS

Quick Settings

Swipe down from the top of the screen to access Quick Settings.

FUNCTION OVERVIEW

Tap the icon to change the options in the Quick Settings. Long press each icon to enter the interface of its detailed settings.

More Settings

Go to Quick Settings, then tap the icon to enter the detailed setting interface. Or, tap Settings App on the Home screen to enter.

FUNCTION OVERVIEW

Network & internet

- Connect to any wireless 2.4G WiFi
- Monitor the data usage
- Enable/disable the Airplane Mode
- Add VPN connections

Connected devices

- Pair with Bluetooth devices and check the paired devices
- Turn on/off Bluetooth
- Add and check printers

Apps & notifications

- Check the Apps recently opened
- Check all the Apps on the tablet
- Check the screen time for Apps

Battery

- Display the remaining battery power as a percentage
- Enable/disable Battery percentage and Battery Manager
- Set Power saving optimization
- Manage the battery optimization for apps
- Check the detailed battery settings for Apps

Display

- Adjust the screen brightness
- Adjust the size and display size
- Set screen orientation
- Change the wallpaper
- Adjust the time of entering the Sleep Mode and more

Scheduled power on/off

- Set the time and days of the week for the tablet to automatically turn on/off

Audio profiles

- Select audio profiles from General, Silent and Outdoor
- Set the volumes for ring, notification, media and alarm

Storage

- View and manage your storage space

Security & location

- Set screen lock pattern, e.g. Password, PIN, Swipe etc.

FUNCTION OVERVIEW

Accounts

Add and manage the user accounts on your tablet.

Accessibility

For vision and hearing impaired users, manage settings for Screen readers, Display, and more

Digital Wellbeing & parental controls

Check your app usage based on Screen time, Notifications received, or Times opened from Dashboard

Set a schedule for Wind Down and switch on the setting you prefer

Manage the related notification settings to reduce interruptions

Set up Parental Controls to help your kids balance their screen time

Google

Set the preferences for Google related services

System

Check the detailed information about the tablet

Set Language

Tap Languages & Input Languages > Add a language to add your language. After adding, hold and slide the to the top to change the language.

Turn on/off the quick access to the camera.

Set the date and time.

Turn on/off the Backup up to Google Drive

Restore factory setting

Tap Advanced > Reset options > Erase all data [factory reset] to restore the factory setting

FUNCTION OVERVIEW

Launch the App Settings or long press the WiFi/Bluetooth icon in Quick Settings.

WiFi Connection

Tap and open Google Play on the Home Screen.

Log into your Google Account, then search and download the apps you need.

Tap the icon to change the options in the WiFi settings. Long press each icon to enter the interface of its detailed settings.

Bluetooth Pairing

Please turn on the Bluetooth on your bluetooth device firstly.

FUNCTION OVERVIEW

Go to Connected device > Connection preferences > Bluetooth to turn on the bluetooth on your tablet.

Tap +Pair new device to enter the scanning interface. Devices available will be displayed after a few seconds.

Tap the desired device to get a pairing code and click PAIR on both devices. The automatic connection is applied to some devices.

APP MANAGEMENT

App Download and Installation

Tap and open Play Store on the Home Screen.

Log into your google account, then search and download the App you need.

App Management

Move the App

Tap and hold the App, then slide it to a desired screen.

Remove the App from the Home screen

Touch and hold the App, then slide to X to remove it from your Home Screen.

Uninstall the App

Touch and hold the App, then slide to X to Uninstall to uninstall the App.

Clear the Cache of the App

Go to Settings > Apps & notifications.

Select an App > Storage > CLEAR CACHE to clear the cache.

EN

FUNCTION OVERVIEW

USB computer connection

Charge only

Media device (MTP)

Camera (PTP)

MIDI

MO

FUNCTION OVERVIEW

Connecting to an External Device

Install a memory card with the capacity up to 128G and go to Quick Settings.

Tap SET UP.

Set the memory card as a portable storage by selecting Portable storage. Enter memory card storage to move files between the card and tablet.

Manage notifications

USB computer connection

Media device (MTP)

Camera (PTP)

MIDI

MO

How will you use this SD card?

Use as external storage For apps, files, and media on this tablet only

OR

Use as portable storage For transferring files and media between devices

Set up later

EN

FUNCTION OVERVIEW

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

* The symbol indicates DC voltage

RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.

This product can be used across EU member states.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Manage notifications

USB computer connection

Media device (MTP)

Camera (PTP)

MIDI

MO

How will you use this SD card?

Use as external storage For apps, files, and media on this tablet only

OR

Use as portable storage For transferring files and media between devices

Set up later

EN

FUNCTION OVERVIEW

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

* The symbol indicates DC voltage

RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.

This product can be used across EU member states.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

<div data-bbox="85 957 250