

HD Intelligent Network
Set Top Box

User Manual


Please do read user manual before you operate the device.

Safety Instruction

1. Please keep the device in horizontal position.
2. Please use the provided power adapter.
3. Please keep the device away from the heat source to avoid any damage to the machine.
4. Keep the device in a properly ventilated area.
5. Please keep the device away from damp and dusty environment to avoid fire and electric shock.
6. Promptly shut down the device and unplug power adapter if the machine starts emitting smoke or in case there is a burning smell coming out of the device.
7. Please unplug the power adapter in case device is not used for longer time.
8. Do not put any heavy stuff on the top of the device.
9. Please avoid to plug power adapter with wet hands.
10. Please do not dissemble, modify the device by yourself to avoid any shock or damage to the device.
11. Do not use the damaged power cable and plug.

Installation Instructions

Please refer to below pictures and instructions to connect TV, Power, Network and other devices.

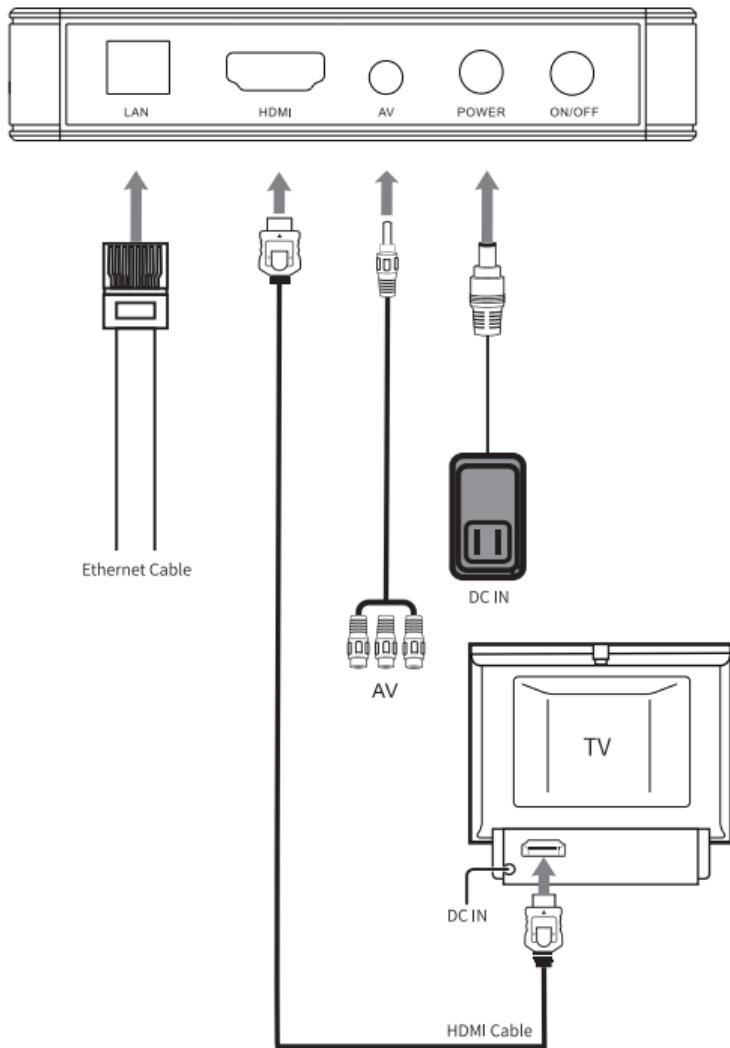

1. Connection with TV

Connect HDMI/AV cable to HDMI/AV port of the Android TV box and TV set.

2. Connection with Power

Connect the power adapter to the Android TV box.

3. Connection with network

(1) If connect the network by wireless WIFI, you can select

System Settings- Network Settings- Wireless Network, then select your WIFI SSID, input the correct password to connect.

(2) If connect the network by Ethernet, please plug the ethernet cable to LAN port of the Android TV box, the other side to LAN port of router or Ethernet port of home broadband network.

Accessory List


The box contains the below accessories:



Android TV Box



Power Adaptor

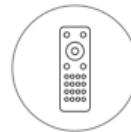

Remote Control



HDMI Cable



HDMI Cable

Troubleshooting

1.TV has no display or no signal

Please Connect power plug, ensure normal voltage electrical outlet. Check whether the HDMI/AV cable is connected correctly, and switch the signal input of the TV to correct source.

2.TV with images but without voice or low voice

Check that the audio cable is correct and the volume of your box or TV is set to mute or low. Turn up the volume.

3.Fail to connect the network

Please reconnect internet, check if Wi-Fi closed or the signal is too weak. Please restart the Wi-Fi or adjust the position of the router.

4.Controller failure

Use remote control in the correct direction. Please change the batteries when remote control is with low battery.

FCC Statement

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference,
and (2) this device must accept any interference received,
including interference that may cause undesired operation.

Changes or modifications not expressly approved by the
party responsible for compliance could void the user's
authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with
the limits for a Class B digital device, pursuant to Part 15
of the FCC Rules. These limits are designed to provide
reasonable protection against harmful interference in a
residential installation. This equipment generates, uses
instructions, may cause harmful interference to radio
communications. However, there is no guarantee that
interference will not occur in a particular installation. If
this equipment does cause harmful interference to radio
or television reception, which can be determined by turning

the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF warning statement:

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

