



Customer Support
www.facebook.com/smoosatscooter
or scan above QR code

Shenzhen Ruiyundi Tech. Co. Ltd.

Website: www.ismoosat.com

Facebook: www.facebook.com/smoosatscooter

Email: support@ismoosat.com

Tel: +1 929 693 6066

Mon-Fri 9:00 AM - 5:00 PM Pacific Time

Add: 2208-E3, Block A, Lianhe Plaza, No. 5022,
Binhe Avenue, Fushan Community, Futian District,
Shenzhen, Guangdong, China.



V_220504

SmooSat

E9 Pro / E9 Apex

OWNER'S MANUAL



Thank you for purchasing


Thank you for purchasing SmooSat Electric Scooter. It is a sports and recreational vehicle with style.

Contents


1. Package Contents	02
2. Product Overview	03-04
3. Assembly and Set-Up	05-06
4. Charge Your Scooter	07
5. Pairing your Bluetooth® Device	08
6. How To Ride and Stop	09-10
7. Safety Instructions	11-15
8. Folding and Carrying	16
9. Daily Care and Maintenance	17
10. Specifications	18
11. Troubleshooting Guide	19
12. Trademark and Legal statement	20
13. FCC Compliance	21

1 Package Contents

Pre-Assembled Electric Scooter

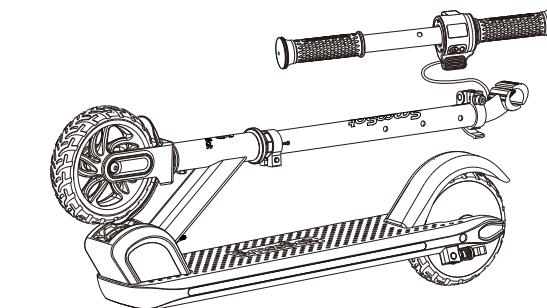

Accessories

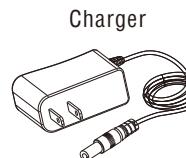


Charger




5mm Allen Wrench

Carefully check package contents, if anything is missing or damaged, please contact support@ismoosat.com for help.


2 Product Overview

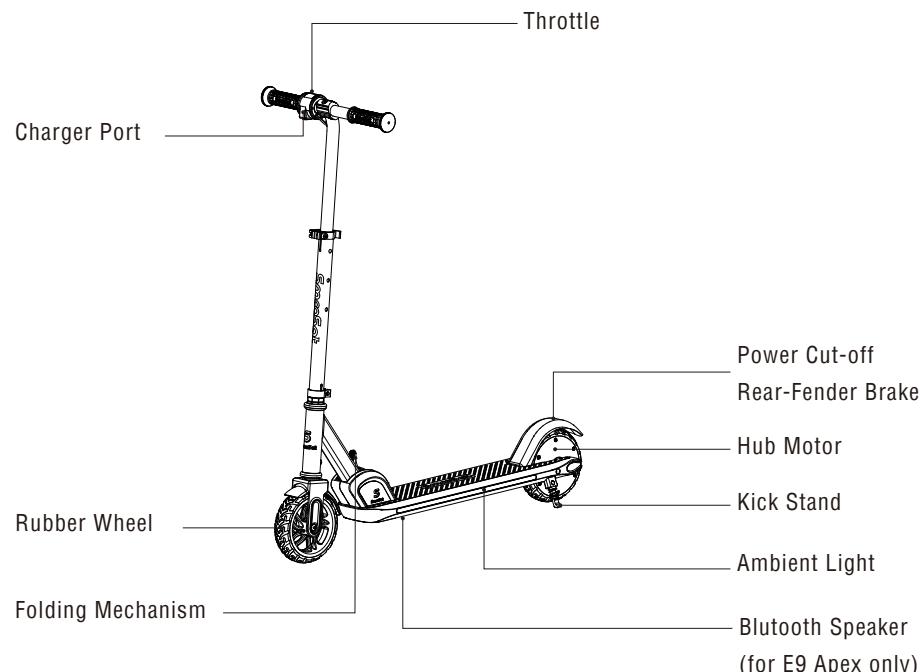

Throttle Instruction

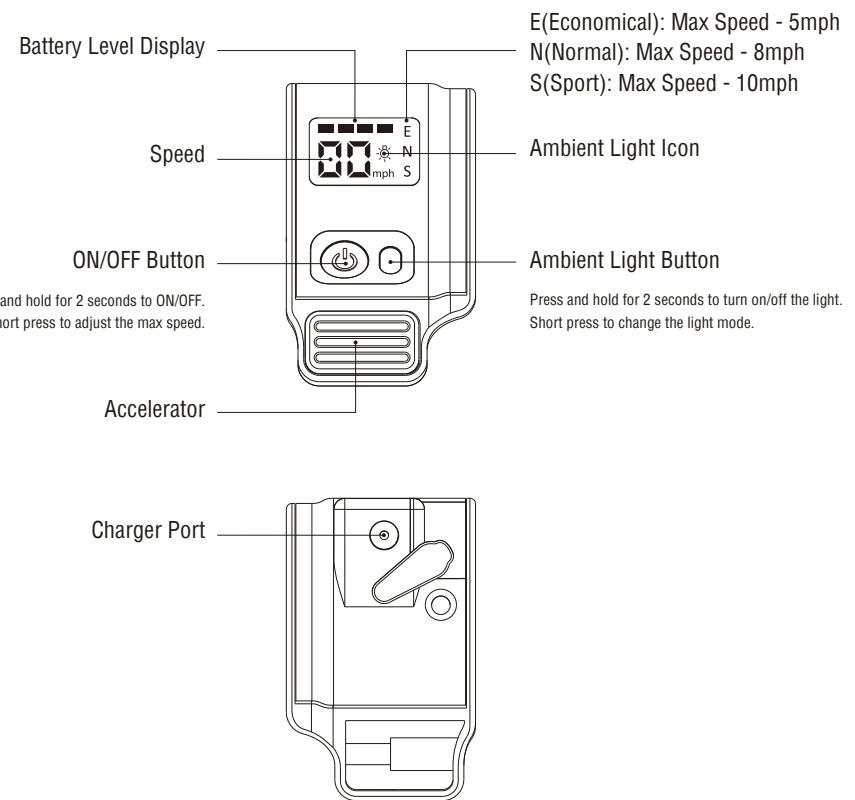


3 Assembly and Set-Up

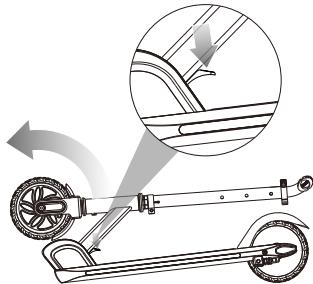

1. To release the folding mechanism, place the scooter on the ground, push the release lever down to unfold the scooter.




3. Insert the handlebar with the throttle facing the rider.

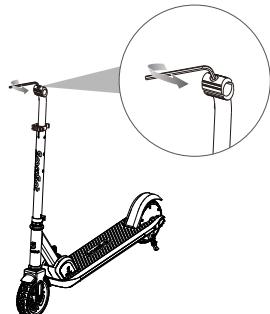

2. Using the 5 mm Allen Wrench loosen the handlebar clamp.



4. Using the 5mm Allen Wrench tighten the handlebar clamp.

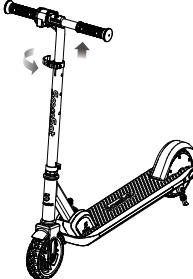


5. To adjust the height of the handlebar, open the quick-release lever and slide the T-bar to the desired position and resecure the quick-release lever to lock into place.



6. The tension of the quick-release lever can be adjusted by manually tightening or loosening the Allen bolt. Be careful not to overtighten. You should always be able to open and close the quick-release lever by hand and the T-bar should slide freely when the quick-release is open.

4 Charge Your Scooter

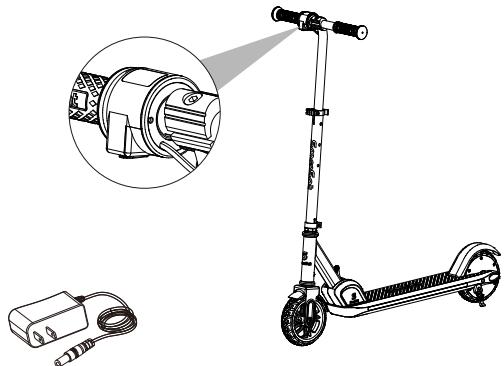




NOTE:

Plug the charger plug into wall outlet, the light on the charger should be green.

The light on the charger should turn red during charging.

When the charging is completed the light will turn green again.

The battery will be fully charged after 5 hours.

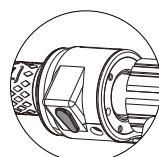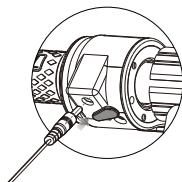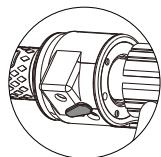

1. Lift the rubber plug.

2. Plug the charger into the charging port.


3. When charging is completed, put back the rubber plug.

5 Pairing your Bluetooth® Device (for E9 Apex Only)




To pair with a Bluetooth® device
Follow these steps:

1. Make sure both the Bluetooth® function in your device and the scooter are turned on.
2. On your device, locate the Bluetooth® device list. Select "SmooSat E9 Apex" from the list .

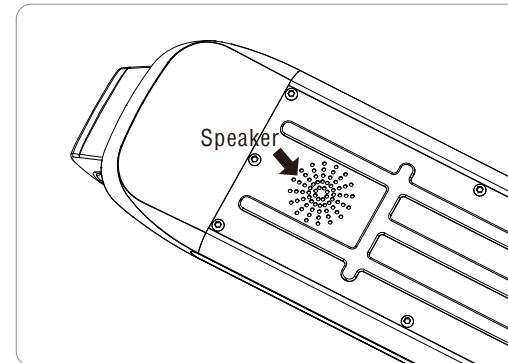


6 How to Ride and Stop

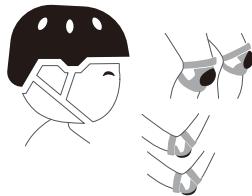


Always wear proper protective equipment, such as an approved safety helmet (with chin strap securely buckled), elbow pads, and kneepads. A helmet may be legally required by local law or regulation in your area. A long-sleeved shirt, and long pants are recommended. Always wear shoes and keep shoelaces tied and out of the way of the wheels and motor. Never ride barefooted or in sandals.



1. Press the power button and hold for 2 seconds to turn on the scooter. Check the power indicator.

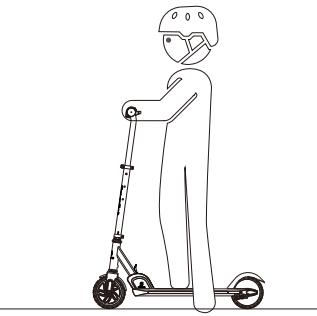


2. Step on the deck with one foot, and slowly kick off the other on the ground.

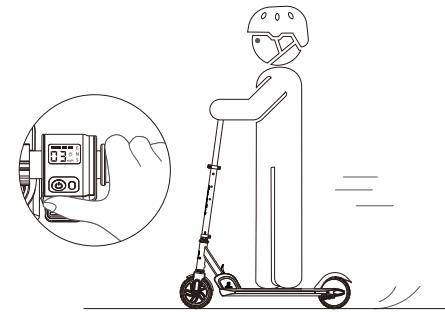

3. When the scooter starts to coast, put both feet on the deck and push down the accelerator.

NOTE: Do not push down the accelerator before the scooter reaches the speed of 3 mph, the scooter must be traveling at least 3 mph before the motor will engage.

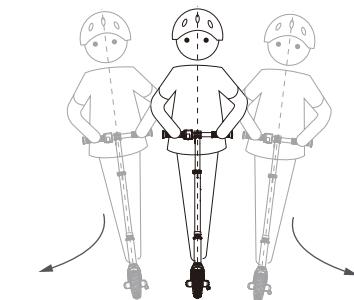

4. Tilt your body to the steering direction as you turn, and slowly turn the handlebar.



5. For controlled stops, release the throttle and apply the brake by putting pressure on the rear-fender brake.