



2x5" Portable Speaker



Model # IQ-2055

Instruction Manual
Instrucciones en español incluidas



WARNING!

**Please read this manual carefully before using the product.
Keep it in a safe place for future reference.**

- a.** There are high voltage zones inside this unit that can cause injuries. Please do not open the unit. In case of technical failure, please contact the authorized service center.
- b.** Never place the unit in the rain or in moist zones so as to avoid a fire or an electric shock.
- c.** This device uses a laser system. To prevent direct exposure to the laser beam, please do not open the unit or stare at the laser beam.
- d.** If technical maintenance is required, please contact the authorized service center.
- e.** If the supply cord is damaged in any way, please have it replaced by the manufacturer, supplier or a qualified electrician.

CAUTION

- a.** Do not place the unit on an unstable surface as it may fall and break or cause damage to people or pets.
- b.** Disconnect the unit from the mains before cleaning it. Do not use cleaning liquids or sprays. Use only a soft, damp cloth.
- c.** To avoid possible damage to the equipment, please unplug it during storms or when it will not be used for a long time.
- d.** Do not insert any object into the unit through the ventilation openings as this could cause a short circuit and start a fire. Do not pour liquid on the speaker.

The Speaker is not a toy. Please keep it out of the reach of young children.

Please do not discard this rechargeable device as trash. Consult your local waste collection agency for proper disposal or recycling methods. You may also contact *Call2Recycle" at 877-273-2925 or online at [*call2recycle.org*](http://call2recycle.org) for a battery recycling drop off location near you.



BATTERY CAUTION: Do not disassemble, short circuit, or expose to fire or high temperature. Properly connect specified devices. Recycle battery according to local, state and national regulations.


It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for listening to music.



INSTRUCTIONS FOR USE AND CARE

Safety Information

Please read this manual carefully before using the product. keep it in a safe place for future reference.

- a. There are high voltage zones inside this unit that can cause injuries. Please do not open the unit. In case of technical failure, please contact the authorized service centre.
- b. Never place the unit in the rain or in moist zones so as to avoid a fire or an electric shock.
- d. If technical maintenance is required, please contact the authorized service centre.
- e. If the supply cord is damaged in any way, please have it replaced by the manufacturer, supplier or a qualified electrician.


Caution

- a. Do not place the unit on an unstable surface as it may fall and break or cause damage to people or pets.
- b. Disconnect the unit from the mains before cleaning it. Do not use cleaning liquids or sprays. Use only a soft, damp cloth.
- c. To avoid possible damage to the equipment, please unplug it during storms or when it will not be used for a long time.
- d. Do not insert any object into the unit through the ventilation openings as this could cause a short circuit and start a fire. Do not pour liquid on the speaker.

Includes

- Speaker
- User Manual
- Remote Control
- Adapter
- Carrying Strap

INTRODUCTION-TOP CONTROLLING PANEL

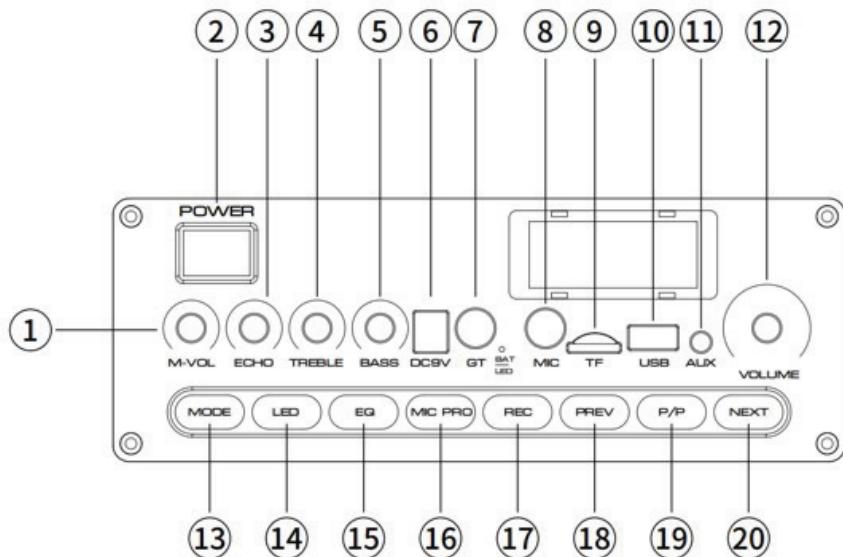

1. Microphone Volume
2. Power switch ON/OFF.
3. ECHO
4. TREBLE
5. BASS
6. Charging DC9V
7. Guitar input
8. Microphone input
9. Micro SD
10. UBS Input
11. Aux-Input
12. Master Volume
13. Modes Aux-Input/USB/Micr-SD/FM Radio/Wireless
14. LED 7 LED Light modes, short press to change. Long press off/on
15. EQ : 5 styles EQ Press to changed: Pop, Rock, Jazz, Classical, Flat
16. MIC PRIORITY Press to enable/disable over music function.
17. Record function Record USB/Micro-SD card
18. Previous song : Short press to get previous song/channel
19. Pause&Play :Under USB/Micro-SD/Wireless, Pause and Play
20. Next song: Short press to get next song/channel

REMOTE CONTROL

1. Mute

Mute in any mode

2. Record Function

Under USB/Micro-SD card mode, press "REC" button to record

3. Previous Song/Station

USB/Micro-SD mode - previous song.
Wireless connection mode- previous song.
FM mode- previous station.

4. Pause&Play

USB/Micro-SD mode - play or pause.
Wireless connection mode- play or pause.

5. Repeat function

6. Number Buttons

In USB/Micro-SD mode, press number to select a specific track.

7. Mode

Short press to change mode to WIRELESS/LINE IN/USB
MICRO-SD/FM

8. Record Play

Play the recording

9./11.Main Volume


Rise and lower volume +/-

10.Next Song/Station

USB/Micro-SD card mode - next song.
Wireless connection mode- next song.
FM mode- next station.

12.EQ Equalizer

EQ modes: Pop, Rock, Jazz, Classical or Flat.

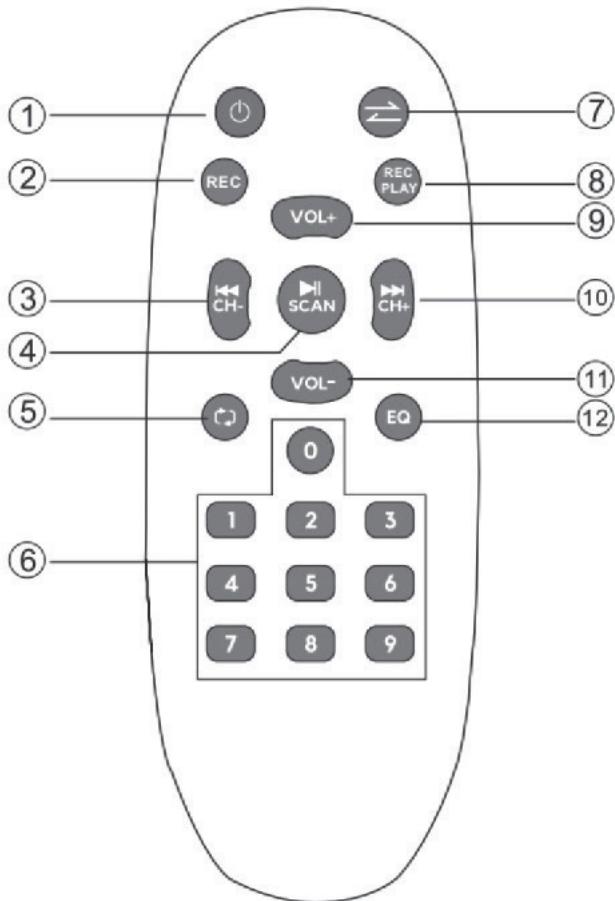

TWS CONNECTION:

1. Using TWS: Put booth speaker in Wireless mode
Make sure none of them connect to any device.
"BLUE" should blink on both of the speakers.
2. Press the "PLAY/PAUSE" button for 3 seconds on the "slave" speaker to turn on the TWS function display will show "BLUE" not blinking.
3. Go to your Wireless device, select "IQ-2055
TWS should be connected successfully.
4. Under TWS mode, you can adjust the main volume/play/pause/next song/ previous song to control the 2 speakers at the same time.
5. To disconnect Press the "PLAY/PAUSE" button

WIRELESS

Press MODE on the unit or the remote control until Wireless is selected.

1. Have cell phone close to unit.
2. Activate the Wireless features on your cell phone so that the cell phone starts to search for the Wireless device.
3. Select the correct model No. from the device found by the cell phone.
4. Shortly press PLAY/PAUSE button to play or pause music. Short press “  ” or “  ” key to select the previous or next track.

LINE IN MODE:

Press MODE button on the unit or the remote control until LINE is Selected. Play the music of the device connected to the LINE input.

USB Mode:

1. After start up, press MODE to select “USB” and insert the USB device. The unit will automatically read and play the music in the USB device.
2. Press “  ” key shortly to pause or play.
3. Shortly press “  ” key to the previous song.
4. Shortly press “  ” key to the next song.

Recording Function

1. When unit is working in USB/Micro-SD mode, plug in the wired microphone, then short press button REC to begin recording.
2. Long press button REC for 2 seconds to stop recording and replay the recorded file repeatedly.
3. Then long press button REC for 2 seconds again to delete the recorded file and resume USB/Micro-SD playing.

LIMITED WARRANTY

World & Victory Corp., warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect and replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described.

This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor at any product the exterior of which has been damaged or defaced which design or construction. The limited warranty described herein is in addition to an applicable law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of World & Victory Corp.

The warranties described herein shall be the sole and exclusive Warranties granted by World & Victory Corp. and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of World & Victory Corp. to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liabilities and responsibilities of World & Victory Corp. be liable or in any way responsible, for any incidental or consequential damages, so the above exclusion may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

Manufactured By:
World & Victory Corp.
10 Commercial Ave. Fairview, NJ 07022

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation. Federal Communications Commission (FCC) Statement This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV/technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard. FOR HOME OR OFFICE USE.

Warning: This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

The device has been evaluated to meet general RF exposure requirement.

© 2022 World & Victory Corp. All rights reserved.