

# WiFi Print

## Camera Instructions

Please read this instruction manual carefully before using the product. It contains important information, please keep it in a safe place for use.

**WiFi Print Camera Instructions**

Please read this instruction manual carefully before using the product. It contains important information, please keep it in a safe place for use.

## Content

1. Instruction Before Use	1
2. Function Keys	2/3
3. WiFi Operating Guidance	4
4. Replace the Printing Paper	5
5. TF Card Installation	6
6. Charging Instruction	7
7. Battery & Safety	7
8. Settery Details	8
①. Language Setting	8
②. Printing Density	9
③. Cyclic Record	9
④. Sound	10
⑤. Video Quality	10
⑥. Record Audio	11
⑦. Image Quality	11
⑧. Continuous Shooting	12
⑨. Camera Timer	12
⑩. Format	13
⑪. Recovery Setting	13
⑫. Auto Power-off	14
9. Specification	15
10. Q&A	16/17

## 1. Instruction Before Use

①. Please tear off the protective film of the lens before.

②. The print needs taking a while to warm up, so the first pictures are blurry.

## 2. Function Keys

①. Up Key  
②. Confirm / Delete Key  
③. Down Key  
④. Back Key / Main Menu  
⑤. Photo Sticker: Press this button enter the Sticker Mode and press up/down key to choose different sticker  
⑥. Power on/off: Long press for 3 seconds to turn on/off  
⑦. Front Camera  
⑧. Display  
⑨. Photo / Video / Camera Switch / Video Play Key: Press this button for photo & video; Long press it to switch the front / rear camera; Choose a video from album page and press this button to play the video  
⑩. Charging Port  
⑪. Memory Card Jack  
⑫. Rear Camera  
⑬. Print Paper Compartment

## 3. WiFi Operating Guidance

Notice: Tear the photo paper in the zigzag direction.

Step 1: Scan the QR code to download APP;

Step 2: Select the corresponding APP to download: **FR\_PRINT:** (iOS Android)

## 4. Replace the Printing Paper

Step 1: Hold the two buckles and outwards to open the cover of compartment;

Step 2: Load the printing paper as shown.

## 5. TF Card Installation

①. Hold the TF card slot in the correct direction until the TF card is fixed in the card slot. When removing the TF card, please gently press down the TF card. After the TF card is ejected, you can take it out. The TF card must be a high-speed card above C10 to be used. Please do not plug or unplug the TF card while the machine is working to avoid damage to the machine and memory card.  
②. It takes 70-130 minutes to fully charge the battery.

## 6. Charging Instruction

①. The indicator light is always on during charging, and the full indicator light is off.  
②. When there is input over-voltage, output under-voltage and over-voltage, output short circuit or chip over-temperature, and the battery is not connected, or unplug the TF card while the machine is working to avoid damage to the machine and memory card.  
③. Please pay attention to the direction in which the TF card is inserted. If it is inserted upside down, it may damage the machine, TF card and card slot.  
④. When you insert the TF card into the machine, the machine will set the TF card as the default storage device. The data on the original TF card may not be readable. Please make a data backup first.  
⑤. The power terminals must not be short-circuited. Do not connect more than the recommended quantity or the recommended adapter specification to the power supply with a voltage greater than the recommended voltage 5V-2A.  
⑥. During the use of the toy, check whether the wire plug and other parts are damaged regularly. If the damage is found, stop using it until the repair is complete.  
⑦. When the machine is not used for a long time, please charge the battery fully before turning off the power switch.

## 7. Battery & Safety

①. This machine uses a built-in 7.4V/800mAh polymer lithium battery, which cannot be removed or replaced. If it is damaged, contact the seller for repair.  
②. The battery must be charged under adult supervision. When the battery is charging, the toy switch should be turned off.  
③. The power terminals must not be short-circuited. Do not connect more than the recommended quantity or the recommended adapter specification to the power supply with a voltage greater than the recommended voltage 5V-2A.  
④. During the use of the toy, check whether the wire plug and other parts are damaged regularly. If the damage is found, stop using it until the repair is complete.  
⑤. When the machine is not used for a long time, please charge the battery fully before turning off the power switch.

## 8. Setting Details

Step 1. Press the set button to enter the menu page;  
Step 2. Press the up/down button to select the corresponding requirement.

## 1. Language Settings

## 2. WiFi Operating Guidance

## 3. WiFi Operating Guidance

## 4. Replace the Printing Paper

## 5. TF Card Installation

## 6. Charging Instruction

## 7. Battery & Safety

## 8. Setting Details

## 1. Language Settings

## 2. WiFi Operating Guidance

## 3. WiFi Operating Guidance

## 4. Replace the Printing Paper

## 5. TF Card Installation

## 6. Charging Instruction

## 7. Battery & Safety

## 8. Setting Details

尺寸: 90\*68mm

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The devices has been evaluated to meet general RF exposure requirement , the device can be used in portable exposure condition without restriction