

80x100 mm

User Manual

Thank you for choosing our 4G PTT device.
Please read this manual carefully before using the product and keep it properly.

Safety and Warning

Attention! It is important to recognize and understand the general risks in use of this product.

- This product must be repaired only by professionals. Without prior authorization this product shall not be dismantled.
- Do not use this product or recharge its battery in environment exposed to any explosive material (e.g. gas, dust or vapor).
- Shut this product down while fueling or at gas station.
- Do not change or alter this product for any reason.
- Do not expose this product to direct sun for a long time nor place it near any heat source.
- Do not place this product in location exposed to excessive dust, humidity or splash of water, nor on any unstable surface.

Products Overview



Unpacking and check

Package Contents:



Function Overview

● Initial Startup

Ensure that the battery has been mounted properly.

Startup: press and hold the power key till a startup picture appears on the screen. Some SIM cards are furnished with protection with PIN code. Where it is required, enter your PIN code. The initial PIN code is usually "1234".

● Screen Unlocking

Short press power key to lock the screen, and press it again to unlock the screen; slide unlock icon up to unlock the screen and make it standby.

● System Message Bar

To display system message bar: hold the status bar at the top of screen with a finger, and touch and drag the drop-down box down. The system message bar displays applications currently operating. You can have quick access to any application by clicking on it from the operation list. Tips: No call is available when flight mode is activated. The system message bar also displays any notice (short message received or call missed) in addition to applications currently operating.

● Custom Settings

Long press a blank position on main screen to access custom setting page, where you can set wallpaper, add gadget or have access to system settings.

● Move or delete icon

Long press the menu or gadget icon on screen to move or delete related icon.

● Recover to factory settings

Choose "Backup & Reset" from the menu to recover the system to factory settings.

Warning: Recovering the system to factory settings will reset this product to initial status and clear any system data and settings, including applications downloaded and application data.

Function Overview

● POC Software System

The POC trunking dispatching system is a software system integrating individual voice call, group call and short message services. Android-based app is a client-side application installed in Android-base system, which will be used for sign-up with server, individual voice call, group call and short message service, video uploading/playback/call.

PTT Key

PTT (Press to Talk) key is used to toggle between voice transmission and reception.

● Photo Gallery

Browse any pictures, photos and video files stored in this product, and make quick shots by click on Shoot icon.

● File Management

View and manage any files stored in internal or external storage in this product.

● Camera

User can take photos and record video clips, and have access to settings such as exposure, color effects, framing modes, face recognition and continuous capture based on your preference or environment conditions to obtain optimum picture effect; and view any photo taken or video recorded.

● Message

Click on it to access a list of messages received, and then edit, send or delete any of them.

● Dialing

Use a menu at the bottom of the screen to quickly access call history, digital dial scale and call settings.

● Contact List

You can use it to make calls, send e-mails or short message to your friends and workmates. You can add new contact to the list, or synchronize it to the data in your PC-based application.

● Calendar

It is used to access your matters and events on calendar, or view date or dates on it by day, week or month, which will be displayed on a weekly or monthly basis to facilitate your access to your appointment and addition of new matter.

● Setting

Enter the menu to make custom settings to this product, including wireless network, scenario mode, display, storage, battery, application, position information, security, language and input method, backup & reset, account management, date and time, supplement function, printing and system information.

Instructions for Use of Battery

- Do not throw the battery into fire.

- Do not keep the battery near or in any heater, microwave oven, kitchen article in high temperature, or HP container, or otherwise the battery may leak or even explode.

- Do not refrigerate the battery, or otherwise it may deform, or result in short circuiting due to condensation.

- Avoid the battery from contact with any metal object, or otherwise it may be in short circuit or damaged permanently.

- Do not keep this product near magnetic field, or otherwise it may discharge.

- Keep the battery in well-ventilated environment, and do not cover it with quilt or clothing.

- Do not use a damaged or leaked battery; for disposal of it, contact your local authorized service center.

- Dispose the battery in compliance with local laws and regulations.

- Do not keep this product or battery in environment at extremely high temperature, such as car in summer, or otherwise the equipment screen may fail or the battery may explode.

- Do not expose this product or battery to direct sun for a long time, such as dashboard in a car.

- Store the battery at a ambient temperature between 0 ℃ ~ 45 ℃.

- Biting or sucking the battery may damage it or even cause explosion or fire.

- Child or animal may stifle by swallowing small-size part.

- Do not impose pressure on the battery.

- Do not use this product without the battery mounted properly, or the battery may fall down and thereby cause damage or malfunction.

- Shut this product down before removing the battery. Removal of battery with this product started may cause failure in the product.

- In case of damage in the battery, such as deformation, immediately stop using it and replace it. Use of a damaged battery may cause overheating, fire or even explosion, and thereby personal injury.

In case of smell, smoke or leakage from or noise in this product or battery, immediately stop using it and contact our after-market service for repair, or otherwise it may cause fire or explosion.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SAR tests are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. Before a new device is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, tests for each device are performed in positions and locations as required by the FCC. For body worn operation, this device has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 10mm from the body. Non-compliance with the above restrictions may result in violation of RF exposure guidelines. For face up operation, should hold the device 10 mm from your face and speak in a normal voice, with the antenna pointed up and away.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

对讲机 使用说明书

使用产品前请仔细阅读本使用说明书，并请妥善保管。

使用前须知：

- 维修仅可由专业技术人员进行，请勿自行拆装
- 请勿在易爆环境（如煤气、尘埃、蒸汽等）下使用对讲机或对电池充电
- 在加油或停车于加油站时，请关闭对讲机
- 不论有任何理由都不可改装或调整本机
- 请勿让对讲机受到长时间的阳光直射，也不要将它放在加热器具附近
- 请勿将对讲机放在极度多尘、潮湿及水溅之处，也不要将它放在不平稳的表面上

安全性：

使用者对使用对讲机的一般危险性的了解和认识是很重要的。

开箱和装置检查：

请小心从包装箱中取出对讲机，我们建议您在废弃包装材料之前确认一下箱内有无以下列出的物品。若有任何物品在搬运中丢失或损坏，请立即向送货人提交索赔书。

随带的附件：



基本功能

● 首次开机

确保电池已安装好。开机：按住挂机键按钮，直至显示屏出现开机的画面。某些 SIM 卡会有 PIN 码保护。如果有输入 PIN 码提示，输入你的 PIN 码。PIN 码的初始密码一般为 1234。

● 屏幕解锁

短按挂机键锁定屏幕，再次短按电挂机键唤醒屏幕，向上方向滑动解锁图标，屏幕解锁进入待机界面。

● 系统提示栏

打开提示栏的方法：用手指按住屏幕顶端的状态栏，拽住弹出的下拉框向下拖动，即可打开提示栏。系统提示栏显示当前开启的应用程序，点击正在运行的列表栏，可快速切换到相对应的应用程序。友情提示：开启飞行模式后，无法拨打电话。此外，系统提示栏还会显示系统当前的通知（如未读短信、未接电话等），以及正在运行的应用程序。

● 个性化设置

在主屏幕的空白地方长按可进入个性化设置界面。在个性化设置界面，可以设置壁纸，添加小部件，以及进行系统设置。

● 图标的移动删除

长按屏幕中的菜单或小部件图标，可进行相应图标的移动或删除操作。

● 恢复出厂设置

在设置菜单中选择“备份和重置”可进行恢复出厂设置。警告：恢复出厂设置会将手机重置为其初始出厂状态，即 清除系统、应用程序数据及设置，还包括下载的应用程序。

功能介绍

● 视频

可以观看录制或下载到对讲机中的视频文件，以及对视频文件进行修改、分享等操作。

● 图库

可以浏览查看对讲机中存储的图片、照片、视频文件，也可点击拍照图标快速进入拍照界面。

● 文件管理

可对存储在手机本地或存储卡上的文件进行查看和管理。

● 相机

拍照、录像，可对相机进行诸如曝光、色彩效果、取景模式、人脸识别、连拍等多种设置，根据个人喜好或拍摄环境等进行相关设置，已达最佳拍摄效果，还可以查看拍摄的照片或录制的录像。

● 信息

点击进入信息界面，将显示接收到的信息列表，可以进行编辑、发送、删除信息等操作。

● 拨号

拨打电话，屏幕下方的菜单选项可让您快速访问通话记录、数字拨号键盘、通话设置。

● 集群调度系统

集群调度系统是集语音单呼、组呼、短消息等多种业务于一体的软件系统。集群调度系统安卓手机终端是该系统在 android 通用手机终端上的客户端软件，通过本软件，可以实现注册服务器、语音单呼、集群对讲、短消息、视频上传、视频查看、视频呼叫等功能

PTT 按键

1. PTT（按一讲）键用于通信机通话发送和收话状态的切换开关。
2. PTT（松开）键当通信机在接收状态时，按住此键，可以监听工作信道上的情况。

呼叫

按住【PTT】键，对着通信机前部的扬声器一话筒开始讲话。在按住【PTT】键期间，“发射中”图标一直为发射状态，并且自动录音功能指示灯会亮起。释放【PTT】键，则恢复到接收状态。

● 计算器

可进行简单四则运算，以及多种数学运算。

● 联系人

可让您轻松地给朋友和同事打电话，发送电子邮件或发短信。您可以直接在手机上添加联系人，或者从电脑上的应用程序同步通讯录。

● 日历

可让您随时访问您的日历和事件。您可以分别查看日历，也可以同时查看若干个日历。进入顶部选项是按日、周、月方式查看，开启以周（月）查看，显示的日历将以周（月）的方式呈现，更方便您查看日程表和新增事项。

● 设置

进入菜单根据需要对对讲机进行个性化设置。包括无线和网络、情景模式、显示、存储、电池、应用、位置信息、安全、语音和输入法、备份和重置、添加账户、日期和时间、辅助功能、打印、关于手机等。

电池使用说明

- 请勿将电池掷于火中。
- 请勿在热水器、微波炉、炙热的厨具、高压容器附近或内部存放电池，否则可能会导致电池泄漏，甚至发生爆炸。
- 电池不能放在冷冻室冷冻。冷冻后融化的过程当中电池外壳可能会变形，由于温差，还形成露水，可能造成短路现象。
- 防止电池接触金属物体，否则可能会导致电池正负极连接，致使电池暂时或永久损坏。

- 请勿将设备存放在磁场附近。当暴露于磁场时，电池可能放电。
- 请把电池放在足够通风的环境下，切勿在电池上覆盖被子、床单等。
- 请勿使用已损坏或泄漏的电池，如欲安全处置电池，请联系最近的授权服务中心。
- 处理废旧电池或设备时，请遵守当地各项相关法规。
- 请勿在温度极高的区域存放设备或电池，例如夏季的汽车内，否则可能会导致设备屏幕故障，或导致电池爆炸。
- 请勿将设备或电池长时间暴露在阳光直射环境下，如放在汽车仪表板上。
- 在 0 ℃ 至 45 ℃ 之间的环境温度下存放电池。
- 咬或吸吮可能会造成电池损坏，严重者甚至导致爆炸或火灾。
- 儿童或动物会因吞咽小零件而窒息。
- 请勿在电池外部施加压力。
- 请勿在电池盖取下的情况使用设备，否则电池可能会从设备掉落，从而造成损坏或故障。
- 取下电池前请关闭设备。如果在设备开启的情况下取下电池，可能会导致设备发生故障。
- 如果电池损坏，例如有凹痕，建议立即停止使用，更换其它的原装电池。如果使用损坏的电池，可能会出现过热、火灾甚至爆炸现象，对人体造成伤害。
- 若您注意到设备或电池有异味或异响，或者看到设备或电池冒烟或泄漏，请立即停止使用并联系售后进行维修，否则可能会导致火灾或爆炸。