

WiFi Extender

WISP/Repeater Mode Quick Installation Guide

LED Explanation





Button Explanation

WPS Button: WPS connection
Reset: Reset Button: With the extender powered on, Press the Reset button for 10 second. The extender will reboot.

1


Method TWO Using a Web Browser

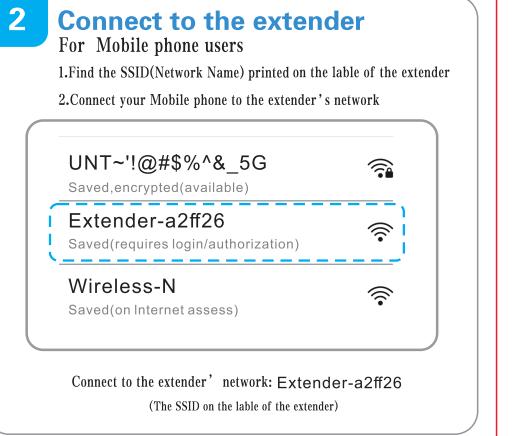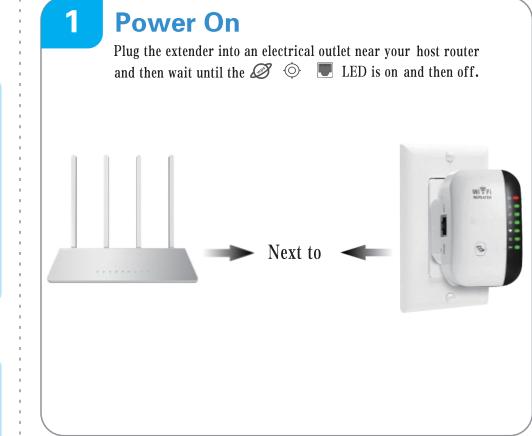


2

3 Mode selection

Select Repeater mode in the menu bar

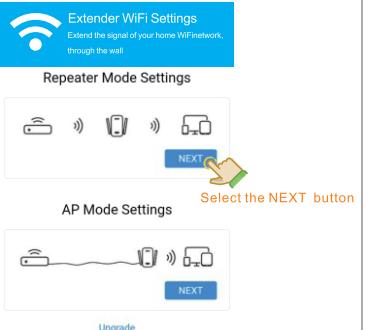


4 Select host network

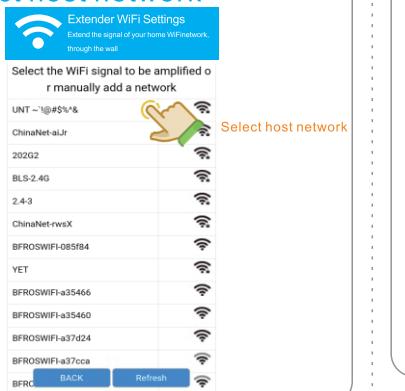

4

5 Configure

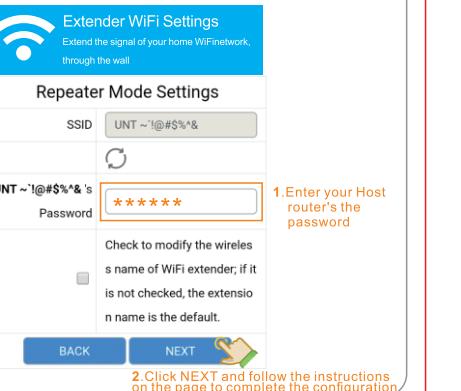

5

Frequently Asked Questions (FAQ)

Q1. How do I restore the extender to its factory default settings?
While the extender is powered on, press and hold the Reset button until 5s.

Q2. What should I do if the LED indicator does not light up after setting the Repeater mode?
You may have entered the incorrect Wi-Fi password of your host network during the configuration. Please reset the extender and go through the configuration again.

6

6 Relocate

1. Plug the extender into an electrical outlet between your router (Host Network) and the Wi-Fi "dead" zone.

The location you choose must be within the range of your existing host network.

2. Wait until the LED is lit and solid Green. If not, relocate it closer to the router to achieve a good (or better) signal quality.



Enjoy!
Extended Network Names: Host Router's network name with _EXT at the end, but may have different SSIDs (network names) if you have customized them during the configuration.
Extended networks Password: Share the same passwords as those of your host networks

Q2. What should I do if the LED indicator does not light up after setting the Repeater mode?
You may have entered the incorrect Wi-Fi password of your host network during the configuration. Please reset the extender and go through the configuration again.

7


8

9

WiFi Extender

AP Mode Quick Installation Guide

LED Explanation

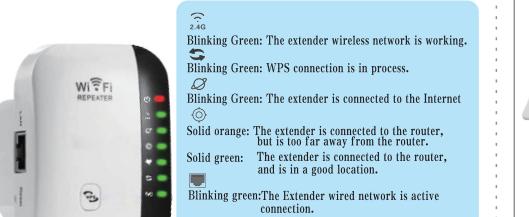


Button Explanation

WPS Button: WPS connection
Reset: Reset Button: With the extender powered on, Press the Reset button for 10 second. The extender will reboot.

10

1 Power On

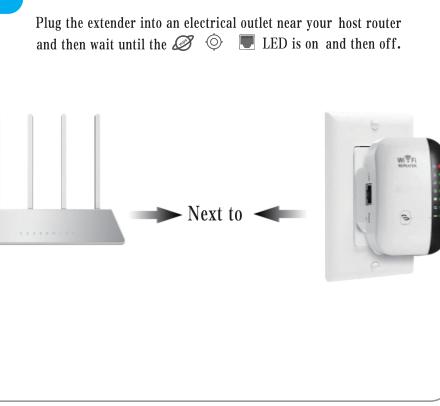


11

2 Connect to the extender

12

3 Mode selection

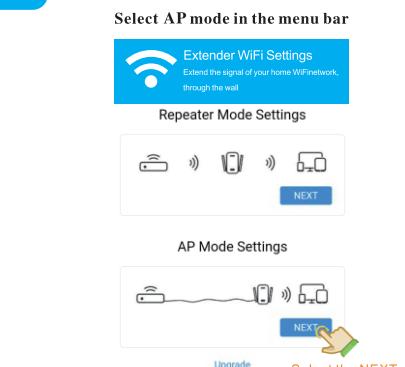


13

Method ONE Using WPS (Wi-Fi Protected Setup)


Using WPS is an easier way to extend your host network. You are recommended to use this method if your host router has the WPS button. The button might look like one of these: If not, please refer to Method TWO.

1 Power On

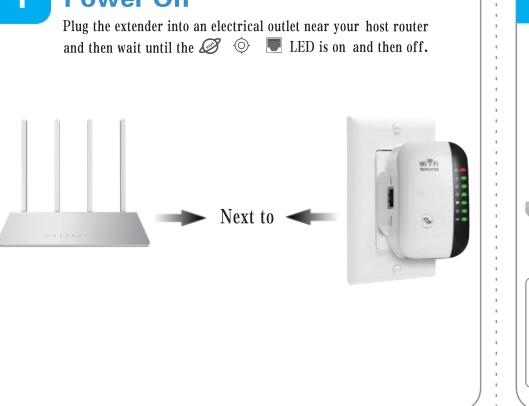


16

2 Connect

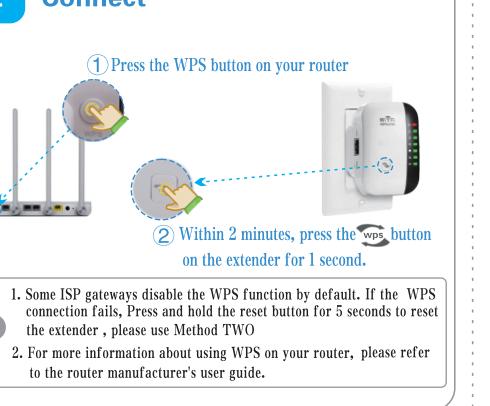

17


3 Relocate

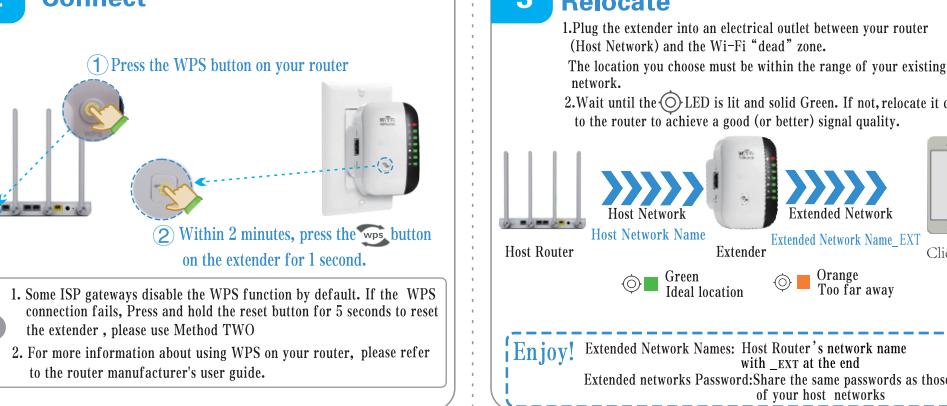

18


2 Connect to the extender

For Mobile phone users

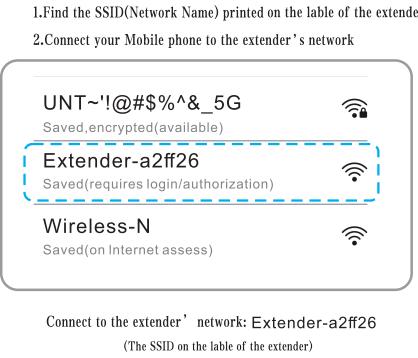


12

5 Connect the Hardware

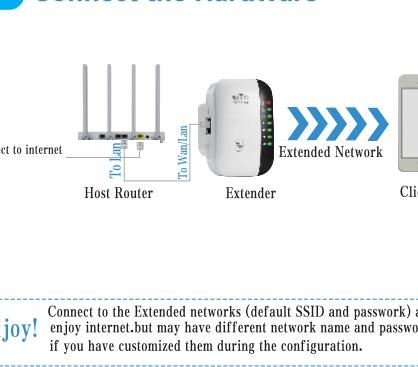

15

6 Enjoy!

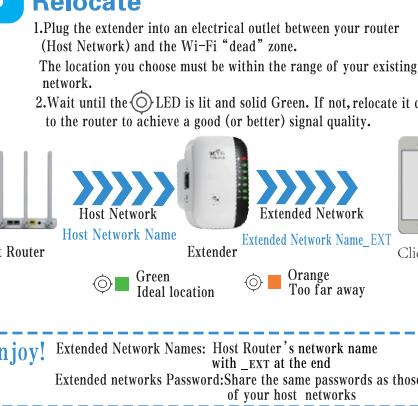

18

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.