


# Quick installation guide

Model: U19

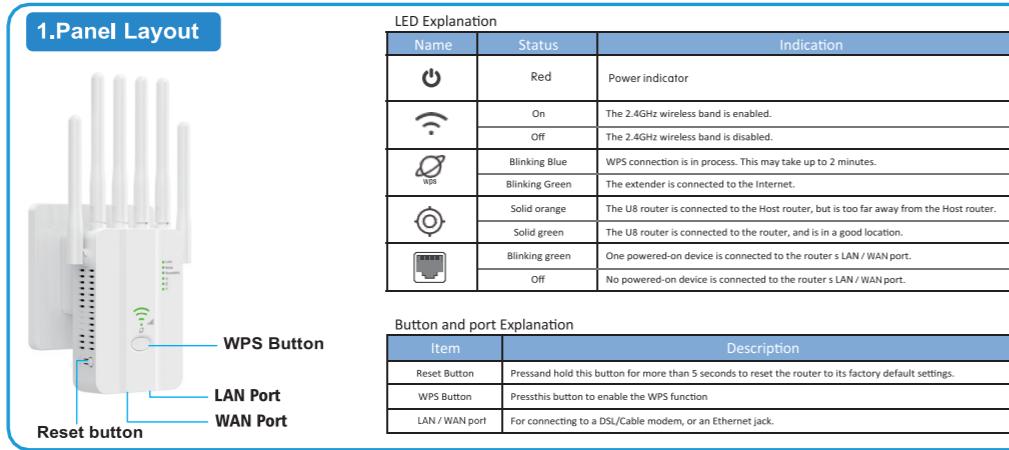


## WiFi Repeater mode

In this mode, the router boosts the existing wireless coverage in your home.

### 1 Connect Your Router

Plug the extender into an electrical outlet near your host router, and then wait until the LED is on and then off.

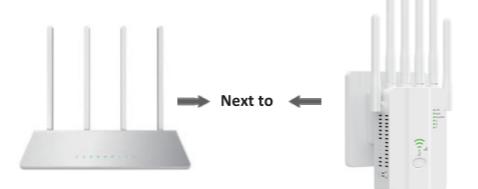


### 2 Configure repeater mode

#### Method ONE: Using WPS (Wi-Fi Protected Setup)

Using WPS is an easier way to extend your host network. You are recommended to use this method if your host router has the WPS button. The button might look like one of these , if not, please refer to [Method Two](#).


#### Connect

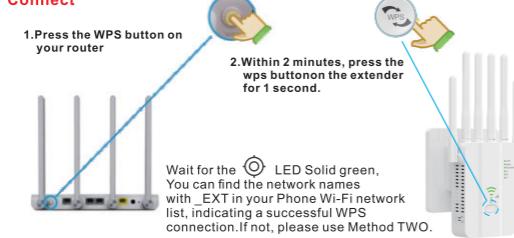

#### Relocate

1. Plug the extender into an electrical outlet between your router (Host Network) and the Wi-Fi "dead" zone. The location you choose must be within the range of your existing host network.

2. Wait until the LED is lit and solid Green. If not, relocate it closer to the router to achieve a good (or better) signal quality.

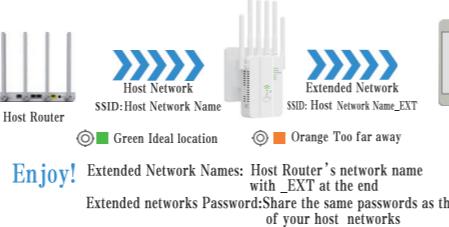

#### Enjoy!

Extended Network Name: Host Router's network name with \_EXT at the end

Extended networks Password: Share the same passwords as those of your host networks


#### Method TWO: Using a Web Browser

For Mobile phone users

1. Connect to the U19 router

1. Find the SSID(Network Name) printed on the label of the U19 router.


2. Connect your Mobile phone to the U19 router's network

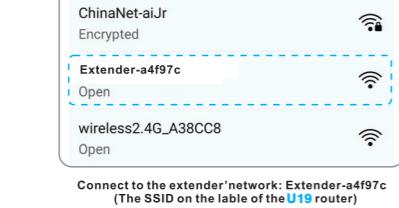

## 3 Mode selection

### Extender WiFi Settings

Select the signal of your home WiFi network, through the wall

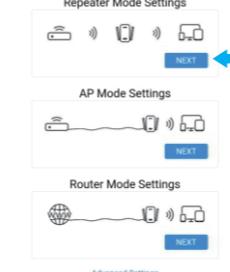


### Extender WiFi Settings

Select the WiFi signal to be amplified or manually add a network



### Extender WiFi Settings

Select the signal of your home WiFi network, through the wall

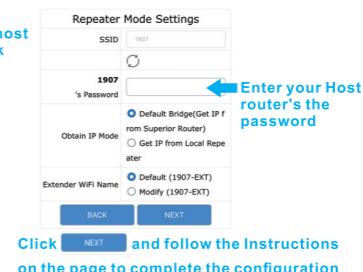

## Relocate

1. Plug the extender into an electrical outlet between your router (Host Network) and the Wi-Fi "dead" zone.

The location you choose must be within the range of your existing host network.

2. Wait until the LED is lit and solid Green. If not, relocate it closer to the router to achieve a good (or better) signal quality.



**Enjoy!** Extended Network Names: Host Router's network name with \_EXT at the end, but may have different SSIDs (network names) if you have customized them during the configuration.

Extended networks Password: Share the same passwords as those of your host networks.

## Frequently Asked Questions(FAQ)

Q1. What can I do if the login window does not appear?

- If the computer is set to a static or fixed IP address, change the setting to obtain an IP address automatically.
- Verify if <http://192.168.11.1> is correctly entered in the web browser.

Q2. Make sure your computer is connected to the Mini Router's network.

Q3. Use another web browser and try again.

Q4. Reboot your router and try again.

Q5. Why set the repeater mode is unsuccessfully?

- You may have typed in the router's wireless password incorrectly, please log in and check the wireless password.
- The Mini router may be out of range, please move it closer to the router.

Q6. Please reset the Mini Router and go through the configuration again.

A. If you need reset the extender. You need press and hold the reset button inside the tiny hole for 10 seconds.

## AP mode

In this mode, the router transforms your existing wired network to a wireless.

### 1. Connect Your Router

For Mobile phone users

1. Find the SSID(Network Name) printed on the label of the U19 router.

2. Connect your Mobile phone to the U19 router's network



Wireless  
Connect wireless by using the SSID (Network Name) is Extender-a4f97c

### 2. Connect to the U19 router

For Mobile phone users

1. Find the SSID(Network Name) printed on the label of the U19 router.

2. Connect your Mobile phone to the U19 router's network



### 3. Mode selection

#### Extender WiFi Settings

Select the signal of your home WiFi network, through the wall

#### Repeater Mode Settings

#### AP Mode Settings

Select AP mode

Click next

### 4. Set wifi password

#### Extender WiFi Settings

Select the signal of your home WiFi network, through the wall

#### AP Mode Settings

#### Router Mode Settings

Either keep the SSID and Password or customize it for the extended

SSID: Extender-a4f97c  
WIFI Password: 88888888

BACK NEXT

## Router mode

### 1. Connect Your Router

If your Internet connection is through a DSL/Cable modem, follow steps 1,2 and 4 to complete the hardware connections.

If your Internet connection is through an Ethernet cable from the wall, follow steps 3 and 4 to complete the hardware connections.



Network cable port  
To LAN/WAN

### 3. Mode selection

#### Extender WiFi Settings

Select the signal of your home WiFi network, through the wall

#### Repeater Mode Settings

#### AP Mode Settings

#### Router Mode Settings

Select Router mode

Click next

### 4. Set up Your Internet Connection

You can modify the settings according to the service information provided by your ISP.

1. Set up Your Internet Connection

You can modify the settings according to the service information provided by your ISP.

2. Connect to the U19 router

For Mobile phone users

1. Find the SSID(Network Name) printed on the label of the U19 router.

2. Connect your Mobile phone to the U19 router's network



3. Mode selection

#### Extender WiFi Settings

Select the signal of your home WiFi network, through the wall

#### Repeater Mode Settings

#### AP Mode Settings

#### Router Mode Settings

Internet Type: Dynamic IP(Auto)

SSID: Extender-a4f97c

WIFI Password: 88888888

BACK NEXT

5. Click Finish to restart the device

Extender WiFi Settings

Select the signal of your home WiFi network, through the wall

Router Mode Settings

Internet Type: Dynamic IP(Auto)

SSID: Extender-a4f97c

WIFI Password: 88888888

BACK FINISH

6. If you choose Static IP enter the information provided by your ISP in the corresponding fields.

7. If you choose PPPoE, enter the username and password provided by your ISP. PPPoE users usually have DSL cable modems.

8. Either keep the SSID and Password or customize it for the extended

SSID: Extender-a4f97c  
WIFI Password: 88888888

BACK NEXT

9. Click **NEXT** and follow the prompts on the page to complete the Router mode configuration

10. Enjoy!

11. Connect to the Extended networks (default SSID and password) and enjoy internet, but may have different network name and password, if you have customized them during the configuration.

## Frequently Asked Questions(FAQ)

Q1. What can I do if the login window does not appear?

- If the computer is set to a static or fixed IP address, change the setting to obtain an IP address automatically.

Q2. Verify if <http://192.168.11.1> is correctly entered in the web browser.

Q3. Make sure your computer is connected to the Mini Router's network.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.