


K710

Please read the instructions carefully before using this product and keep it for future use.

Contents

| | |
|--------------------------|----|
| FUNCTION OVERVIEW..... | 1 |
| SPECIFICATION..... | 1 |
| START..... | 2 |
| HOME SCREEN..... | 2 |
| SETTING BASICS..... | 3 |
| NETWORK CONNECTION..... | 6 |
| APP MANAGEMENT..... | 7 |
| INTERNET NAVIGATION..... | 9 |
| MULTIMEDIA..... | 9 |
| TROUBLESHOOTING..... | 11 |

EN
FUNCTION OVERVIEW

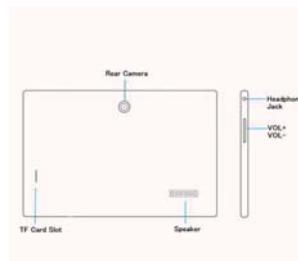

SPECIFICATION

| Size | 7" | Connection | Wi-Fi |
|---------------------|---------------|--------------|---------------------------------|
| Chipset | A133 | CPU | 64-bit Quad-Core Cortex A53 |
| GPU | GE8300 | RAM | 2GB |
| ROM | 16GB | Display | TN/1024*600 |
| Front-facing Camera | 0.3MP | Network | 802.11b/g/n(Wi-Fi),BT4.1 |
| Back Camera | 2MP | Power Supply | DC 5V 2A |
| Battery | 2500mAh | Touch | Multi-touch |
| Operating System | Android 10 Go | Ports | Type C Port / microSD Card Slot |

START

Power on/off

1. Hold down the power button for 2-3 seconds to turn on the tablet. Select the language and follow the start up guide to set up the tablet.
2. Hold down the power button for 2 seconds before releasing it, which will display power off and restart on the screen. Click power off to turn off the tablet.
3. Press and hold the power button for 5 seconds to do a forced shutdown, if it freezes.

Battery

1. A rechargeable Li-ion battery is installed in the tablet.
2. We suggest you drain the battery completely once a month, if you only use your tablet occasionally.
3. DO NOT dispose of tablet in a fire.
4. Charge the device fully each time to increase the battery life.
5. You can charge the tablet, even if the tablet has some power left in it, as the lithium battery does not need to be fully drained to charge.
6. A full charge can be used for an average of 3 hours.

Sleep Mode

Simply press the power button once to switch the tablet to the Sleep Mode when the tablet is ON, press again to wake it up.

Tip:

Go to Settings > Display > Screen timeout to set the time of entering the Sleep Mode.

HOME SCREEN


Icon on the Bottom Menu



1. Volume Down
2. Back
3. Home Screen
4. Recent Activities
5. Volume Up


EN

Wallpapers, Home Settings and Screenshot

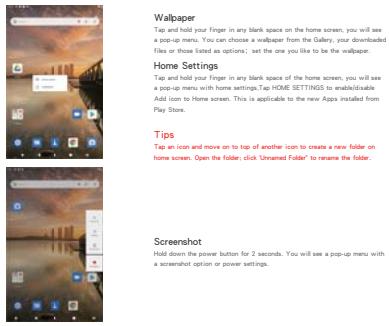

SETTING BASICS

Quick Settings

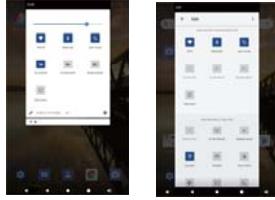

Swipe down from the top of the screen to access Quick Settings.

Tap the icon to change the options in the Quick Settings.

03

More Settings

Swipe down from the top of the screen, then tap the  icon to enter the detailed Setting interface. You can also tap the Settings icon on the Home screen to enter the settings.

**Network & Internet**

- Connect to any working wi-fi
- Enable / disable the Airplane Mode
- Hotspot & tethering

Connected devices

- Turn on / off Bluetooth
- Pair with Bluetooth devices and check the paired devices
- cast device and check the cast device
- Add and check printers

Apps & notifications

- Check the Apps recently opened
- Check all the Apps on the tablet
- Set the App permissions
- Uninstall the third-party Apps
- Adjust App notification settings
- Clear the cache of the Apps

Battery

- Display the remaining battery power as a percentage
- Enable/disable the Battery Saver

EN

Display

- . Adjust the screen brightness
- . Adjust the font size and display size
- . Set a screen saver
- . Change the wallpaper

Sound

- . Set volume levels for media, alarms, and notifications
- . Set preferences of Do Not Disturb
- . Set the tunes for notifications and alarms
- . Turn on/off the sound for screen lock, charging and touch

Storage

- . View and manage your storage space

Privacy & Security & location

- . Set screen lock pattern, e.g. password, PIN, Swipe etc.
- . Enable/disable all the notifications while the screen is locked
- . Turn on/off the location services for specific Apps
- . Set to show/hide the password when input a password

Accounts

- . Add and manage the user accounts on your tablet

Accessibility

- . For vision and hearing impaired users, manage settings for Screen readers.
- . Subtitle, and more

Digital Wellbeing & parental controls

- . Set timers for your APPS
- . Set up parental controls with Google's Family link

Google

- . Set the preferences for Google related services

05

System**• Set Language**

Tap Languages& input> Languages> +add a language. After adding, hold and slide the  to the top to change the language.

• Restore factory setting

Tap Reset options> Erase all data (factory reset) to restore to factory settings.

• Other Settings

Set the date and time
Turn on/off the Backup

About tablet

Check detailed information about the tablet.

NETWORK CONNECTION

Go to Wi-Fi Settings in the Settings interface or directly enter through Quick Settings.

Wi-Fi Connection

1. Tap Net work and Internet and turn on the Wi-Fi , All Wi-Fi connections available will be listed.
2. Select your Wi-Fi, and input the correct password.



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Portable

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Specific Absorption Rate (SAR) information:

This tablet computer meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: tablet computer has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the phone kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the phone. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.