

WENKEY

Thank you for purchasing our product.

For more latest products, parts and accessories,
please visit www.wenkey-vip.com
For any assistance please contact us.

Use the iPhone camera or Google Camera
to scan the QR code above.

User Manual
Wireless Earbuds

Contents

English	01 - 09
Deutsch	10 - 19
Français	20 - 29
Español	30 - 39
Italiano	40 - 49

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates use and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Ultimate Technology (Shenzhen) Co., Ltd
www.wenkey-vip.com | 1support@wenkey-vip.com
 Room 402, 3rd Floor, Creative Culture Center,
 No. 98 Ping'an Road, Shuangmu Section, Pinghu Street,
 Longgang District, Shenzhen, China

CE **FCC** **RoHS** **REACH** **UKCA**

Thank you for purchasing the WENBY E1 True Wireless Earbuds. Please read the user manual carefully and keep it for future reference. If you need any assistance, please contact our support team with your product model number and Amazon order number. Package Contents True Wireless Earbuds Charging Case (USB-A to C Cable) User Manual Quick Start Guide Product Diagram	Specifications <table border="1"> <thead> <tr> <th>Model</th> <th>E1</th> </tr> </thead> <tbody> <tr> <td>Technology</td> <td>BT 5.11, HSP, HFP, A2DP, AVCP, AAC</td> </tr> <tr> <td>Driver (each channel)</td> <td>2 x 10mm (5.28" speaker driver)</td> </tr> <tr> <td>Sound</td> <td>100dB SPL (at 1kHz/mW)</td> </tr> <tr> <td>Frequency Range</td> <td>20Hz ~ 20kHz</td> </tr> <tr> <td>Impedance</td> <td>32 ohm ±15%</td> </tr> <tr> <td>Microphone Type</td> <td>MEMS (microphone chip)</td> </tr> <tr> <td>Microphone Sensitivity</td> <td>-40dB SPL (at 1kHz re 1V/Pa)</td> </tr> <tr> <td>Microphone Frequency Range</td> <td>100Hz ~ 10kHz</td> </tr> <tr> <td>Charging Time</td> <td>2 hours</td> </tr> <tr> <td>Battery Life</td> <td>Up to 20h (5.00mAh)</td> </tr> <tr> <td>Operating Range</td> <td>10m / 33ft</td> </tr> <tr> <td>Weight</td> <td>8g / 0.28oz (pair)</td> </tr> </tbody> </table>	Model	E1	Technology	BT 5.11, HSP, HFP, A2DP, AVCP, AAC	Driver (each channel)	2 x 10mm (5.28" speaker driver)	Sound	100dB SPL (at 1kHz/mW)	Frequency Range	20Hz ~ 20kHz	Impedance	32 ohm ±15%	Microphone Type	MEMS (microphone chip)	Microphone Sensitivity	-40dB SPL (at 1kHz re 1V/Pa)	Microphone Frequency Range	100Hz ~ 10kHz	Charging Time	2 hours	Battery Life	Up to 20h (5.00mAh)	Operating Range	10m / 33ft	Weight	8g / 0.28oz (pair)	Getting Started Charging Fully charge the charging case before use. To charge, connect the case to a USB charger or charging port with the included USB-A to C cable. When the LED battery level indicator light is on, the case is fully charged. Charging status can be checked by the LED indicator light on the charging case every 5 seconds. 3 times. The earbuds should be stored in the case when not in use.	Pairing Starting with the earbuds in the case: 1. Take both earbuds out of the case and wait for the earbuds to turn on automatically and connect with each other within 5 seconds. 2. Turn on the pairing function on the device you want to pair with the earbuds. 3. Turn on the LED of available devices, find and select "WENBY E1". 4. It is a 10-second time required for pairing, enter "0000". 5. Open the lid again, both earbuds will turn on and enter pairing mode. Repeat the After Pairing Once the earbuds are successfully paired with your device, they can be switched on and off as follows: • Open the lid of the case and they will turn on automatically and connect with each other within 5 seconds. • Close the lid of the case and close the lid. The lid will begin the charging process. Using the Left/Right Earbud Only Starting with the earbuds in the case: 1. Take the left/right earbud out of the case and close the lid again. 2. Turn on the pairing function on the device you want to pair with the earbuds. 3. Turn on the LED of available devices, find and select "WENBY E1".	Controlling the Pairing List (Reset) Starting with the earbuds in the case: 1. Take both earbuds out of the case and wait for the earbuds to turn on. 2. Touch and hold the touch-sensitive panels on both earbuds for 10 seconds to turn them back off. 3. Touch and hold the touch-sensitive panels on both earbuds for 10 seconds. The earbuds will turn on, clear pairing data and turn them off again. 4. It is a 10-second time required for pairing, enter "0000". 5. Open the lid again, both earbuds will turn on and enter pairing mode. Notes • When you turn on the earbuds, they will automatically disconnect to all devices that have entered pairing mode. • In pairing mode, the earbuds will automatically turn off after 1 minute if no devices are paired. • If none of the earbuds has no sound output, pull both earbuds out of the case and take them out again, or below the reset steps. • The wireless operating range is 10m (33ft). If you exceeded this range, the earbuds will disconnect from your paired device. The connection will be re-established if you re-enter the wireless range within 2 minutes.	Controls & LED Indicators Once paired, you can wirelessly stream audio from your device to the earbuds. Music will automatically pause when you receive an incoming phone call and resume once the call has ended. Play or Pause Double-tap the touch-sensitive panel on either earbud. Skip to Next Track Touch and hold the touch-sensitive panel on right earbud for 2 seconds. Skip to Previous Track Touch and hold the touch-sensitive panel on left earbud for 2 seconds. Volume Double-tap the touch-sensitive panel on either earbud to answer a call. Touch and hold the touch-sensitive panel on either earbud for 2 seconds to end a call. Reject an Incoming Call Touch and hold the volume button on either earphone and hold the earphone for 2 seconds. Volume Assistant While your device is connected, "listen-to" the Voice Assistant. Adjust Call Volume Tap the left earbud to reduce volume or the right earbud to increase volume in a call. LED Charging Indicator (Earbuds) <table border="1"> <thead> <tr> <th>Lighting Status</th> <th>State</th> </tr> </thead> <tbody> <tr> <td>White Breathing</td> <td>Earbuds charging</td> </tr> <tr> <td>Off</td> <td>Earbuds fully charged</td> </tr> </tbody> </table>	Lighting Status	State	White Breathing	Earbuds charging	Off	Earbuds fully charged	LED Status Indicator (Case) <table border="1"> <thead> <tr> <th>Lighting Status</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>White Breathing</td> <td>Case charging</td> </tr> <tr> <td>Solid White</td> <td>Case fully charged</td> </tr> <tr> <td>White Flashing, then 10 seconds</td> <td>Less than 100% case battery level</td> </tr> <tr> <td>White Flashing 10 Times, then 10 seconds</td> <td>Less than 30% case battery level</td> </tr> </tbody> </table> FAQ The earbuds are on, but not connecting to my device. For the earbuds and your device to establish a connection, you need to put them both in pairing mode. Please follow the instructions in the Pairing section of this manual. I've connected the earbuds with my smartphone but can't hear any sound. Please check the volume level on your smartphone and make sure the earbuds require you to set up the earbuds as an audio output device before the audio can be transferred. If you're using a music player or other device, please make sure it supports the AAC profile. The sound isn't very clear or the call can't hear my voice clearly. Adjust the volume on your smartphone and the earbuds. By moving closer to your smartphone to rule out the possibility of interference or wireless range-related issues. What's the wireless range of the earbuds? The maximum range is 10m (33ft). However, the actual range depends on environmental factors. For optimal performance, keep your device connected within a range of roughly 4m to 8m and make sure there are no	Lighting Status	Status	White Breathing	Case charging	Solid White	Case fully charged	White Flashing, then 10 seconds	Less than 100% case battery level	White Flashing 10 Times, then 10 seconds	Less than 30% case battery level	no major obstacles (like reinforced steel walls) between the earbuds and your device. CE Statement RoHS & RE power level: 85°C (243-249KVA) 2.1dBm RF exposure assessment has been performed to prove that this unit will not exceed the harmful EMF emission above the reference level as specified in Annex 300 of the European Council Directive 1999/5/EC. The earbuds won't turn on By charging the earbuds for a while, if the earbuds still won't power on, please contact our support team at the email address given in Warranty & Customer Support. I put the earbuds back in the charging case, but the earbuds are still connected. The charging case is a probability out of power. By charging it. Product Care & Use • Keep away from liquids and extreme heat. • Don't use the earbuds for extended periods, as this may cause permanent hearing damage or loss. Warranty & Customer Support For questions, support, or warranty claims, contact us at the address below that corresponds with your region. Please include your Amazon order number and product model number. Amazon US address: support@wenby-ly.com Notes: While WENBY can only provide after sales service for products purchased directly from WENBY. If you have purchased from a different seller, please contact them for service or warranty issues.	CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN UNQUALIFIED TYPE. DISPOSAL OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS. Excessive sound pressure from earphones and headphones can cause hearing loss. Hareley, WENBY Technology Co., Ltd. declares that the product is compliant with the EU RoHS Directive 2011/65/EU. CE Mark: This device may be used in each member state of the EU.
Model	E1																																																	
Technology	BT 5.11, HSP, HFP, A2DP, AVCP, AAC																																																	
Driver (each channel)	2 x 10mm (5.28" speaker driver)																																																	
Sound	100dB SPL (at 1kHz/mW)																																																	
Frequency Range	20Hz ~ 20kHz																																																	
Impedance	32 ohm ±15%																																																	
Microphone Type	MEMS (microphone chip)																																																	
Microphone Sensitivity	-40dB SPL (at 1kHz re 1V/Pa)																																																	
Microphone Frequency Range	100Hz ~ 10kHz																																																	
Charging Time	2 hours																																																	
Battery Life	Up to 20h (5.00mAh)																																																	
Operating Range	10m / 33ft																																																	
Weight	8g / 0.28oz (pair)																																																	
Lighting Status	State																																																	
White Breathing	Earbuds charging																																																	
Off	Earbuds fully charged																																																	
Lighting Status	Status																																																	
White Breathing	Case charging																																																	
Solid White	Case fully charged																																																	
White Flashing, then 10 seconds	Less than 100% case battery level																																																	
White Flashing 10 Times, then 10 seconds	Less than 30% case battery level																																																	

[illegible]

Merci d'avoir acheté le WENBY E! Écouteurs sans fil. Veuillez lire attentivement ce mode d'emploi et le garder pour référence future. Si vous avez besoin des aides, veuillez contacter notre équipe de service client avec le numéro de modèle et votre numéro de commande Amazon.	Caractéristiques Modèle E1 Technologie BT 5.1, HSP, APTX, AAC, AVXC, AAC Dimensions 21 x 10mm / 0.8" Sensibilité 100dB SPL @ 1kHz/1mm Gamme de fréquences 20Hz - 20KHz Impédance 32 ohm ±15% Type de microphone MEMS (puce du microphone) Sensibilité du microphone -40dB (0dB = 1Vrms @ 1kHz) Gamme de fréquence du son 100Hz - 10KHz Temps de charge 2 heures Autonomie de la batterie 4 heures Sortie de charge USBtype C (5V/500mA) Portée de fonctionnement 10m / 328' Poids 8g (0.28oz) pièce	Pour commencer Chargement Chargement complètement le boîtier de charge avec les écouteurs à l'intérieur avant la première utilisation. Pour charger le boîtier, connectez-le à un chargeur USB ou à un port de charge à l'aide du câble USB-L. Lorsque le voyant de charge à l'arrière du boîtier est allumé, le boîtier est complètement chargé. Le chargement prend environ 2 heures, et après avoir été complètement chargé, le boîtier peut charger complètement 3 fois les écouteurs. Les écouteurs doivent être rangés dans votre boîtier lorsqu'ils ne sont utilisés.	Appareil En connectant par les écouteurs dans le boîtier : 1. Touchez les écouteurs gauche et droit de l'air 15 secondes automatiquement et se connecteront les uns aux autres dans les 30 secondes. 2. Après la première connexion, les écouteurs se connecteront automatiquement à l'appareil à l'avenir. 3. Touchez et maintenez le panneau tactile des deux écouteurs pendant 5 secondes. Les écouteurs se reconnecteront automatiquement à l'appareil à l'avenir. 4. Si vous n'avez pas d'appareils disponibles, recherchez et sélectionnez WENBY E1. 5. Si vous n'avez pas un PIN et/ou n'avez pas le couplage, saisissez «0000». Utilisation régulière après l'appareil Une fois l'appareil apparié avec votre appareil, vous pouvez le d'unier et le réutiliser comme suit : • Touchez la couverture du boîtier de chargement et les deux écouteurs s'allumeront et se connecteront automatiquement. • Pour mettre les écouteurs hors tension, retirez les écouteurs du boîtier de chargement et laissez-les complètement chargés.	Initialisation des écouteurs En connectant par les écouteurs dans le boîtier : 1. Touchez les écouteurs gauche et droit de l'air 15 secondes automatiquement et se connecteront les uns aux autres dans les 30 secondes. 2. Après la première connexion, les écouteurs se connecteront automatiquement à l'appareil à l'avenir. 3. Touchez et maintenez le panneau tactile des deux écouteurs pendant 5 secondes. Les écouteurs se reconnecteront automatiquement à l'appareil à l'avenir. 4. Si vous n'avez pas d'appareils disponibles, recherchez et sélectionnez WENBY E1. 5. Si vous n'avez pas un PIN et/ou n'avez pas le couplage, saisissez «0000». Commandes et voyants LED Levrière tactile En appuyant sur la levrière tactile, vous pouvez éteindre le son de votre appareil vers les écouteurs. La fonction d'arrêt automatique lorsque vous recevez un appel téléphonique et une réponse lors d'un appel. Éclairage ou Pulse Appuyez deux fois sur la surface tactile sur un des écouteurs pendant 2 secondes. Passer à la suite Touchez et maintenez la surface tactile sur la couverture pendant 2 secondes. Retourner à la piste précédente Touchez et maintenez la surface tactile sur la couverture pendant 2 secondes.	<table border="1"> <thead> <tr> <th>Indicateur LED de niveau de batterie (Écouteurs)</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>Respiration bleue</td> <td>Chargement des écouteurs</td> </tr> <tr> <td>Éclairage blanc</td> <td>Chargé à 100%</td> </tr> </tbody> </table> Indicateur LED de niveau de batterie (Batterie) <table border="1"> <thead> <tr> <th>Indicateur LED de niveau de batterie (Batterie)</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>Respiration bleue</td> <td>Chargé de 0%</td> </tr> <tr> <td>Éclairage blanc</td> <td>Chargé à 100%</td> </tr> </tbody> </table> Chargement blanc : plus allumé, plus basse le niveau de la batterie interne 30.5 et 100.0. Blanc éteint 10, plus éteint Note Le niveau de la batterie du boîtier de charge est indiqué (comme normal le niveau des batteries rechargeables de la batterie). FAQ Les écouteurs sont allumés mais ne se connectent pas à mon appareil. Après que les écouteurs ont été chargés, essayez de les connecter à votre appareil. Si vous ne pouvez pas les connecter, veuillez contacter notre équipe d'assistance à l'adresse ci-dessous. Si les écouteurs sont allumés mais ne se connectent pas à mon appareil. Après que les écouteurs ont été chargés, essayez de les connecter à votre appareil. Si vous ne pouvez pas les connecter, veuillez contacter notre équipe d'assistance à l'adresse ci-dessous. Si les écouteurs sont allumés mais ne se connectent pas à mon appareil. Après que les écouteurs ont été chargés, essayez de les connecter à votre appareil. Si vous ne pouvez pas les connecter, veuillez contacter notre équipe d'assistance à l'adresse ci-dessous.	Indicateur LED de niveau de batterie (Écouteurs)	Status	Respiration bleue	Chargement des écouteurs	Éclairage blanc	Chargé à 100%	Indicateur LED de niveau de batterie (Batterie)	Status	Respiration bleue	Chargé de 0%	Éclairage blanc	Chargé à 100%
Indicateur LED de niveau de batterie (Écouteurs)	Status																
Respiration bleue	Chargement des écouteurs																
Éclairage blanc	Chargé à 100%																
Indicateur LED de niveau de batterie (Batterie)	Status																
Respiration bleue	Chargé de 0%																
Éclairage blanc	Chargé à 100%																
Contenu de l'emballage Écouteurs Sans fil Boîtier de charge Câble USB-A à C Mode d'emploi Guide de démarrage rapide	Schéma du produit	Allez en marche / Arrêt Allez en marche Retirez les deux écouteurs du boîtier de chargement, ou touchez les écouteurs gauche et droit de l'air 15 secondes automatiquement et se connecteront les uns aux autres dans les 30 secondes. Arrêt Touchez et maintenez le panneau tactile des deux écouteurs pendant 5 secondes. Les écouteurs se reconnecteront automatiquement à l'appareil à l'avenir.	Utilisation de l'écouteur gauche et droit uniquement En connectant par les écouteurs dans le boîtier : 1. Retirez l'écouteur gauche ou droit. 2. Activez la fonction de couplage à l'appareil que vous voulez coupler avec l'écouteur. Appareil En connectant par les écouteurs dans le boîtier : 1. Retirez l'écouteur gauche ou droit. 2. Activez la fonction de couplage à l'appareil que vous voulez coupler avec l'écouteur. Appareil En connectant par les écouteurs dans le boîtier : 1. Retirez l'écouteur gauche ou droit. 2. Activez la fonction de couplage à l'appareil que vous voulez coupler avec l'écouteur.	Allez en marche / Arrêt Allez en marche Retirez les deux écouteurs du boîtier de chargement, ou touchez les écouteurs gauche et droit de l'air 15 secondes automatiquement et se connecteront les uns aux autres dans les 30 secondes. Arrêt Touchez et maintenez le panneau tactile des deux écouteurs pendant 5 secondes. Les écouteurs se reconnecteront automatiquement à l'appareil à l'avenir.	J'ai acheté une connexion avec mon smartphone mais je n'entends aucun son. Veuillez d'abord faire le niveau de volume de votre smartphone et de votre appareil. Certains smartphones peuvent avoir des paramètres de connexion qui empêchent que le son aille du téléphone au casque. Veuillez vérifier les paramètres de connexion de votre smartphone et de votre appareil. Si vous ne pouvez pas résoudre le problème, veuillez contacter notre équipe d'assistance à l'adresse ci-dessous. Enfournement du produit et utilisation • Lire et éteindre les aides et les sources de charge d'urgence. • Lire et éteindre les aides et les sources de charge d'urgence. • Lire et éteindre les aides et les sources de charge d'urgence. Garantie & Service Client Pour les appareils, veuillez lire les demandes de garanties, veuillez nous contacter à l'adresse ci-dessous au composant à votre choix. Veuillez nous fournir le numéro de commande Amazon et le numéro de modèle du produit. Amazon FR commandes: support@wenby.com Amazon UK commandes: support@wenby.com Amazon DE commandes: support@wenby.com Amazon IT commandes: support@wenby.com Amazon ES commandes: support@wenby.com Amazon FR commandes: support@wenby.com Amazon UK commandes: support@wenby.com Amazon DE commandes: support@wenby.com Amazon IT commandes: support@wenby.com Amazon ES commandes: support@wenby.com Amazon FR commandes: support@wenby.com Amazon UK commandes: support@wenby.com Amazon DE commandes: support@wenby.com Amazon IT commandes: support@wenby.com Amazon ES commandes: support@wenby.com Amazon FR commandes: support@wenby.com Amazon UK commandes: support@wenby.com Amazon DE commandes: support@wenby.com Amazon IT commandes: support@wenby.com Amazon ES commandes: support@wenby.com Amazon FR commandes: support@wenby.com Amazon UK commandes: support@wenby.com Amazon DE commandes: support@wenby.com Amazon IT commandes: support@wenby.com Amazon ES commandes: support@wenby.com Amazon FR commandes: support@wenby.com Amazon UK commandes: support@wenby.com Amazon DE commandes: support@wenby.com Amazon IT commandes: support@wenby.com Amazon ES commandes: support@wenby.com Amazon FR commandes: support@wenby.com Amazon UK commandes: support@wenby.com Amazon DE commandes: support@wenby.com Amazon IT commandes: support@wenby.com Amazon ES commandes: support@wenby.com Amazon FR commandes: support@wenby.com Amazon UK commandes: support@wenby.com Amazon DE commandes: support@wenby.com Amazon IT commandes: support@wenby.com Amazon ES commandes: support@wenby.com Amazon FR commandes: support@wenby.com Amazon UK commandes: support@wenby.com Amazon DE commandes: support@wenby.com Amazon IT commandes: support@wenby.com Amazon ES commandes: support@wenby.com Amazon FR commandes: support@wenby.com Amazon UK commandes: support@wenby.com Amazon DE commandes: support@wenby.com Amazon IT commandes:</												

[illegible][illegible]