

Model K600

User Manual



Directory

1. Preface-----	2
2. Accessories -----	2
3. Product introduction-----	2
4. Attentions-----	3
5. Panel introduction -----	4
6. Operational instructions-----	6
7. Device compatibility -----	8
8. Main technical parameters-----	8
9. Solutions to simple troubles -----	9

1. Preface

Dear users,

Welcome to join the SAMESAY family! Your buying of our products is much appreciated!

For full use of your player, please read this manual carefully before use, so as to grasp connection methods and operational key points of this system. You will also find our various explorations in design, manufacturing process and operational humanization, all to meet your requirements.

Please keep this manual well for future reference.

Open the package

Please open the package carefully, confirm the following accessories, and put them in one place in case of loss.

2. Accessories

-Soundbar	1
-Users' manual	1
-Remote control	1
-Type C charging cable	1
-Wireless microphone	2

3. Product introduction

1. Advanced Bluetooth function, can be paired with any device that have Bluetooth function(suitable for Bluetooth function products).
2. High capacity battery, easy to use, more durable.

3. Support high quality MP3 music files.
4. Support Karaoke function.
5. Strong speaker, 3 D digital sound technology, amazing sound quality .
6. Can connect IPAD, IPOD, phone, computer, MP3, MP4 and other external audio device.

4. Attentions

First, thanks for your use of our digital audio products!

Before use, please read this manual for correct use of this product.

For better services, contents of this manual may change due to variation of product performance and functions without further notice.

To maintain better performance, DO NOT use in places where is too cold, too hot, dusty or damp, more attention should be paid to the following circumstances:

- 1, moisture or underwater environment
- 2, heater or high-temp work environment
- 3, exposure directly to sunlight
- 4, easy to drop
- 5, DO NOT detach the combined audio by yourself, or the warranty would be void

Warning


1. Please pay attention to waterproof of the product without water dropping or splashing. Objects filled with liquids, such as vases, cannot be placed on the top of device in case of accidents.

2. To avoid accidents such as fire or electric shock, please check whether the grid voltage is exactly the same as required by this device

5. Panel introduction


Definitions of buttons and jacks :

There are 8 buttons and jacks in total, defined as following:

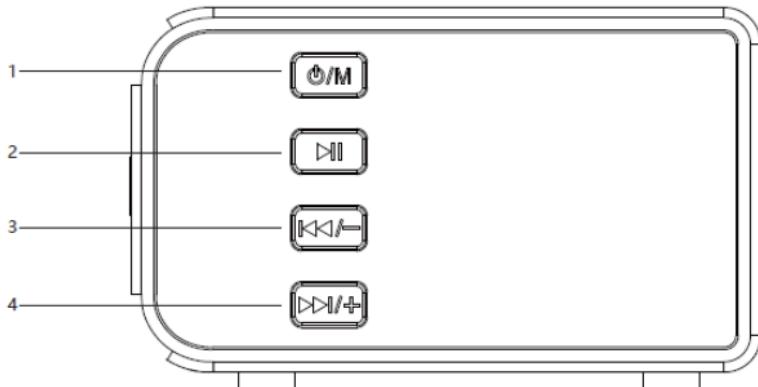


1. **⊕/M**: Long press to power on/off, short press to switch modes;
2. **▶/II**: Press to play or pause music
3. **◀/I** :Long press to decrease volume, short press to previous song.

4. : Long press to increase volume, short press to next song

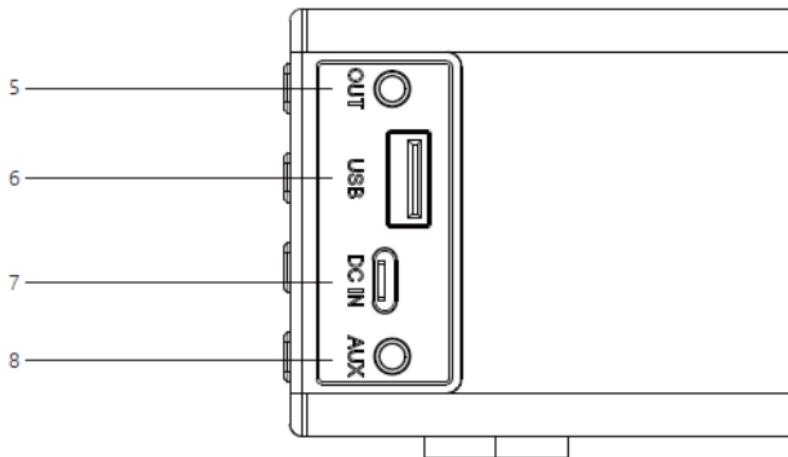

5. OUT: Audio output
6. USB: USB playback
7. DC IN: Type C charging
8. AUX: Audio input

Remote

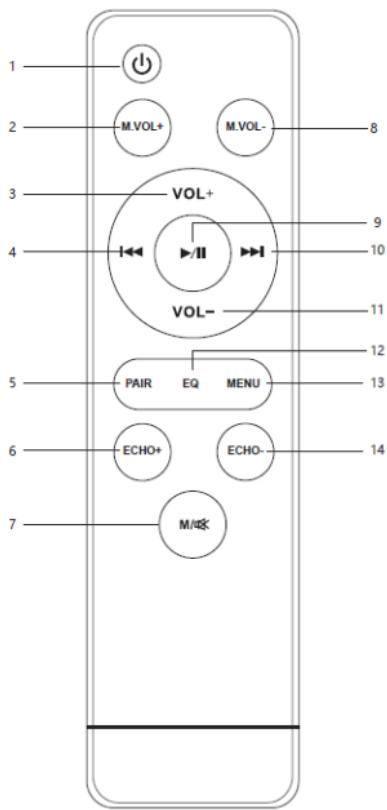

1. : Short press to power on
2. M.VOL+: Press to increase Mic volume
3. VOL+: Press to increase volume
4. : Previous track in Bluetooth/USB mode
5. PAIR: Press to Bluetooth pairing or Bluetooth disconnecting

6. ECHO+: Press to increase Mic echo
7. **M/~~M~~**: Short press to change between Bluetooth/AUX in/USB mode, long press to mute on/off
8. M.VOL-: Press to decrease Mic volume
9. **▶/II**: Press to play or pause music
10. **▶▶/I**: Next track in Bluetooth/USBmode
11. VOL-: Press to decrease volume
12. EQ: Adjust EQ sound
13. MENU: Enter to adjust treble and bass effect
14. ECHO-: Press to decrease Mic echo

6. Operation instruction

Bluetooth Mode

- 1: Long press /M to power on the soundbar. It will enter the Bluetooth mode in default and waiting for pairing.
- 2: Turn on the Bluetooth function on your devices and the device will start to search for the Soundbar.
- 3: Select “K007” from the list of found devices.
- 4: If asked, enter the password “0000” and press OK.
- 5: When successfully paired with your device, the indicator light will be lit steadily.
Note: The Bluetooth playback is controlled by your device and the buttons on the remote control.

● AUX IN Mode

After power on, connect the external audio sources to the AUX IN jack of soundbar by using the 3.5mm audio cable, and then short

press the "/M" button on the soundbar or the "/M" button on the remote control to switch to "AUX IN" mode. At this time, music from the external audio sources such as MP3/CD can be played. (please adjust the volume of the external audio sources to be moderate and playing.)

● **AUX OUT Mode**

After power on, connect the amplifier device to the AUX OUT jack of soundbar by using the 3.5mm audio cable, and then short press the "/M" button on the soundbar or the "/M" button on the remote control to switch to "AUX OUT" mode. At this time, the soundbar is as a audio sources to play music from amplifier device.

● **USB Mode**

After power on, insert the USB into the USB jack of the soundbar, and the machine automatically goes to USB playback mode and plays the music in USB. Press the "/II" button to play and pause the music. Long press  to increase volume, short press to next song; Long press  to decrease volume, short press to previous song.

● **Karaoke Function**

Karaoke function can be realized by turning on the microphone in any modes

7. Device compatibility

The machine theoretically supports all mobile phones with Bluetooth function and any related equipment connect to Bluetooth and play music.

8. Specification

Product name	K600
Output power	12W*2
Rating:	For speaker: DC 5V or DC 7.4V battery for microphone: 2* DC 1.5V battery
Speaker frequency	2402-2480MHz
Bluetooth version	5.0, A2DP, AVRCP
Bluetooth range	Up to 10m
Included in the packaging	Soundbar, Remote control, Wireless microphone, Type C charging cable
Dimensions	Soundbar: 250*95*60mm

9. Trouble shooting

Troubles	Solutions
----------	-----------

Volume is low or distortion	1. Check the soundbar volume and adjust to proper volume 2. Low battery, need to charge
LED Indicator is not working under Bluetooth mode	1. Low battery, need to charge 2. Re-power on the device
Music breaks	1. Obstruction exists between mobile devices and Bluetooth device. Remove obstructions. 2. Exceed the valid connecting distance.
Paired unsuccessfully	1. Check whether mobile phone is under pairing status 2. Delete the device name on mobile phone and re-pairing.

FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received,

including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.