 
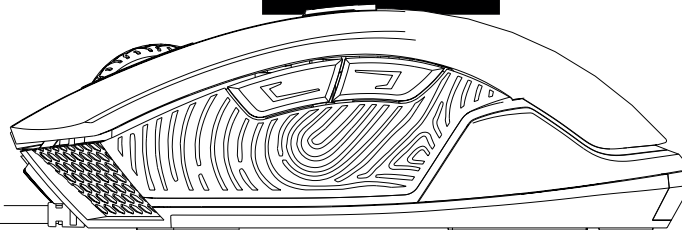 


Ar18 mouse

 
 
Souris Ar18

USER MANUAL – NOTICE D'INSTRUCTIONS

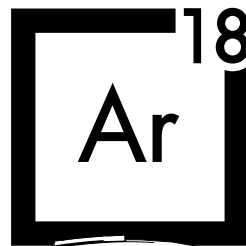

Model : SI-9002S / JVAPCM00538

©2021 Lexip. All rights reserved. "Lexip", "Pixminds Distribution" and their logos are trademarks and/or registered trademarks of Pixminds, and/or its affiliated companies. All other product names and images, trademarks or registered trademarks are properties of their respective owners. Made in China. Product features, appearances and specifications may be subject to change without notice. Please retain this information for future.

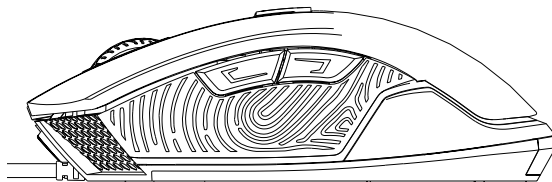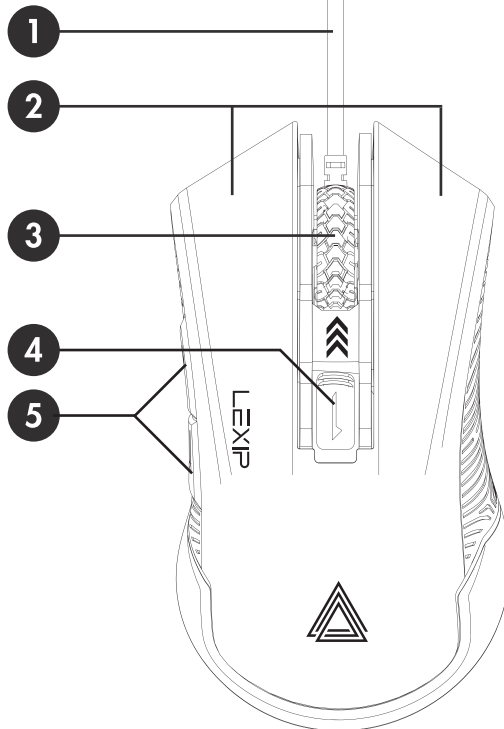

1 USB cable

(FR) Câble USB, (DE) USB-Kabel, (NL) KabelUSB, (IT) Cavo USB, (ES) Cable USB, (Néerlandais) USB-kabel, (Serbe) YC6 kabl, (Slovaque) USB kábel, (Slovène) Kabel USB, (Finnois) USB kaapeli, (Croatie) USB kabl, (ROM NÂ) Cablu USB, (Polonais) Kabel USB, (Tchèque) USB kabel, (Hongrois) USB kábel, (Suédois) USB-kabel, (Danois) USB-kabel, (Norvégien) USB-kabel

2 Left and right button

(FR) Bouton gauche et droite, (DE) Linke und rechte Taste, (NL) Knoplinks en rechts, (IT) pulsante sinistro e destro, (ES) Botón izquierdo y derecho, (Néerlandais) Links en rechts knop, (Serbe) Levo i desno dymre, (Slovaque) Lavé a pravé tlačidlo, (Slovène) Levi in desni gumb, (Finnois) Vasen ja oikea painike, (Croatie) Lijeva i desna tipka, (ROM NÂ) Butonul stânga și dreapta, (Polonais) Lewy i prawy przycisk, (Tchèque) Levé a pravé tlačítko, (Hongrois) Bal és jobb gomb, (Suédois) Vänster och höger knapp, (Danois) Venstre og højre knap, (Norvégien) Venstre og høyre knapp

3 Scroll wheel and scroll wheel button

(FR) Molette et bouton molette, (DE) Scrollrad und klickbares Scrollrad, (NL) Wiel en afstekknop, (IT) Rotellina e pulsante rotellina, (ES) Rueda de deslizamiento y botón de la rueda de deslizamiento, (Néerlandais) Wiel en knopwiel, (Serbe) Točak i dymre, (Slovaque) Kolesko a gombikové kolesko, (Slovène) Kolo in gumb, (Finnois) Pyörä ja nappipyörä, (Croatie) Kotačić i kotačić s gumbima, (ROM NÂ) Roată și buton, (Polonais) Pokrętło i przycisk pokręta, (Tchèque) Tlačítko kolečka a kolečka, (Hongrois) Hüvellykerek és görögös gomb, (Suédois) Tumhjul och tumhjulsknapp, (Danois) Tømmel-fingerhjul og tømmelfingerknapp, (Norvégien) Tømmelhjul og tømmelhjul-knapp

4 Lexip button

(FR) Bouton Lexip, (DE) Knop Lexip, (NL) Knop Lexip, (IT) Pulsante Lexip, (ES) Botón Lexip, (Néerlandais) Lexip-knop, (Serbe) Lexip dymre, (Slovaque) Tlačidlo Lexip, (Slovène) Gumb Lexip, (Finnois) Lexip-painike, (Croatie) Lexip gumb, (ROM NÂ) Butonul Lexip, (Polonais) Przycisk Lexip, (Tchèque) Tlačítko Lexip, (Hongrois) Lexip gomb, (Suédois) Lexip-knapp, (Danois) Lexip-knap, (Norvégien) Lexip-knapp

5 Side buttons

(FR) Boutons latéraux, (DE) Seitentasten, (NL) zijknoppen, (IT) Pulsanti laterali, (ES) Botones laterales, (Néerlandais) Knopen aan de zijkant, (Serbe) Bočna dymra, (Slovaque) Bočné gombíky, (Slovène) Stranski gumbi, (Finnois) Sivupainikkeet, (Croatie) Bočni gumbi, (ROM NÂ) Butoane laterale, (Polonais) Boczne guziki, (Tchèque) Boční tlačítka, (Hongrois) Oldalsó gombok, (Suédois) Sidoknappar, (Danois) Sideknapper, (Norvégien) Sideknapper



ENGLISH

Thank you for purchasing a Lexip Ar18 wired mouse.

△ This symbol identifies safety and health messages in this product guide. Read this guide for important safety and health information for the product that you have purchased.

△ **WARNING: FAILURE TO PROPERLY SET UP, USE, AND CARE FOR THIS PRODUCT CAN INCREASE THE RISK OF SERIOUS INJURY, DEATH, PROPERTY DAMAGE, OR DAMAGE TO THE PRODUCT OR RELATED ACCESSORIES. READ THIS PRODUCT GUIDE FOR IMPORTANT SAFETY AND HEALTH INFORMATION AND RETAIN THESE DOCUMENTS FOR FUTURE REFERENCE CAREFULLY. PLEASE KEEP OUT OF REACH OF YOUNG CHILDREN.**

IMPORTANT PRODUCT SAFETY INFORMATION

1. Safety of children and vulnerable people - △ **WARNING : suffocation risk**

This device may contain small parts presenting a risk of suffocation for children under 3 years old. Keep small parts away from children. Never leave this product within the reach of small children. Do not allow children to play with the appliance. Keep the packaging out of the reach of children. Children should not clean or service the appliance unattended. Make sure that children use this product to play safely and with limits. Also make sure that they understand how to use the product properly.

2. General Security and use - △ **WARNING: Risk of injury, electric shock, fire, burns or damage to the device**

△ **WARNING: Do not attempt repairs**

△ **WARNING: Do not allow your accessory to**

become wet

This product is intended for domestic and indoor use. Follow the instructions in this manual. Do not use or store the product in dirty or dusty areas as removable parts and electronic components may be damaged. Do not use or store the product in hot areas. Do not drop, disassemble, open, crush, twist, warp, or deform any part of the product, as this could seriously damage them. Do not use water to clean the product or any other cleaning product. Do not use abrasive cleaners, scouring pads, solvents or metal objects. To clean the product, please use an antistatic cloth. Do not disassemble the product yourself. Repairs must be carried out by qualified personnel. Do not leave the battery near a heat source such as a radiator. Do not insert any objects other than those authorized for the product. Do not short-circuit. Do not touch the battery terminals. Do not place heavy objects on the product. Avoid excessive shock or vibration. Do not expose it to dripping or splashing. Do not place objects filled with liquids, such as vases, on the apparatus. Do not spray water on the product to clean it. Any attempt to open and/or modify this product, including peeling, puncturing, or removing labels, will void the limited warranty.

3. Installation

Do not install or connect to a damaged unit. Follow carefully the installation instructions provided with the device. Do not install or use in a location where the temperature is below 15°C or exposed to the elements. Do not expose the product to direct sunlight or near a heat source. Install the product in a dry and dust-free location. Do not place it in places subject to water splashes. Do not place flame sources such as lighted candles on the unit. Improper repair of the product may result in risk to the user. Protect the battery ports from dust and moisture which can cause connection problems.

4. Disposal - △ **WARNING: Risk of injury or**

suffocation

Risk of injury or asphyxiation Observe the safety rules when disposing of Waste Electrical and Electronic Equipment (WEEE).

5. Cables - △ **CAUTION: Cables and Cords**

Place all cables and cords so that no one (or any animal) can step on them or inadvertently stumble over while moving around the room. Keep cables and cords out of the reach of children and pets. Do not let your children play with cables and cords. Unplug the unit immediately if you notice a burning smell or smoke. Excessive moisture can cause electric shock. Make sure the cord does not come in contact with a hot object such as a heater such as a radiator.

6. Class 1 laser product

△ **Warning: Class 1 laser radiation. Do not fix the beam with optical instruments !**

CAUTION : Visible and invisible laser radiation. In case of dangerous opening exposure to the beam. The optical device complies with the International Standard IEC/EN 60825-1 2007, Class 1 Laser Products.

IMPORTANT HEALTH WARNING

1. Musculoskeletal Disorders - △ **WARNING : Use of game controllers, keyboards, mice, or other electronic input devices may be linked to serious injuries or disorders.**

MRL Syndrome injuries due to repetitive movements and eye strain, the use of joysticks, keyboards, mice or other electronic input devices may result in serious injury or disorder. After a few hours, video games can irritate muscles, wrists, skin or eyes. RSI stands for «Repetitive Strain Injury». The RSI syndrome occurs as a result of small movements that are repeated over and over again. Typical symptoms are pain in the fingers, wrists, arms or neck. If you experience pain, numbness or weakness in these parts of the body,

ENGLISH



please consult a doctor as soon as possible. Please follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, skin irritation or eye strain. Avoid excessively long periods of play. It is recommended that parents ensure that their children play for adequate periods of time. Even if you don't think you need it, take a 10 to 15 minute break every hour of play, get up and walk around a little. If you experience fatigue or pain in your hands, wrists, arms or eyes, stop playing and rest for several hours before playing again. If your hands, wrists, arms or eyes are sore during or after play, stop playing and see a doctor. When you play a video game : Sit or stand as far away from the screen as possible ; Play on the smallest screen available ; Do not play if you are tired or need rest; Play in a well-lit room; Take a 15-minute break every hour.

CONTENT

- 1 Ar18 mouse
- 1 cable
- 1 dongle
- 1 user manual

CHARACTERISTICS

- 6 programmable buttons
- Ultra durable ceramic pads (X4)> 1,500km
- Optical sensor / 1000 to 4800dpi
- RGB lighting
- Braided USB cable
- Corded or wireless use
- Weight: 129g

ALIMENTATION

5V - 200m

NECESSARY SYSTEM CONFIGURATION

PC or Mac with a free USB port

MINIMUM REQUIRED CONFIGURATION

Windows * ® 7

CONNECTING THE MOUSE

Plug the USB plug into a free port on your computer. The system automatically detects and installs new hardware.

Your mouse is then ready to use. This will charge your mouse's battery.

When the mouse is charged, unplug the mouse. Then plug the included dongle under the mouse into a free USB port and push the button under the mouse to the on position. The system automatically detects the device.

MODIFICATION OF DPI

DPI can be adjusted in 5 levels by pressing the Lexip button. The color of the logo will then indicate the DPI value of the mouse : 1000 red - 1600 green - 2000 blue - 2400 pink - 4800 light blue.

CHANGING THE COLOR OF THE LEDS

To turn the mouse LEDs on or off, press the right button and the jog wheel button simultaneously and repeatedly for 5 seconds.

The mouse has four different lighting modes, press the right button and the jog wheel button simultaneously and repeatedly for 5 seconds.

MOUSE CONFIGURATION

You can customize and configure the programmable buttons on your Ar18 using the control panel. The corresponding software can be downloaded from www.lexip.co.

FIRMWARE UPDATE

Firmware updates may be required. They can be downloaded on www.lexip.co

CUSTOMER SUPPORT

For answers to common questions, troubleshooting steps, and our Customer Support team, e-mail us at : support@lexip.fr.

TERMS OF WARRANTY

The warranty period is limited to two (2) years from the date of purchase, upon submission of proof of purchase. Operating instructions must be properly followed. The product must not have been damaged by deterioration, improper use, negligence, accident, destruction or alteration of the serial number, use of unsuitable electrical voltages or currents, repair, modification or maintenance by any person or third party other than our after-sales service or an authorized repair center, the use of non-Lexip® replacement parts, or modification of the product in any way, the introduction of this product into any other product, or damage caused by accident, fire, flood, lightning, or other natural disaster and any use contrary to the instructions provided by Lexip®. Lexip®'s obligations are limited to repair or replacement with an identical or similar product at its option. In order to obtain repair of a product under this warranty, please present the product and proof of purchase (i.e. sales receipt or invoice) to your dealer or directly to the Lexip® Technical Support Center with shipping charges prepaid. Any terms that conflict with federal or state laws, rules and/or obligations will not be enforceable in that specific jurisdiction and Lexip® will adhere to such laws, rules and/or obligations. When returning the product for repair, please package the product carefully, preferably using the original packaging. Please also include an explanatory note. **IMPORTANT** : In order to avoid unnecessary costs and inconvenience, please check carefully that you have read and followed the instructions in this manual. This warranty acts in lieu of all other





Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC ID: 2A2KJ-9002S (mouse)
FCC ID: 2A2KJ-9002SD (dongle)

