

User's Guide

Contents

Getting Started	3
Overview	3
Key Explained	4
Starting up	4
Switching Your Phone On/Off	6
Getting Around Your Phone	7
Phone Calls	8
Calling from the Phone	8
Calling from Your Contacts	8
Calling from a Text Message	8
Receiving Calls	9
Contacts	9
Messaging	10
The Message Box	10
Sending an Message	10
Message Settings	11
Touch Input Settings	11

1

avoid interfering with blasting operations.

System update

System supports firmware upgrade only from official website or server. If user uses 3rd party ROM image and/or any other root method to upgrade firmware, it will cause phone unstable and raise further security risk and pitfalls. Please be noted user should take all responsibility for all these behaviors.

Common fault diagnosis

The faults	possible reasons
Can't turn on	1. Whether there is electricity in the battery; 2. Battery is correct.
SIM is wrong	1. SIM is dirty and clean it; 2. install the SIM again; 3. SIM is wrong, replace it.
Bad signal	Check the signal display in the status bar.
The phone can't call	May have a strong jamming signal around the environment.
Can't charge	May be the battery discharge. Need to wait for a few minutes.
Taking picture is not clear	Please make sure that both sides of the camera lens cleaning.

Google, Google Chrome and Gallery Go are trademarks of Google LLC.

26

Screen record 18

For Your Safety	18
General Safety	18
Distraction	20
Product Handling	20
Electrical Safety	23
Interference	24
Explosive Environments	25
System update	26
Common fault diagnosis	26

Getting Started

Overview



3

Interference

General Statement on Interface

Caution must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noise when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent

24

	Airplane mode		Signal strength
	Battery charge		New message
	Meeting mode		Wi-Fi network
	Alarm set		Earphone insert
	Silent mode		New Wi-Fi network detected
	Bluetooth icon		USB debugging connected

Installing the SIM/SD

Switch off your phone before installing or replacing the battery, SIM, or memory card.

1. Remove the back cover

2. Hold the SIM card with the cut corner oriented as shown and slip it into the card holder.

3. Insert the memory card into the card slot with the metal contacts facing down until it inserts to the right position.

4. Press the cover gently back into place until you hear a click.

Charging the Battery

When you first get your new phone you'll need to charge the battery.

Connect the adapter to the charger jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charger jack.

Connect the charger to a standard AC wall outlet.

5

Getting Around Your Phone

Touch Control

You can use finger gestures to control your phone. The controls on your touch-screen change dynamically depending on the tasks you're performing.

Tap the buttons, icons, or applications to select items or to open applications.

Flick the screen to scroll up, down, left or right.

Point, drag and drop to move particular items across the screen.

Double-tap the screen to zoom in/out an image.

NOTE: You can view the phone screen in portrait or landscape orientation simply by holding it upright or turning it on its side. Not all screens are viewable in landscape.

Home Screen

In the Home screen, besides the shortcut icon is displayed, you can also set your own wallpaper, add the widgets or application shortcuts you need, or remove them as you like.

Choosing Your Wallpaper

Long Press desktop to select the wallpaper . widgets . home settings

Adding/Removing Items to Your Home Screen

Enter the Application Program Interface

In the list of applications, touch and hold the icon until the main screen appears, move the application icon to the idle position, release the finger.

7

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

Always treat your phone and its accessories with care and keep it in a clean and dust-free place.

Do not expose your phone or its accessories to open flames or lit tobacco products.

Do not expose your phone or its accessories to liquid, moisture or high humidity.

Do not drop, throw or try to bend your phone or its accessories.

20

can make the call while viewing the text message.

Press Home key > tap > Messaging.

Tap the conversation and then the message that contains the phone number you need.

Tap the message, the phone will list the options.

Receiving Calls

Tap the icon, drag to right to answer the call.

Tap the icon, drag to left to reject the call.

During a call, you can mute your microphone so that the person you are speaking to cannot hear you, but you can still hear them.

Tap to turn your microphone off. To turn your microphone back on, tap .

Tap during a call to turn the speakerphone on. Tap again to turn off the speakerphone.

Tap to finish a call.

Contacts

You can add contacts on your phone and synchronize them with the contacts in your Google Account or other accounts that support contact syncing.

To see your contacts, Tap from the Contacts Screen. Choose the storage location to save the contact. Enter the contact name, phone numbers, and other information, and then save it.

9

Google

Tap to Google Go. A fast, easy, fun way to search.

Clock

Tap , you can view the clock or set the alarm.

Tap the top of the screen icon can be switched to the countdown and stopwatch functions from the clock interface.

Calculator

You can use the phone directly perform simple mathematical calculations.

1. Tap .

2. Click the button corresponding with the calculator display, perform basic arithmetic.

TIPS: Tap Menu Key > Advanced panel to use scientific calculation.

Screen record

Pull down the bar and tap the screen record, can record it

For Your Safety

General Safety

	Don't make or receive handheld calls while driving. And never text while driving.		Don't use at petrol stations.
--	--	--	-------------------------------

18

prompt. When both devices to be paired accept the connection, the pairing is completed.

TIPS: Tap your device name to make your phone discoverable if other devices try to pair with your phone.

Setting Date and Time

Tap >Settings>system.

Tap Automatic Date & time and select Off if you want to set the time and date by yourself.

Set date, time and change the other options.

Display Settings

Tap >Settings>Display, you can adjust the display settings as you like:

Wallpaper: Set the wallpaper of the phone.

Brightness: Adjust brightness of the screen.

Adaptive brightness: Rotate the screen display as you rotate the phone.

Sleep: Set the delay for the screen to automatically turn off.

Sound Settings

Tap >Settings>Audio profiles>the sound settings, such as ringtones, volume and vibrate.

Language Settings

You can change the language of your phone system in two simple steps.

Tap >Settings>Language & input>Language.

16

2231-9

Therefore, set up the networks connection correctly before you try to use the phone as a modem.

Disabling USB tethering

Tap >Settings>Network and internet>Hotspot and tethering>USB tethering and USB PC internet share and clear the USB tethering check box.

You can also just pull out the USB cable.

Enabling the Wi-Fi Hotspot

You can use the phone as a portable WLAN router, to share your phone's internet connection with one or more PC or other devices.

NOTE:

When the portable Wi-Fi hotspot function is enabled, you can't use your phone's applications to access the internet via its Wi-Fi connection.

You can configure the Wi-Fi hotspot as follows:

• Tap >Settings>Network and internet click next to the Wi-Fi hotspot to turn it on.

• Tap Set up Wi-Fi hotspot to set up portable Wi-Fi hotspot. Now you can the hotspot on other devices and connect to.

Disabling the Wi-Fi Hotspot

Tap >Settings>Network and internet click and click next to the Wi-Fi hotspot to turn it off.

Browsing the Internet

You can use your phone to get on the Internet via a network or Wi-Fi

13

2231-13

avoid interfering with blasting operations.

System update

System supports firmware upgrade only from official website or server. If user uses 3rd party ROM image and/or any other root method to upgrade firmware, it will cause phone unstable and raise further security risk and pitfalls. Please be noted user should take all responsibility for all these behaviors.

Common fault diagnosis

The faults	possible reasons
Can't turn on	1. Whether there is electricity in the battery; 2. Battery is correct.
SIM is wrong	1. SIM is dirty and clean it; 2. install the SIM again; 3. SIM is wrong, replace it.
Bad signal	Check the signal display in the status bar.
The phone can't call	May have a strong jamming signal around the environment.
Can't charge	May be the battery discharge. Need to wait for a few minutes.
Taking picture is not clear	Please make sure that both sides of the camera lens cleaning.

Google, Google Chrome and Gallery Go are trademarks of Google LLC.

26

Screen record	18
For Your Safety	18
General Safety	18
Distraction	20
Product Handling	20
Electrical Safety	23
Interference	24
Explosive Environments	25
System update	26
Common fault diagnosis	26

Getting Started

Overview



3

2231-3

Getting Around Your Phone

Touch Control

You can use finger gestures to control your phone. The controls on your touch-screen change dynamically depending on the tasks you're performing.

Tap the buttons, icons, or applications to select items or to open applications.

Flick the screen to scroll up, down, left or right.

Point, drag and drop to move particular items across the screen.

Double-tap the screen to zoom in/out an image.

NOTE:

You can view the phone screen in portrait or landscape orientation simply by holding it upright or turning it on its side. Not all screens are viewable in landscape.

Home Screen

In the Home screen, besides the shortcut icon is displayed, you can also set your own wallpaper, add the widgets or application shortcuts you need, or remove them as you like.

Choosing Your Wallpaper

Long Press desktop to select the wallpaper . widgets . home settings

Adding/Removing Items to Your Home Screen

Enter the Application Program Interface

In the list of applications, touch and hold the icon until the main screen appears, move the application icon to the idle position, release the finger.

7

2231-7

Message Settings

The phone's message settings are pre-configured for you to use immediately. To change them, tap Menu Key > Settings from the Messaging Screen.

NOTE: From SMS/MMS settings screen tap Menu Key > Restore default settings to change the message settings back to the original.

Touch Input Settings

Choose the touch input settings by press Home key> tap

settings>Language & input from Home Screen.

In the Keyboard&Input section, you can choose the settings that you need.

Getting Connected to the Internet

Your phone's impressive networking capabilities allow you to access the Internet or your corporate network with ease.

You can use default connection settings to connect to the Internet via your mobile network, or Wi-Fi.

The network connection can be enabled /disabled manually.

Tap >Settings>Network and Internet>Mobile data to choose SIM to use for cellular data.

Adding a New Network Connection

To get connected via your mobile network you need a data plan with your service provider. Also if the networks settings are not pre-configured on your phone, please contact your provider to get the necessary information.

11

2231-11

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Key Explained	
Key	Function
Power Key	<ul style="list-style-type: none"> Press to turn on or off Press to restart your phone Press to Screenshot Press to Emergency
Home Key	Press to return to the Home Screen from any application or screen.
Menu Key	Hold to see recently used applications.
Back Key	Press to go to the previous screen.
Volume Keys	Press or hold to turn the volume up or down.

Starting up

Status and Notification Icons

Your phone will tell you exactly what's going on by showing you simple icons. Here's what they mean

	USB connected		Missed call
--	---------------	--	-------------

4

25

2

Press **Home Key** to return to the Home Screen.

Tap and hold the item you want to delete until the remove icon appears on the top of the screen.

Drag the item to the remove icon and release your finger when the item turns red.

Phone Calls

There are many ways to make a call with your phone. And they're all easy to do.

Calling from the Home Screen

Enter the phone number using the on-screen keypad.

Tap to delete wrong digits.

Tap the dial icon.

TIPS: To make international calls, hold to enter the "*".

Calling from Your Contacts

Tap .

Slide your finger to scroll the contacts list and tap the contact name you want to call, when the contact details appear, click on the number; choose the SIM card to dial.

You can search for a contact by tapping on the screen.

Calling from a Text Message

If a text message contains a phone number that you want to call, you

8

21

6

23

You can view settings by tapping->Settings->Network and Internet>Mobile network >advabedc>Access Point Names to add a new network connection

Turning On Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to about 300 feet.

Connecting to a Wi-Fi Network

Tap ->Wi-Fi.

Click next to the Wi-Fi menu to turn it on, click you can turn off the Wi-Fi function. Tap an access point to connect to it.

NOTE: If security features are implemented, you'll need to enter a password.

Also you can place the QR code in the middle position below to connect to WiFi

Checking the Wi-Fi Network Status

You can check the Wi-Fi network by looking at the icon in the status bar.

USB tethering & portable hotspot

Share your phone's data connection via USB or as a portable Wi-Fi hotspot.

Enabling USB tethering

TIPS: The PC accesses the Internet via the phone's mobile network.

12

17

10

19

Select a language from the list given.

Security Settings

Here's how to protect your phone and SIM card from unauthorized use.

Tap ->Security->Screen lock. You can select the screen lock.

When power on your phone or unlock touch screen devices you will be required to input pattern/PIN/password/voice, and etc. The following is the introduction function:

None	Disable the screen lock	PIN	Use the PIN to unlock
Swipe	Select the swipe to unlock	Password	Use the password lock screen
Pattern	Creating Your Screen Unlock Pattern		

Managing Your Device Memory

Tap ->Storage.

You can view the space information of the SD card and the phone storage.

Reset to Factory Settings

Tap ->Backup & reset->Factory data reset->Reset phone>Erase everything.

WARNING: All your personal information and downloaded applications on your phone will be erased after the resetting.

2231-12

22

11

2231-10

Getting Connected to the Internet

Adding a New Network Connection

Turning On Wi-Fi

Connecting to a Wi-Fi Network

Checking the Wi-Fi Network Status

USB tethering & portable hotspot

Browsing the Internet

Making the Most of Multimedia

Camera

FM

Playing Music

Gallery Go

Sound Recorder

Bluetooth

Screen Mirroring

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Specific Absorption Rate (SAR) information:

This mobile phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: the mobile phone has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the phone kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 10mm separation distance between the user's body and the back of the phone. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.