

User Manual




CIXI MINGYE COMMUNICATION AND ELECTRONIC CO.,LTD

INTRODUCTION

The 17J series with 2 sides power outlet, USB charger,wireless charger into an 10cm diameter body.The top cover is glass.It is a perfect choice for every work desk,an universal solution which able to meet different connection possibilities in the workplace.

TECHNICAL PARAMETER

Rate current	15A
Rate voltage	125V~
Max power	1875W
Provision for earthing	with earthing contact
Number of poles	2P+ 
Wireless charging	frequency band:110-200KHz
	the maximum RF Power: 5W
USB charger	I/P:125V~,60Hz,0.25A×2,O/P:5Vd.c. 3.1A
Optional function	USB charging, RJ45/HDMI extension cord
Color	Black,White (can custom made)
Protection against electric shock	IP20
<p>Note:</p> <ul style="list-style-type: none"> •This product could be used indoor only •Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. 	
<p>Caution:</p> <p>Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p>	
<p>NOTE:</p> <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> —Reorient or relocate the receiving antenna. —Increase the separation between the equipment and receiver. —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/TV technician for help. 	

INSTALLATION AND USE



Place product (On $\Phi 10$ cm cut out)
Screw on



Place product



Screw on



Push the button



The socket will rise to the working position by itself



Wireless charger: just put phone on the socket

① Wireless charging top



With USB charger

② Double side USB charger



Push it down to the close position

