


Note:
(Default: M1/○ Action Button, M2/X Action Button, M3/△ Action Button, M4/□ Action Button) and ↓, ←, →, △, ○, □, X, LB, RB, LT, RT, L3, R3 operation buttons can be switched freely by paddle.

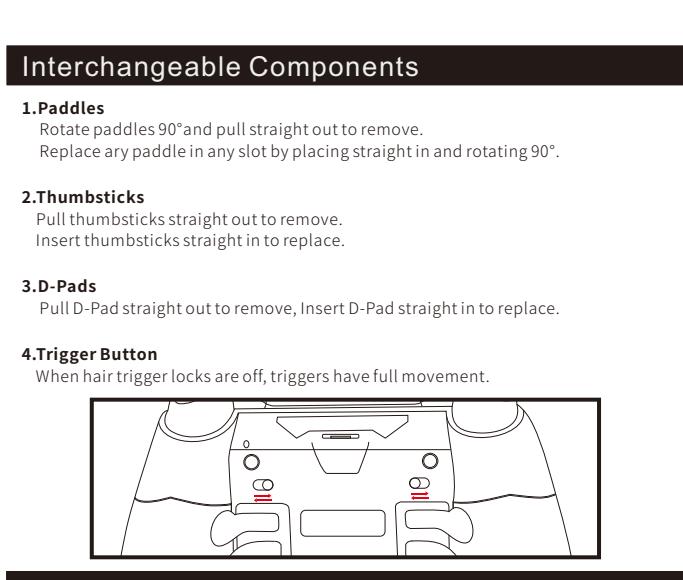

Product Description





This product belongs to P4 wireless controller, which can be used for various games on the P4 console. With this controller, you can experience the immersive feeling during the games.

1) Compatible with all original P4 controller function like buttons, motor corresponding functions, touch functions, audio speakers, stereo headset jacks and Sensor functions.


2) Provide 4 Mn keys to set 4 groups of Macro and Remap functions and there are 14 keys (↑, ↓, ←, →, X, ○, □, △, LB, RB, LT, RT, L3, R3) can add Macro and Remap functions.

3) The arrow keys, thumbstick and 4 Mn back keys are made of hardware materials with magnetic function, which can be replaced or disassembled to meet the needs of different people.

4) When the P4 console is in sleep mode, press the PS button on the controller to wake up the console.

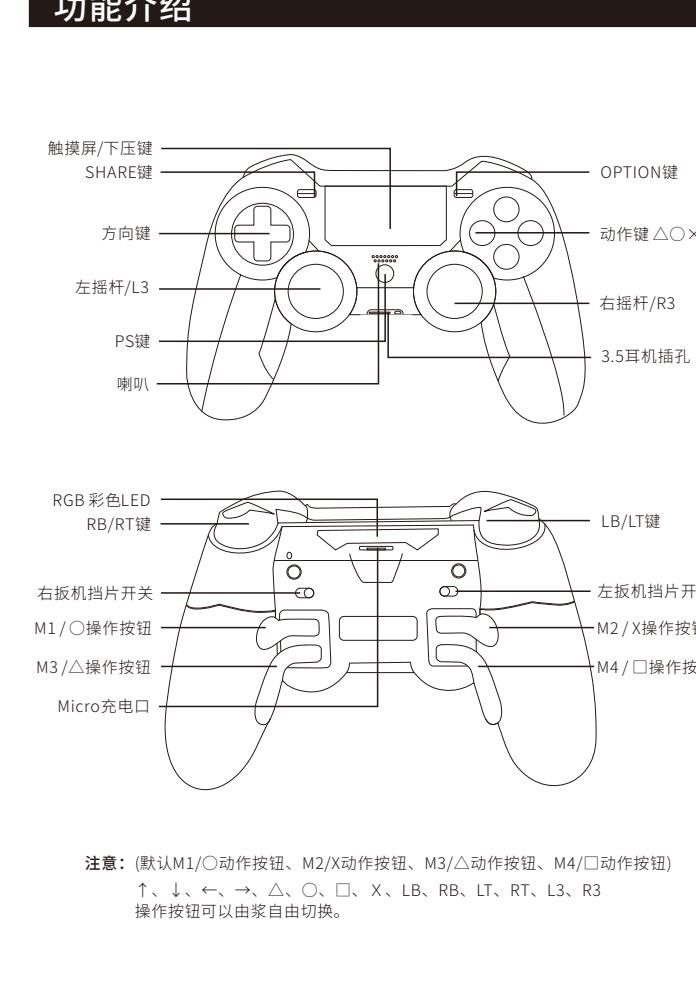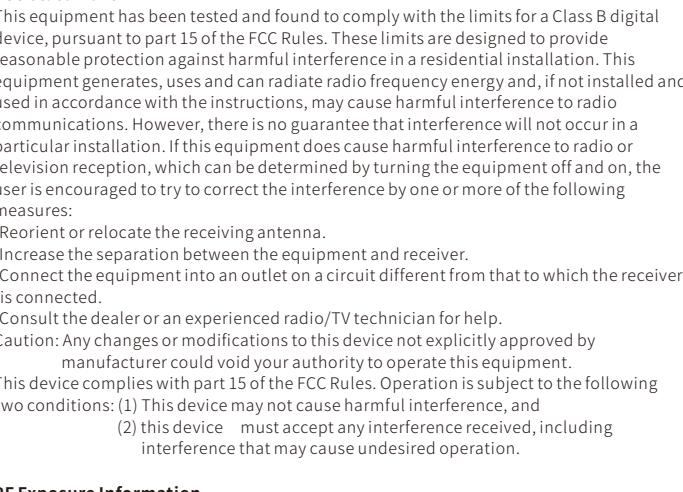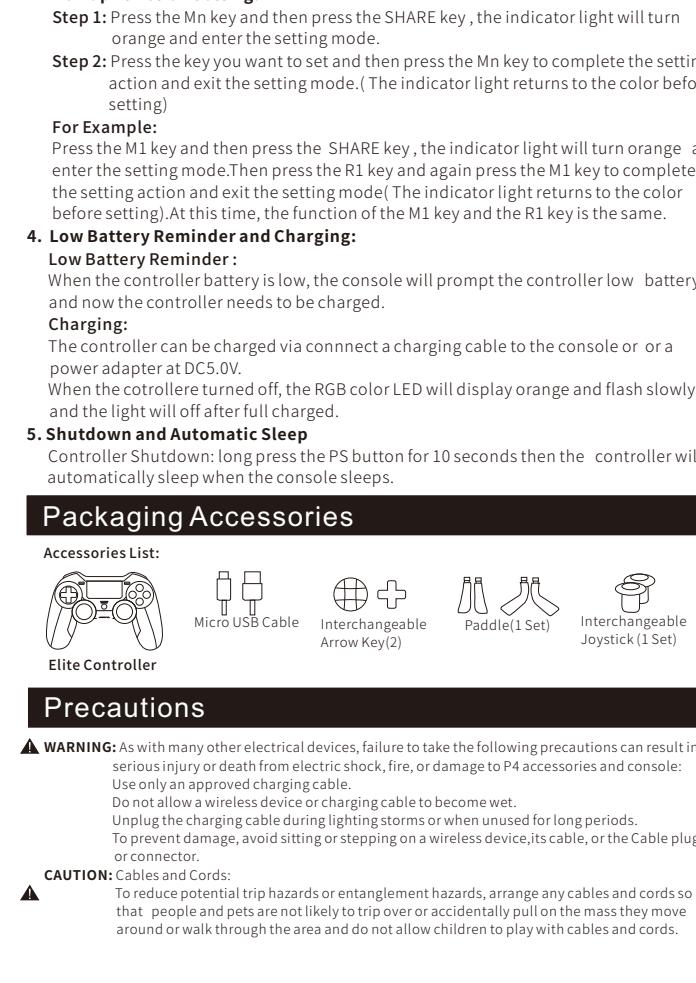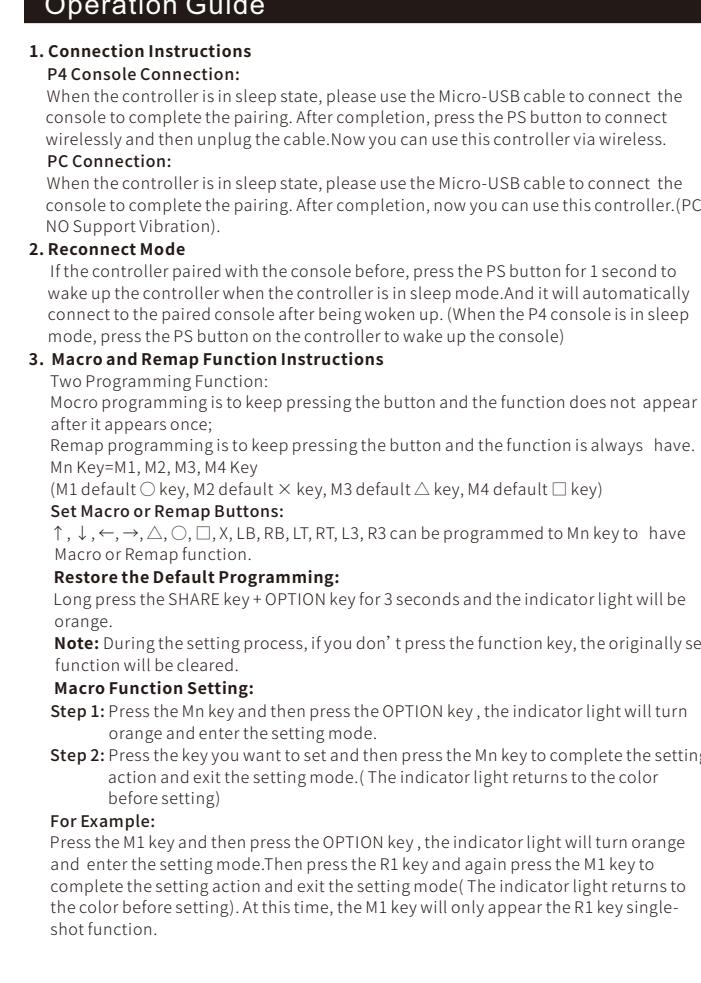

注意: (默认M1/○动作按钮, M2/X动作按钮, M3/△动作按钮, M4/□动作按钮)
↑、↓、←、→、△、○、□、X、LB、RB、LT、RT、L3、R3
操作按钮可以由用户自由切换。

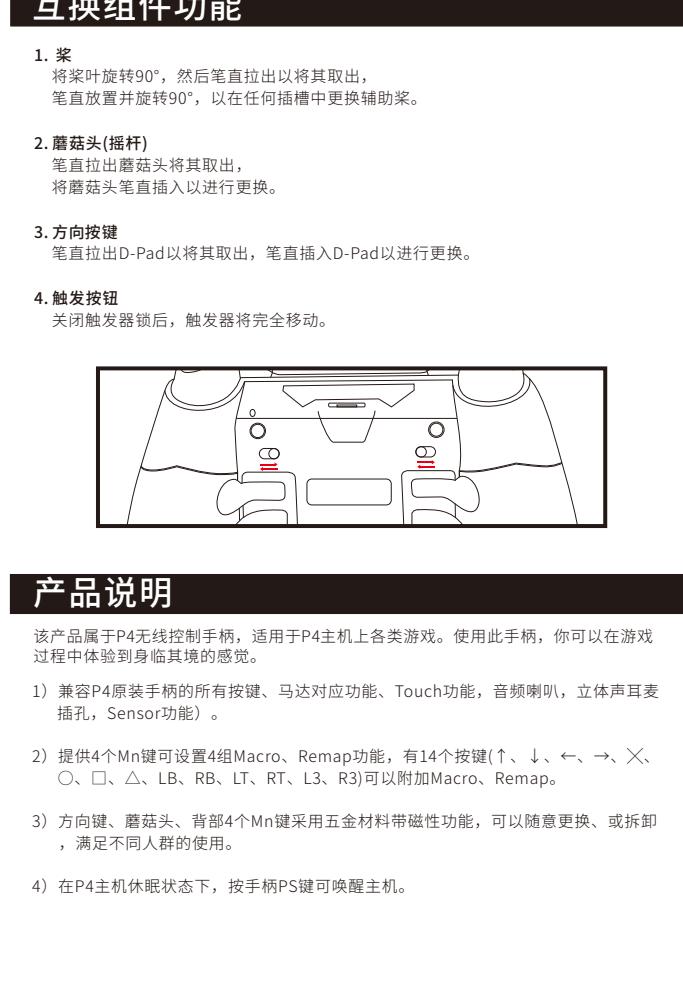

产品说明

该产品属于P4无线控制手柄，适用于P4主机上各类游戏。使用此手柄，你可以在游戏中体验到身临其境的感觉。

1) 兼容P4原装手柄的所有按键、马达对应回应、Touch功能、音频喇叭、立体声麦克风、Sensor功能。

2) 提供4个Mn键可设置4组Macro、Remap功能，有14个按键(↑、↓、←、→、X、○、□、△、LB、RB、LT、RT、L3、R3)可以附加Macro、Remap。

3) 方向键、蘑菇头、背部4个Mn键采用五金材料带磁性功能，可以随意更换、拆卸，满足不同人群的使用。

4) 在P4主机休眠状态下，按手柄PS键可唤醒主机。

