



List
 nes x2pcs
 case x1pcs
 charging cable x1pcs
 on manual x1pcs

Specifications
ABS
Weight:34.7g
port:type-c
Size:23*15*17mm
case size: 49*49*30mm



	operate	Light	Tone
	OH90501 Open the lid of the charging case and take out the two earphones to automatically enter the pairing state, with the white and blue lights flashing rapidly. Long press the touch button of the earphone for 3 seconds to manually power on. Put the earphones into the charging compartment to enter the charging state and automatically power off to disconnect the connection, with the white and blue lights flashing quickly three times and then extinguishing. Long press the touch button of the earphone for 5 seconds to manually power off. After powering on, the left and right earphones automatically enter the pairing mode. After the left and right earphones are successfully paired and in the unconnected device state, double-click any earphone to switch the prompt language.	White and blue lights flashing alternately white lights flash three times Pairing status: White and blue lights flashing alternately. Pairing successful: Left earphone lights off, right earphone white light flashing rapidly, light off after successful connection to the mobile phone White light flashing	power on/开机 power off/关机 English/中文
	After the earphones are successfully paired, they automatically enter the waiting connection state. Open the Bluetooth list of the smart device, search for "OH90501" and click to connect. After the successful connection between the earphones and the smart device, there will be a prompt tone.	Left and right earphone lights extinguished	Connected/ 连接成功
	In the connected state and when playing music, click the touch button of any earphone In the connected state and when playing music, double-click the touch button of the left. In the connected state and when playing music, double-click the touch button of the right. In the connected state, triple-click the touch button of the right earphone. In the connected state, triple-click the touch button of the left earphone. In the connected state, long press the touch button of the earphone for 2 seconds. In the incoming call state, click the touch button of any earphone.	/ / / / / / /	/ / / / / Ding Phone ringtone

Parameters

- ## Troubleshooting

	cause	Resolution
on	The headphones are low on battery	Charge the headphones
	The headphones are low on battery	Charge the headphones
er off	The headphones were not put away	Adjust the position where the headphones are placed
	Automatic low battery	Charge the headphones
ones	The volume is too loud or the environment is too noisy	Adjust the volume or change the environment
	Serious external interference or too far away from the phone	Change the location or be close to your phone
's	The headphones are worn incorrectly or the volume is too low	Adjust the headset wear or volume
	Serious external interference or too far away from the phone	Choose a distraction-free environment or be close to your phone

2. Before using this product for the first time, please fully charge it before using it.
3. The product is not a toy, and children under the age of 12 must be used under the supervision of an adult.
4. Please use a 5V/1A charger that has passed the safety certification of a regular manufacturer to avoid damage to the product caused by a fast charging charger that supports high voltage.
4. Please charge in a safe environment, when charging the charged case, please pull out the charging cable as soon as possible after the power is fully charged to avoid damage to the battery caused by long-term charging. The charging method of the charging case is the Type-C interface.
5. This product has a built-in non-removable rechargeable battery, and repeated charging and discharging of the earbuds will lead to a decrease in battery performance over time, which is normal.
6. This product comes with a healthy battery, if it has not been used for a long time, please charge it at least once a month.
7. If you feel skin discomfort when wearing it due to individual differences, please stop wearing it and consult a doctor.
8. When using this product with Bluetooth connection, please adjust the sound of the earphones to an appropriate volume to avoid hearing damage caused by long-term loud volume.
9. If you use this product while engaging in activities that require concentration, you should avoid driving, operating heavy machinery, or working in places such as driving, climbing, on roads, construction sites, railways, or walking. You should remove your headphones or adjust the volume to ensure that you can hear the sounds around you, including alarms and warning signals.
10. Please follow the relevant regulations of your region or country and use this product as required when driving.
11. This product contains magnetic materials, please keep away from electrical appliances with strong magnetic or electric fields, such as microwave ovens, refrigerators, etc., when using or placing the product.
12. If it is stored and used in this product in an environment with a temperature of 0°C-45°C. When the ambient temperature is below -5°C, battery performance is limited.
13. Do not use this product in places where it is expressly prohibited to use wireless equipment, otherwise it will interfere with other electronic equipment or cause other dangers.
14. Before approaching medical or industrial equipment or boarding a plane, please ask the local staff if they can use it.
15. Before cleaning and maintaining this product, stop using this product, turn off all applications, and disconnect all connections or cables to other equipment.
16. Do not dispose of this product, electronic products, or accessories with local laws and regulations, and do not dispose of electrical and electronic equipment, parts, batteries and other disposable waste.

Do not use abrasive cleaners to clean this product.

Do not allow this product to be heated or close to a fire source, such as a cooking stove.

Do not expose the product to direct sunlight for a long time.

Do not discard this product in fire to avoid explosion.

Do not attempt to disassemble this product to make any modifications, as it does not contain any maintenance components.

Do not use this product in rain.

If you do not plan to use this product for a long time, please store it in a dry environment and charge the headset less once to prolong its life and avoid extreme temperature and dust.

Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.

Batteries may explode if not handled properly.

Do not disassemble or dispose of batteries in fire.

Do not short external contacts, crush, puncture or otherwise tamper with batteries.

Follow local regulations when disposing of used batteries.

Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this device.

