

Customer Services: (978)230-8895(US) Mon-Fri: 9am-6pm(EST) User Manual

Please read this user manual carefully when using this product.

Thank you for purchasing Acer products. For optimum operation, please read this manual carefully before using.

OHR512

Item Name

TWS Wireless Earphones

Product List Headphones x2pcs Charging case x1pcs Type-C charging cable x1pcs Instruction manual x1pcs


Product Description

This TWS earphone is a wireless connectivity-enabled audio product. which is compatible with Android and iOS smartphones, tablets, and other portable electronic devices. By eliminating the constraints of wired connections, it offers users enhanced convenience and unrestricted mobility, catering to a wide range of application scenarios.

Product Specifications Material: ABS Product Weight:38.62g

Charging port:type-c Earphones Size:62.1*27.1*25.3mm

Charging case size: 64.0*30.2*49.2mm

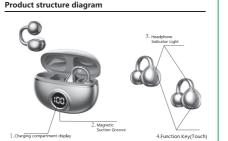



function	operate	Light	Tone		Answer an incoming call	In the incoming call state, the left/right earphone to	double-click sch button	1	Ringtone of your phone
Pair name	OHR512				Reject an	Press the left/right earpho	ne touch	,	,
Root	Headphones in the case of charging bin, take out the headphones automatically boot/headphones off state, Long Touch Key 3 seconds to boot	The blue light is on	Power on/开机		incoming call	button for 2 seconds While on the phone, double	aliah aha	′	′
, ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,					Hang up	left/right earphone touch b	utton	1	/
Shutdown		The red light stays on for 1 second and then	Power off/关机		Low battery alarm	When the voltage of the e than 3.3V, there will be a the ear Powered off	prompt up to	The red light flashes every 5 seconds	Ding Dong
	the earphone	turns off After the left and right ear ears are successfully paired,			Disconnect	Outside the effective com or manually disconnect the connection of the smart d	Bluetooth	The red and blue lights of the main ear flashed alternately, and the secondary ear light went out	Disconnected /断开连接
Pair the left and right earphones	The left and right earphones will automatically enter pairing mode after powering on	the blue and red lights of the main ear will flash alternately, and the light of the secondary ear will be extinguished	Connected/Pairing successfully		Automatic reconnection	After powering on or disco earbuds will automatically in the last connected smart of the effective distance	nnecting, the econnect to evice within	The lights go out	connected /连接成功
Toggle the Chinese and	Without connecting the smart device, double-cick any left/right ear touch	/	English/中文		Charge the headphones	The earphone is put back into the charging bin and automatically shuts down and begins to charge. The red light of the earphone is always on, and the light goes out when it is fully charged			
English prompt tones	key 2 times, language switch, Factory default English When the ears are successfully paired, it will		0.9-4-1-2		The charging bin charges the headphones	activates the screen to show the indicator lamp turns off when the	current charge and headphone is fully	ging bin immediately charges the headph the charging status of the headphone, Ti charged and the charging bin screen sho sen shows the remaining light to go off	he charging ws the
Smart devic connectivity	earbuds are successfully connected to the smart	The lights in the left and right ears are turned off	Connected /连接成功		Charging bin charging	When the battery is too lo	w, charge the	battery with a power adapter wi p and flashes to show the curren	ith a standard
	device, there will be a prompt tone, and the headset indicator will go off			The charging bin is fully charged Charging bin charged screen display always bright num		ys bright number 100			
Toggle Music, Game mode	When the headset is connected to the device, press the left/right ear touch button 4 times to switch the mode,	/	音乐/游戏模式 MUSIC/GAME MODE		Note: When the Bluetooth headset is connected to a smart device and the game mor the usage time and connection distance of the headset will be shortened				s switched,
Play/Pause	After the music player starts, double-click the left/right earphone touch button	/	/	_ '	Headset parameters				
Previous son	After the music player starts, click the left Earphone Touch Button three times	1	/		Product name	•			
Next song	After the music player starts, double-click the right earnhone touch button three times	/	/			ion : Bluetooth 5,4	10. Horn rated 11. Headphone	power :smw battery capacity :3,7V/30mAh (polymer battery
Increase the volume	After the music player starts, click the touch button on the right headset	/	Maximum volume indicator (knock)	4		:AAC/SBC smission distance :10m ncy :2.402GHz2.480GHz	13. Charging in	in battery capacity: 3.7V/200mAl iterface: USB Type-C se time: 66-8 hours	h (polymer batti
Reduce the volume	After the music player starts, click the touch button on the left headset	/	/	6	. Frequency resp	oonse range :20Hz~20KHz			
Voice assista	When the headset is connected to the phone, press the L/R earphone touch button for 2 seconds to wake up the assistant	/	Ding Dong		. Horn size: Φ 10 . Horn sensitivit				

Reject an incoming call	Press the left/right earphone touch button for 2 seconds	/	/		fault
					Doesn't tur
Hang up	While on the phone, double-click the left/right earphone touch button	,	,		The headphor flash red
Low battery	When the voltage of the earbuds is lower than 3.3V, there will be a prompt up to	The red light flashes	Ding Dong		Charging silent
alarm	the ear Powered off	every 5 seconds	• •		Automatic po
Disconnect	Outside the effective connection range, or manually disconnect the Bluetooth connection of the smart device	The red and blue lights of the main ear flashed alternately, and the secondary ear light went out	Disconnected /新开连接		The headphon have an echo There is a mu
	Connection of the smart device	secondary earlight went out	TUITILLE	1 1	There is a mu from the hear
Automatic reconnection	After powering on or disconnecting, the earbuds will automatically reconnect to the last connected smart device within	The lights go out	connected		The other pa
	the effective distance		/连接成功		The signal i
Charge the headphones	The earphone is put back into the charging bin charge. The red light of the earphone is always	and automatically shuts down and s on, and the light goes out when it	begins to is fully charged	'	
The charging bin charges the headphones	The headphone is put into the charging bin, the charg- activates the screen to show the current charge and indicator lamp turns off when the headphone is fully charging status stops, the final charging chamber scr	the charging status of the headphone, TI charged and the charging bin screen sho	he charging ws the		
Charging hip	When the battery is too low, charge the I	hattery with a power adapter wi	ith a standard	- 1	

12 Charging bin battery capacity: 3.7V/200mAh (polymer battery)

cause	Resolution	
The headphones are low on battery	Charge the headphones	
The headphones are low on battery	Charge the headphones	
The headphones were not put away	Adjust the position where the headphones are placed	
Automatic low battery	Charge the headphones	
The volume is too loud or the environment is too noisy	Adjust the volume or change the environment	
Serious external interference or too far away from the phone	Change the location or be close to your phone	
The headphones are worn incorrectly or the volume is too low	Adjust the headset wear or volume	
Serious external interference or too far away from the phone	Choose a distraction-free environment or be close to your phone	
	The headphones are low on battery The headphones are low on battery The headphones were not put away Automatic low battery The volume is too loud or the environment is too noticy Serious external interference or Serious external interference or the volume is too low Serious external interference or the volume is too low	The headphones are low on battery The headphones were not put away Adjust the position, where the headphones are placed Charge the headphones The volume is too loud or the environment to no noisy Serious external interference or The headphones are worn incorrectly or the volume is too low Adjust the volume or charge the headphones Adjust the volume or headphones Adjust the solven. Where the headphones Adjust the solven. Where the headphones Adjust the volume or charge the headphones Adjust the volume or headphone are placed. Adjust the volume or charge the headphones Adjust the volume or charge the environment. Charge the headphones Adjust the volume or charge the volume or charge the environment. Charge the headphones Adjust the volume or charge the volume o

Safety guidelines

other household waste.

1 Refore using this product for the first time please fully charge it before using it he product is not a toy, and children under the age of 12 must be used under the supervisio Please use a 5V/1A charger that has passed the safety certification of a regular manufacture

- to avoid damage to the product caused by a fast charging charger that supports high voltage. 4. Please charge in a safe environment, when charging the charging case, please pull out the harging cable as soon as possible after the power is fully charged to avoid damage to th tery caused by long-term charging. The charging method of the charging case is the Type-C
- This product has a built-in non-removable rechargeable battery, and repeated charging an scharging of the earbuds will lead to a decrease in battery performance over time, which is mal for all rechargeable batteries
- This product comes with a healthy battery, if it has not been used for a long time, please harge it at least once a month.
- If you feel skin discomfort when wearing it due to individual differences, please sto rearing it and consult a doctor
- When using this product with Bluetooth connection, please adjust the sound of the earphone
- o an appropriate volume to avoid hearing damage caused by long-term loud volume. If you use this product while engaging in activities that require concentration, you should pay attention to your own safety and the safety of others, such as when driving or cycling, on roads, construction sites, railways, or walking. You should remove your headphones or adjus
- the volume to ensure that you can hear the sounds around you, including alarms and warning 10. Please follow the relevant regulations of your region or country and use this product as
- 11. This product contains magnetic materials, please keep away from electrical appliances with
- strong magnetic or electric fields, such as microwave ovens, refrigerators, etc., when using or placing the product.
- 12. It is recommended to use this product in an environment with a temperature of -0°C~45°C When the ambient temperature is below +5°C battery performance is limited
- 13. Do not use this product in places where it is expressly prohibited to use wireless equipment otherwise it will interfere with other electronic equipment or cause other dangers.
- 14. Before approaching medical or industrial equipment or boarding a plane, please ask the local staff if they can use it.
- 15. Before cleaning and maintaining this product, stop using this product, turn off all
- applications and disconnect all connections or cables to other equipment
- 16. Please dispose of waste electronic products properly in accordance with local laws and regulations, and do not dispose of electrical and electronic equipment, parts, batteries and

- Do not use abrasive cleaners to clean this product.
- . Do not allow this product to be heated or close to a fire source, suchas a cooking stove.
- Do not expose the product to direct sunlight for a long time.
- Do not discard this product in fire to avoid explosion.
- . Do not attempt to disassemble this product to make any modifications as i does not contain any maintenance components.
- Do not use this product in rain.
- If you do not plan to use this product for a long time.please store itin a dr environment and Charge the headset less once to prolong itslife and avoid
- Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.
- Batteries may explode if not handled properly.
- Do not disassemble or dispose of batteries in fire.
- Follow local regulations when disposing of used batteries.

FCC Warnning This equipment has been tested and found to comply with the limits for a

Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiateradio frequency energy and, if not installed and used in accordance with the insructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures.

- Reorent or relocate the receiving antenna. ·Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ·Consult the dealer or an experienced radioTy technician for help.
- Caution: Any changes or modifications to this device not explicitly

approved by manufacturer could void your authority to operate this Do not short external contacts, crush, puncture or otherwise tamper with batteries.

> This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept amy interference received, including interference that may cause unde sire d operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment, This eguipment should be installed and operated with minimum distance 0cm between the radiator and your body.



产地:中国•广东