


## Same Wireless Earphones

Product List

Smartphones	x2pcs
Protective case	x1pcs
Charging cable	x1pcs
User manual	x1pcs

**Product Specifications**  
 Material: ABS  
 Net Weight: 40g  
 Charging port: type-c  
 Dimensions Size: 22.5\*18.45\*18.65mm  
 Shipping case size: 55.3\*55.4\*28.2mm

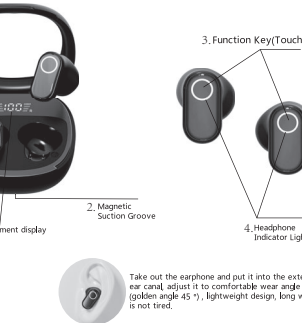

function	operate	Light	Tone
Pair name	OHR513		
Boot	Headphones in the case of charging bin, take out the headphones automatically, boot/headphones off state, Long Touch Key 3 seconds to boot	The white breathing light flashes	Power on/开机
Shutdown	Put the earphone into the charging bin and shut down automatically. Press the touch button for 5 seconds to shut down the earphone	The white light flashes three times	Power off/关机
Pair the left and right earphones	The left and right earphones will automatically enter pairing mode after powering on	After the left and right ear ears are successfully paired, the blue and red lights of the main ear will flash alternately, and the light of the secondary ear will be extinguished	Connected/Pairing successfully
Toggle the Chinese and English prompt tones	Without connecting the smart device, double-click any left/right ear touch key 4 times, language switch, Factory default English	/	English/中文
Smart device connectivity	When the ears are successfully paired, it will automatically enter the state to be connected. At this time, open the Bluetooth list of the smart device to search and click "OHR513" to connect. After the earbuds are successfully connected to the smart device, there will be a prompt tone, and the headset indicator will go off	The lights in the left and right ears are turned off	Connected /连接成功
Toggle Music/ Game mode	Connect the device to the state of the left and right ear touch keys 4 times, mode switching, the factory default music mode.	/	音乐/游戏模式 MUSIC/GAME MODE
Play/Pause	After the music player starts, double-click any left/right headphone touch button	/	/
Previous song	After the music player starts, click the left Earphone Touch button three times	/	/
Next song	After the music player starts, double-click the right earphone touch button three times	/	/
Increase the volume	After the music player starts, click the touch button on the right headset	/	Maximum volume indicator (蜂鸣)
Reduce the volume	After the music player starts, click the touch button on the left headset	/	/
Voice assistant	Connect the state, long press the left earphone touch button 2 seconds to release, you can wake up the voice assistant	/	Ding Dong
Clear the pairing history	When not connected, tap the touch button of any left and right earphones 5 times	/	power off/off

Answer an incoming call	When the call is incoming, double-click any left or right earphone function key	/	Ring your
Reject an incoming call	When the call is incoming, press and hold the function button of any left or right earphone for 2 seconds	/	/
Hang up	While on the phone, double-click the touch button on any headset	/	/
Low battery alarm	When the voltage of the earbuds is lower than 3.3V, there will be a prompt up to the ear Powered off	The white light flashes every 5 seconds	Ding
Disconnect	Outside the effective connection range, or manually disconnect the Bluetooth connection of the smart device	The white breathing light of the main earphone flashes, and the secondary earphone light is off	Discon /断开
Automatic reconnection	After powering on or disconnecting the earbuds will automatically reconnect to the last connected smart device within the effective distance	The lights go out	conn /连接
Charge the headphones	The earbuds will automatically turn off and start charging when they are put back into the charging compartment, the white light of the earbuds will be always on, and the light will turn off when they are fully charged		
The charging bit charging of the headphones	The headphone is put into the charging bin, the charging bin immediately charges the headphone and activates the screen to show the current charge and the charging status of the headphone. The charging status is shown off when the headphone is fully charged and the charging bin screen shows the charging status stops, the final charging chamber screen shows the remaining light to go off after 35		
Charging bin charging	When the battery is too low, charge the battery with a power adapter with a standard output of 5V. The battery screen lights up and flashes to show the current battery		
The charging bin is fully charged	Charging bin charged screen display always bright number 100		

Note: When the Bluetooth headset is connected to a smart device and the game mode is switched, the usage time and connection distance of the headset will be shortened

## Headset parameters

Product name: OHSR13	10. Horn rated power: 4mW
Support mode : Bluetooth 5.4	11. Headphone battery capacity : 3.7V/25mAh (polymer)
Bluetooth version : AAC/SBC	12. Charging bin battery capacity : 3.7V/200mAh (polymer)
Bluetooth transmission distance : 10m	13. Charging interface : USB Type-C
Carrier frequency : 2.402GHz-2.480GHz	14. Headset use time : >3-4 hours
Frequency response range : 20Hz-20KHz	15. Earphone single charging time : >1.5 hours
Horn size: Φ 13mm	16. Charging time : >1.5 hours
Horn sensitivity : 103dB ± 3dB	17. Charge the headset : About 2 times
Horn impedance : 32 Ω ± 5%	18. Shutdown standby time : >1800 hours

## Simple troubleshooting

fault	cause	Resolution
Doesn't turn on	The headphones are low on battery	Charge the headphones
The headphones flash red	The headphones are low on battery	Charge the headphones
Charging is silent	The headphones were not put away	Adjust the position where the headphones are placed
Automatic power off	Automatic low battery	Charge the headphones
The headphones have an echo	The volume is too loud or the environment is too noisy	Adjust the volume or change the environment
There is a murmur from the headphones	Serious external interference or too far away from the phone	Change the location or be close to your phone
The other party's voice is quiet	The headphones are worn incorrectly or the volume is too low	Adjust the headset wear or volume
The signal is intermittent	Serious external interference or too far away from the phone	Choose a distraction-free environment or be close to your phone

1. Before using this product for the first time, please fully charge it before using it.
2. The product is not a toy, and children under the age of 12 must be used under the supervision of an adult.
3. Please use a 5V/1A charger that has passed the safety certification of a regular manufacturer to avoid damage to the product caused by a fast charging charger that supports high voltage.
4. Please charge in a safe environment, when charging the charging case, please pull out the charging cable as soon as possible after the power is fully charged to avoid damage to the battery caused by long-term charging. The charging method of the charging case is the Type-C interface.
5. This product has a built-in non-removable rechargeable battery, and repeated charging and discharging of the earbuds will lead to a decrease in battery performance over time, which is normal for all rechargeable batteries.
6. This product comes with a healthy battery, if it has not been used for a long time, please charge it at least once a month.
7. If you feel skin discomfort when wearing it due to individual differences, please stop wearing it and discontinue use.
8. When using this product with Bluetooth connection, please adjust the sound of the earphone to an appropriate volume to avoid hearing damage caused by long-term loud volume.
9. If you use this product while engaging in activities that require concentration, you should

- Do not use abrasive cleaners to clean this product.
- Do not allow this product to be heated or close to a fire source, such as a cooking stove.
- Do not expose the product to direct sunlight for a long time.
- Do not discard this product in fire to avoid explosion.
- Do not attempt to disassemble this product to make any modifications, as it does not contain any maintenance components.
- Do not use this product in rain.
- If you do not plan to use this product for a long time, please store it in a dry environment and charge the headset less once to prolong its life and avoid extreme temperature and dust.
- Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.
- Batteries may explode if not handled properly.
- Do not disassemble or dispose of batteries in fire.
- Do not short external contacts, crush, puncture or otherwise tamper with batteries.
- Follow local regulations when disposing of used batteries.


the dealer or an experienced radioTy technician for help.

Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this device.

complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

ice may not cause harmful interference, and (2) this device  
pt any interference received, includinginte rference that may  
e sire d operation.

ment complies with FCC radiation exposure limits set forth  
controlled environment, This equipment should be installed  
ted with minimum distance 0cm between the radiator and  
.

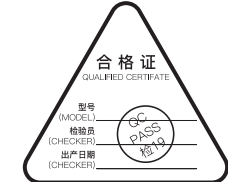

产地：中国·广东