



FOLLOW US



WWW.FIELDSHEER.COM

serial number



ONLINE REGISTRATION



1 YEAR

PRODUCT WARRANTY

1 AN GARANTIE DU PRODUIT
1 AÑO DE GARANTÍA DEL PRODUCTO



U.S. BASED

CUSTOMER SERVICE

SERVICE CLIENTELE BASE AUX ETATS-UNIS
SERVICIO DE ATENCIÓN AL CLIENTE
UBICADO EN ESTADOS UNIDOS



HEATED GEAR
HEATED SOCKS & INSOLES



FIELD SHEER®

USER MANUAL

 
MANUEL D'UTILISATION
MANUAL DE INSTRUCCIONES

Thank you for purchasing our battery powered Premium Heated gear. Your garment is designed to deliver heat on demand.

To ensure optimal performance of your Heated gear. Please carefully read through this user manual prior to using the garment.

Stay up to date with the latest product information by registering your garment at ***fieldsheer.com/product-registration***. You can also find other great Fieldsheer products at fieldsheer.com

The function of wireless remote control in this product is to use wireless remote to connect heating products for temperature control and wireless adjustment.

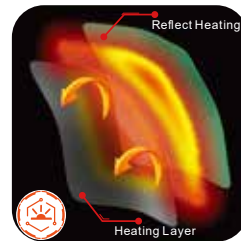

Proprietary Fieldsheer® powered by Mobile Warming® technology is specially engineered for cold weather conditions. Mobile Warming®'s comprehensive heating technology keeps you warm and comfortable in all weather conditions. Our exclusive heating technology utilizes ultra-fine fiber elements powered by lightweight, rechargeable, Lithium-Ion batteries. As heat builds, Mobile Warming® technology reflects and directs heat back towards the body ensuring that you stay warm. The combination of unique materials, construction techniques, and innovative design results in the most advanced heated gear available.



Garment Care	4
Entretien du vêtement	17
Cuidado de la prenda	31
Battery use and Maintenance.....	5-6
Utilisation et entretien de la batterie	18-20
Uso de la batería y mantenimiento	32-34
Quick Start Guide.....	7-9
Guide de démarrage rapide	21-24
Guía de inicio rápido	35-38
Heat Ratings.....	10
Évaluation de la chaleur	24
Potencias caloríficas	38
Warranty and Legal.....	11-12
Garantie et mentions légales	25-26
Garantía y aspectos legales	39-40

HEATED SOCKS



- Disconnect battery pack from the garment(s)
 - Machine wash delicate cycle in warm water
 - Tumble dry with low heat
 - Do not wring
 - Do not dry clean
 - Do not bleach or use other harsh chemicals
 - Do not Iron
- Recommend to store in cool dry place if storing for extended period of time

HEATED INSOLE



- Refer to your garment care label for care details
- Spot cleaning only. dry flat
 - No bleach, iron and wring
 - Fully dry before turning on.
 - Fully charge the battery every 3-6months.
 - Turn off in case of excessive temperature and when not in use.

 


Mobile Warming®'s powerful lithium-ion battery technology was designed and engineered to provide you with safe and reliable power, allowing you to be warm and comfortable. Please follow the instructions below to optimize your lithium-ion battery usage.


USB CHARGING BATTERY

To charge your battery, use the supplied micro-USB cable. Connect the USB end to your computer or any USB powered source like the USB wall adaptor included with your phone or tablet.

HEATED SOCKS

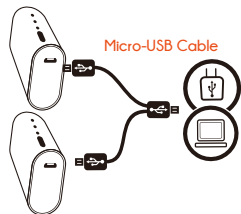

HEATED INSOLE

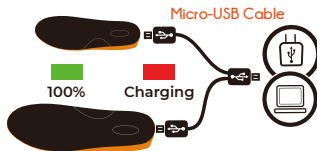 

Do not use battery if you notice a change of shape (lumps), over-heating when charging or if rust or corrosion on the battery connectors is found. Use only with the charging adaptor provided with your product to charge your battery.



Never dispose of batteries in the garbage. Disposal of batteries in the garbage is unlawful under state and federal environmental laws and regulations. Always take used batteries to your local battery-recycling center. This product contains chemicals known to the state of California to cause cancer and birth defects or other reproductive harm

IMPORTANT: This product is intended to be used by an adult and therefore it is sole responsibility of purchaser to follow detailed instructions and warnings. The Purchaser agrees to indemnify Manufacturer for any unintended use/misuse.



Avoid running Lithium-Ion batteries completely dead. This will result in performance problems and reduced battery life.



• Avoid allowing your Micro-USB or DC Jack ports from being contaminated with debris that could interfere with operation. Suggest to check ports before each use.



• Lithium-Ion batteries by nature have diminished capacity output in extremely cold temperatures. We recommend keeping batteries inside the garment to maximize battery performance.



• Do not allow Mobile Warming battery(s) to come in contact with water or liquids. If water or other liquids enter the battery interior, immediately unplug the battery from the garment. Do not use if you feel the battery is compromised.

BATTERY STORAGE

- Disconnect battery from garment.
- Power off battery(s) if applicable.
- Fully charge battery(s) prior to storage
- Keep battery(s) in cool dry place out of direct sunlight
- Charge every 6 months to maintain battery life. It is important to keep your battery charged
- Do not store Mobile Warming batteries below - 4 °F (- 20 °C)



• Power off battery(s) if applicable.



• Fully charge battery(s) prior to storage



• Keep battery(s) in cool dry place out of direct sunlight



• Charge every 6 months to maintain battery life.
It is important to keep your battery charged



• Do not store Mobile Warming batteries below - 4 °F (- 20 °C)



HEATED SOCKS

When Connecting the heated socks to the included Mobile Warming® Powersheer™ battery, please follow below Quick Start Guide. For More Information, please visit us at fieldsheer.com or scan below 2D barcode to quickly access the information.



 
1. Fully charge your battery to 100%.

2. Open the battery pocket located on the waist of the Socks and plug the battery(s) into the wire harness.



3. TURN ON or OFF your Fieldsheer® socks by pressing and holding for 2 seconds the button located on your battery until the LED comes ON.


MW37V022 / MW37V122

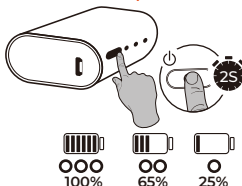

4. Slide the battery into the pocket.




 5. locate the power model number on your battery & remote control



MWRA37V (Remote Control) / MW37V122
Remote Control for Heated socks

 6-1. Press and release the control to adjust heat levels to reach your desired setting.

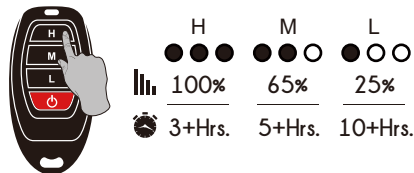


	H	M	L
	● ● ●	● ● ○	● ○ ○
	100%	65%	25%
	3+Hrs.	5+Hrs.	10+Hrs.

6-2. To stop your garment heating, press and hold the control button



 
6-3. To power off your garment, press and hold the control button until the LED lights turn off. If you plan to not use your garment for more than a few days, we recommend you unplug your batteries and charge them.

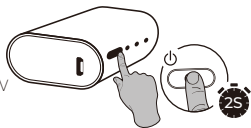

MW37V022(Battery)


NON-Wireless remote control for Heated socks

 6-1. Press and release the battery button to adjust heat levels to reach your desired setting.

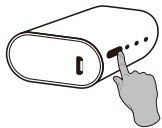

	H	M	L
	●●●●	●●●○	●○○○
100%	65%	25%	
3+Hrs.	5+Hrs.	10+Hrs.	

 6-2. To power off your garment, press and hold the control button until the LED lights turn off. If you plan to not use your garment for more than a few days, we recommend you unplug your batteries and charge them.

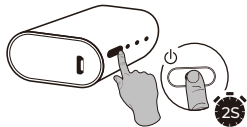

HEATED INSOLES

1. To charge your heated insoles, plug the included dual Micro USB cable into the micro USB port on the back of each insole. Plug the USB-A into the included wall charger or powered USB port

2. Charge for 4+6 hours. Red LED light indicates charging state. Green LED light indicates fully charged 100%



3. To turn heated insoles on or off press and Hold button on back of insoles for 2 seconds.

4. Use remote control to set desired heat level. or press the power button on the back of each insole.


MWRA37V (Remote Control) Remote Control for Heated Insoles



	H	M	L
	●●●●	●●●○	●○○○
100%	75%	50%	
2 Hrs.	3 Hrs.	5 Hrs.	

5. The LED light on back of insole indicates the current heating level. Red(High), Yellow(Medium) and Green(Low).

 6. Trim insoles to fit if necessary. Make sure not to trim insoles too short. you can use you existing shoe's soles as a template. Do not cut the inner most trim line, to avoid damage of the internal heating system.



7. Replace your shoe's existing insole with your heated insoles.



8. To stop your insoles heating, press and hold the control button

For more information or to see other products with Mobile Warming® technology, please visit us at mobilewarming.com

HEAT RATINGS

NOTE: Heat and time are estimated and may vary depending on conditions. Exposing battery to extreme temperatures may impact these estimates.

 **Heated Socks**
3.7V Power Ratings Based on Fully Charged Battery



MW37V122
3.7V 2200mAh



 **Insoles Heat Ratings**
3.7V Power Ratings Based on Fully Charged Battery





LIMITED ONE YEAR WARRANTY

Fieldsheer Apparel Technologies warrants to the original purchaser of this Fieldsheer® branded product (the“Product”) that the construction, electrical heating components and battery of the Product shall be free from factory defect in materials and workmanship for a period one (1) year from the date of original purchase when the Product is purchased from an authorized reseller and used as recommended by Fieldsheer Apparel Technologies. During the warranty period, Fieldsheer Apparel Technologies will, at its option and at no additional charge to you, repair or replace the Product, or any part of the Product, if it becomes defective, malfunctions, or otherwise fails to conform with this Limited One Year Warranty.

LEGAL

Any damage caused to any Fieldsheer® products by misuse, abuse, improper care, accident, normal wear and tear, or the natural breakdown of materials over an extended period of time and use are not covered in this warranty. Any alterations or repairs (attempted or otherwise) performed on any Fieldsheer® products voids any and all warranties offered by Fieldsheer® for that particular item.

Fieldsheer®, Mobile Warming®, Stay Warm, Stay Comfortable, MW connect™ and its related logos and images are property of Tech Gear 5.7 Inc and/or its affiliated companies

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.