

 
 
White Noise Machine for Sleep




"White Noise Machine" User's Manual

Thank you for using our products, please read it carefully before starting up.

Product description:

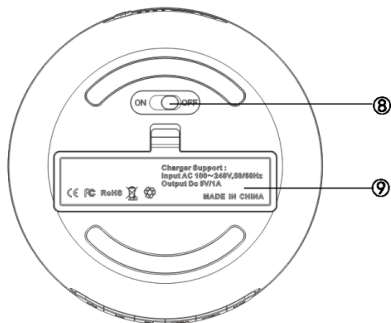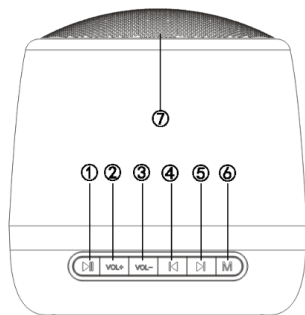

 - ① Music Play/Pause ② Volume Up ③ Volume Down
④ Last Sound ⑤ Next Sound ⑥ Night Light/ Mood Light Switch
⑦ Touch Light/Speaker Net ⑧ Power Button ⑨ 18650 Battery Cover

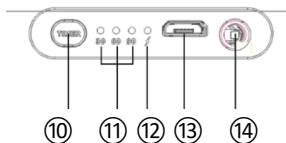

- ⑩ Timer Button
⑪ Timer Indicator Light
⑫ Power Indicator Light
⑬ USB Power Port
⑭ 3.5mm Headphone Jack

Battery compartment(use 18650 lithium battery)Please pay attention to positive and negative terminal

Specification:

Operating Voltage:3.7V(Support 18650 rechargeable lithium battery)

Dynamic Current:No Light < 200 mA Light up < 450 mA

Quiescent Current:20uA

Product dimensions:Φ150×32.5mm (Not including the lampshade)

Speaker:Diameter 75mm 4 Ω 3 W

Power supply:Input AC 100~240V < 50/60Hz










Output DC 5V,1A

Characteristics:

1. There are 28 soothing sounds build into the product
(White noise,pink noise,brown noise,wall fan sound,fan sound,wind sound,bonfire,fire,ocean,spring water sound,underwater,light rain sound,thunderstorm sound,uterus,snoring,yawn,heartbeat,clock ticking,wind chimes,night forest,bird song,cricket,frog,aircraft cabin, train,Relax,lullaby,music box)
2. Support earphone listening.
3. Timer function,28 soothing sounds.
4. Bedside night light function/Ambient atmosphere light function.
5. AC adapter power or detachable 18650 battery powered.
6. Support touch button to adjust the light.

Parts: USB cable*1 User's Manual*1 Noise machine*1

Instruction manual:

1. Power on: Insert the USB charging cable / or install the 18650 battery, turn  the button to the ON, the machine plays music and completes the booting action.
2. Play: There are 28 build-in soothing sound in the sleep sound therapy machine, Play music when you turn it on, play the default 1 white noise, press  button to pause, use   to change previous or next button.
3. Volume: There are 32 volume levels, press **VOL+** **VOL-** button to adjust the volume up or down while playing a sound, press and hold **VOL+** **VOL-** volume button to quickly increase or decrease the volume.
4. You can enjoy soothing sounds after the 35mm headphone jack is inserted into the headset.
5. Night light/Mood light function: Press  button to switch night light and mood light mode, Touch the top speaker net to adjust the brightness of the night light and the color of the mood light; Short press(the top speaker net): In the night light mode, it is a switch that controls the light to be turned on or off; In the mood light mode, it is change the color of the mood light. Long press(the top speaker net): adjust the brightness of the light (Note: Mood light mode cannot adjust the brightness of the light)
6. The default mode of timer function is infinite loop playback. After activate timer  button:    LED lights up, indicating

countdown 30 minutes, 60 minutes, 90 minutes to play respectively. No LED light up, this will be the regular play mode (uncontrolled by time, always plays the current music in a loop). The default is the infinite loop playback mode. After the timer button is activated, the timer is over, the sound stops, and the LED light turns off.



7. Power off: In the machine startup state, you can toggle switches to OFF to shut down the machine.
8. Charging battery: For example, after purchasing 18650 lithium battery installed, connect the power adapter and start charging the lithium battery, charging time is determined by the capacity of the selected 18650 lithium battery.
9. Power indicator status:
Single blue light display: normal standby state (non-charged)
Single red light display: Battery charging status (non-standby)
Single blue light flashed: The battery is low and needs to be charged.
Blue/red light is display at the same time: normal standby state (charging)
10. Memory function: support no electricity memory, adjust your favorite volume, song, pause the play button, will remember the current state, subsequent power-on is the default state.


User attention

There is no sound after the power is switched on, please check if the battery is too low and connect power to try again.

If you can't charge, please connect the power, check if the indicator is working, refer to article 9, indicator status description.

Unable to play music troubleshooting solution: Check if the power light



○ is on blue. If no blue light is on, please turn the  switch to OFF to turn off the power and then turn it on again.

If the above action is invalid, the machine play still cannot be recovered. Please unplug the charger, remove the battery, leave it in the powerless state for 10 minutes, re-plug it and repeat the above steps. If the touch light is out of control, please pay attention to whether the charger is a qualified charger. If the detection device is abnormal, you can use the computer USB to supply power for inspection.

Precautions:

Please do not remove or repair the product to avoid damage.

Please keep them away from the water and flood them to avoid damage to the product.

Please stay away from high temperature and fire protection resource.

Do not wipe or clean the product with a corrosive detergent.

Please wipe the surface with a soft wet towel.

Service Quality Assurance:

Please contact with the seller if there is any problem with the product.

One year warranty. The warranty period shall be subject to the invoice date.

Any of the following conditions, not included in the warranty.

Damaged due to improper handling, storage or maintenance, The invoice model is inconsistent with the product model or the invoice is changed, Products damaged by force majeure do not included in our warranty and our customer service center will serve you wholeheartedly.

WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The device has been evaluated to meet general RF exposure requirement, the device can be used in portable exposure condition without restriction