

# Dreams Begin with Dreamegg

Smart white noise machine



## USER MANUAL

# GETTING START

## Step 1 : Plug it in

Connect the provided power cable to Dreamegg Nite 1, then plug it into your power outlet. Always keep your Nite 1 plugged in.



## Step 2 : Download the App


Search and download the “**Tuya Smart**” app from the Apple App or Google Play store.



## Step 3 : Connect your Dreamegg





Make sure your phone is connected to a secure **2.4GHz** WiFi network and the app is allowed to access your location, connect network, and use Bluetooth.

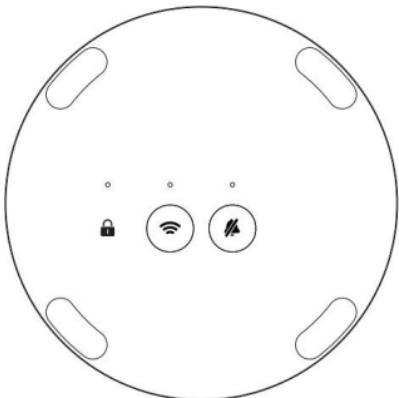

Long press the pairing button  until the indicator light flashes white and the display flashes "P". This indicates that the device has entered pairing mode.

Open App and tap "Add device"

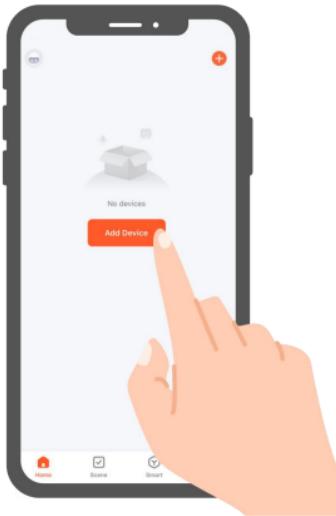

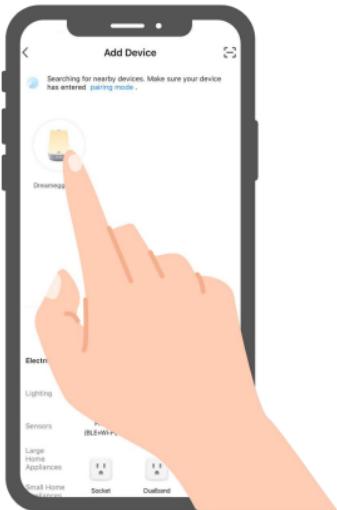

Follow the on-screen steps to connect your Dreamegg Nite 1.

Select 2.4GHz Wi-Fi network and enter the password to complete connection.

**Note:** Make sure both your phone and device are connect to 2.4GHz Wi-Fi network, 5GHz will fail to pair.



# USING YOUR DREAMEGG



### Light Button

Short press : Select light mode  
Long press : Turn off the light

### Volume Down

### Previous Track

### Pause Play Button

Short press : Play / Pause  
Long press : Turn off the light and sound


### Volume Up

### Next Track

### Multi-Fuction Button

Short Press: Cycle through favorites / Snooze (When the alarm goes off )

Long Press: Adjust brightness / Turn off the alarm today (When the alarm goes off )

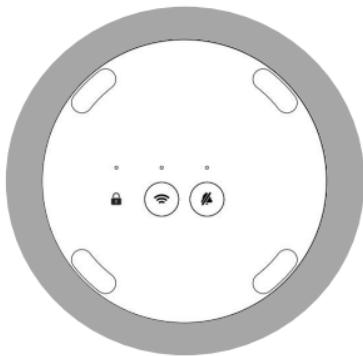

### Child Lock Indicator

Light Red : Child lock is enabled

### Wi-Fi Paring Button & Wi-Fi Pairing Indicator




Long Press : Enter the pairing mode  
Flash White : Pairing mode

### Alarm disabled button & Alarm disable Indicator



Long Press : Alarm disabled mode  
Light White : Alarm is disabled

# CONTROL YOUR DREAMEGG VIA APP

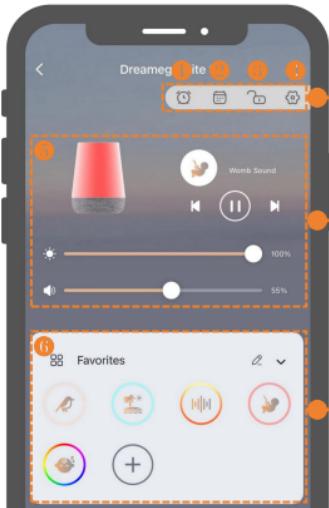


- ① Alarm
- ② Routine
- ③ Child Lock
- ④ Settings

- ⑤ Sound and Brightness Control



- ⑥ Custom Favorite

- ⑦ 3 Light Modes

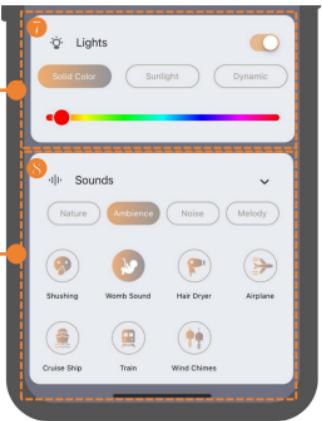

- ⑧ 4 Sound Options

11 Nature sounds / 7 Ambient Sounds /  
6 Background Noises / 10 Relaxing  
Melodies

# SAFETY INFORMATION

**IMPORTANT:** Please read and comply with all of the instructions and warnings provided in this manual before using the product. Failure to comply with the instructions and warnings provided herein may result in inaccurate results or damage to the product itself.

- Parents assume all responsibility for selecting volume and sound settings that are appropriate for their child.
- Never place against baby's ears or in a crib or bed. Always check with child's pediatrician prior to using any sound machine.
- Always keep at least three feet away from children as the cord can pose a strangulation hazard.
- Not a toy and not for teething.
- Put the unit away from heat source, dust or vibration.
- Avoid placing the unit in rain or humid place, keep it dry.
- Put the unit away from heat source, dust or vibration.
- Avoid dropping objects or spilling liquids onto the unit.
- Do not put any stuff on this product.
- Use provided power cord for the sake of safety.
- Do not operate the unit with a damaged cord or after malfunction occurs, or damaged in any manner.
- Do not remove the power plug with wet hands as it may cause electrical shock.
- The unit should be cleaned regularly with a soft, dry cloth. Do not use any liquids or sprays (including solvents, chemicals or alcohol) or abrasives to clean.

# FCC DISCLAIMER

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

## PACKAGE CONTENTS



Sound Machine



Power Code



User Manual

## THINGS Nite 1 CAN DO



### Change sound and volume

Use the app or press the buttons to set the volume to a comfortable level and choose your preferred sound from a variety of white noises, nature sounds, and melodies.



### Choose a custom color and brightness

Use the app to choose your preferred color and brightness.



### Preset a favorite

Use the app to preset the light and sound settings as favorites. Press the multi-function button to cycle through your favorites.



### Customize a routine

Personalize a routine to fit your child's schedule, choosing from the variety of colors and sounds in the app.



### Dimmable clock

Dim or turn off the clock in the app. Visit "Clock Display" under settings.



### Set an alarm

Use the app to set an alarm with soothing sounds and your preferred color.

Want to snooze? Press Multi-Fuction Button for another 9mins.



### Child lock

Use the app to enable or disable the child lock function.

# QUESTIONS & ANSWERS

**Q** Fail to turn on after plugging in.

**A** ①Make sure you are using the provided power code and the power is not damaged.  
②Check if the device is connected to an appropriate electrical outlet correctly.

**Q** Cannot connect my Dreamegg to APP?

**A** ①Check if the device is in WI-FI pairing mode. When in WI-FI pairing mode, the indicator light should flash white, and the display should show a flashing "P." Press and hold the Wi-Fi pairing button on the bottom of the device to enter setup mode.  
②Ensure the app is allowed to access your location, connect network, and use Bluetooth. Go to your phone's settings and enable these permissions.  
③Confirm your phone is connected to a 2.4GHz Wi-Fi network. Both your phone and the device need to be on the same 2.4GHz Wi-Fi network for proper connectivity.

**Q** Display not turning on.

**A** ①Check if the display is turned off in the app settings. Make sure to enable the display.  
②Check that the display brightness is not set too low. Go to the app settings and increase the display brightness.

**Q**

Alarm set but not ringing

**A**

- ①Check if the device is in alarm disabled mode. When in this mode, the alarm icon on the display will be off, and the alarm disabled indicator light at the bottom will be on. Press and hold the alarm disabled button on the bottom of the device to exit this mode.
- ②Make sure that the alarm volume is not too low. Go to the alarm section in the app and increase the alarm volume.
- ③Make sure the alarm is actually turned on. Open the alarm section in the app and enable the alarm.

**Q**

Top button is not responsive.

**A**

Check if a child lock is enabled. If so, the child lock indicator light at the bottom will be red. You'll need to disable the child lock through the app.

**Q**

Fail to adjust light brightness

**A**

When using dynamic lights (color changing, color fading, Breathing mode), brightness adjustment is not available.

If the issue persists, please contact our customer service with your order ID. We will fix it within 24 hours.

# PROTECT YOUR WARRANTY

- ⌚ 365 days replacement warranty
- ⌚ 60 days money back guarantee
- ⌚ Additional 6-Month Warranty

Please scan the QR code or click the belowlink to extend your vwaranty 6 months:



or

[driamegg.com/pages/warranty-extension](http://driamegg.com/pages/warranty-extension)

Get

# CUSTOMER SERVICE

## Need help?

Contact us directly with your Order ID.  
We are more than happy to serve you in 24 hours.  
Dreamegg support is here to make sure you are  
completely satisfied with your product.



- ✉ support@mydreamegg.com
- 🌐 [dreamegg.com/pages/contact-us](http://dreamegg.com/pages/contact-us)

# JOIN DREAMEGG COMMUNITY

Follow our Instagram for latest product updates and promotions.

- 🌐 Official Website: [dreamegg.com](http://dreamegg.com)
- 📷 Instagram: [@dreameggofficial](https://www.instagram.com/dreameggofficial)
- FACEBOOK: [@Dreamegg](https://www.facebook.com/Dreamegg)



dreameggofficial

## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.