# Warranty Card

User name:	
Detailed address	:
Telephone No. :	
Product model:	
Date of purchase	:
Purchase Store:	
Purchase price:	
Invoice number:	
Warranty date:	
Units for repair:	

date	Maintenance records	Repairman

# **Table of Contents**

Table of Contents1
mportant Safety Instructions2-4.
Product composition/packing list5
Product composition/part name6-7.
Product use/precautions 8-9
Product use/accessory installation
Operations Guide 13-15
APP connection16
Cleaning and maintenance
Operational test
Voice package23-25
Specifications/parameters
Froubleshooting
Warranty Card28

## Safety instructions

When using the product, please remain vigilant and follow the following Content: Please read this instruction carefully before using the product and keep it properly.


# Pay attention

- 1. The problems that may occur during the cleaning of the product should be eliminated as soon as possible. Pick up the power cord and small objects on the floor to avoid obstruction of the product during the cleaning process. Fold the fringe of the carpet under the carpet, and keep the hanging curtains and tablecloths away from the ground.
- 2. If there is a suspended environment such as stairs, please test the product first to see if it can detect the edge of the suspended area without falling. A protective fence should be set at the edge of the suspended area to prevent the product from falling. It should be ensured that the protective device will not cause personal injurysuch as tumble. The critical value of the anti-drop function of the machine is above 12cm, lower than this height may cause the machine to fall.
- 3. Please Ifollow the instructions in the manual to use the praduct. Only use accessories recommended or sold by the manufacturer.
- 4. Make sure that the power supply voltage matches the voltage marked on the power cord.
- 5. Before using the product, confirm that the dust box and filter net have been installed in place.
- 6. If the charger is damaged, in order to avoid danger, it must be replaced by professionals from the manufacturer, its maintenance department or similar departments.
- 7. Before cleaning and maintenance products please turn the product off the power switch, off the power switch of the product.
- 8. Before cleaning and maintaining the product, you should unplug the plug from the power outlet in the first time.
- 9. Before discard the product, please remove the product from the charging dock, turn off the power switch of the product, and remove the battery.
- 10. If the product will not be used for a long time, please power off the product (turn off the power switch, unplug the power cord).
- 11. Before discard the product, the battery of the product must be removed and with local laws and regulations.
- 12. The product cannot be used by children under the age of 8 or people with mental disabilities. If you need to use it, please do it under the supervision and guidance of a guardian. Please do not let children ride on the product or play with the product as a toy.
- 13. Use only indoor home environment, do not use in outdoor, commercial and industrial sites.
- 14. Do not use the product in infants sleeping room.

## Troubleshooting

Trouble signal	Problem Cause analysis and suggested solutions
Error 0 : chest Oh, like the dust box missing	Trigger the clean sweep when the dust box is taken out
Mistake 1 : Example Oh, it looks like the top radar is blocked	The top Yuda is covered and placed in an open area (without any obstructions within 6*6 square meters)
Mistake 2: master, I need a place to start	Pick up the equipment; Or the device is suspended
Mistake 3: master,Please wipe the bottom anti-drop sensor	The anti-fall sensor is blocked or placed in a high place
Mistake 4: master,Please wipe operation just before the sensor	Check that the sensor is dirty or obstructed
	Dirt or chasing along the wall profile sensors
Mistake 6: master,Please rub the top of the radar cover	The upper cover anti-collision operation sensor is dirty or has been returned to gear
	Old edge or crash sensor is stuck
	The dust box is full or the filter needs to be replaced
Mistake 9: Please clean the dust box and filter screen surface	
Mistake 10:I'm trapped, the master save me	
Mistake 11:lt's crooked, the master quickly put me right	
Mistake 12:0h risk, the main wheel seems to be stuck, come and help me	
Mistake 13:Ah, the main swipe seems to be stuck. Come and help me	The main brush is entangled or stuck
Mistake 14 : Oh, side brush seems stuck, come help me	Side brush is entangled or stuck
Mistake 15: Huh, the charging stand is there?	The charging base is not found for recharging, or the charging base is not plugged in
	Unknown failure resulting in abnormal, it is recommended to restart the machine
Mistake 17: I'm out of order. Turn it off and have a restme	When a fault that needs to be shut down occurs, remind the user after it occurs, and then automatically shut down or Charging
Mistake 18 : Master, I need to recharge	When the battery is extremely low and not on the charging dock, the cleaning is triggered (the battery is less than 10%)
Mistake 19 : Can't shut down on the charging stand	When charging in the charging stand, the shutdown is triggered

# **Specifications / Parameters**

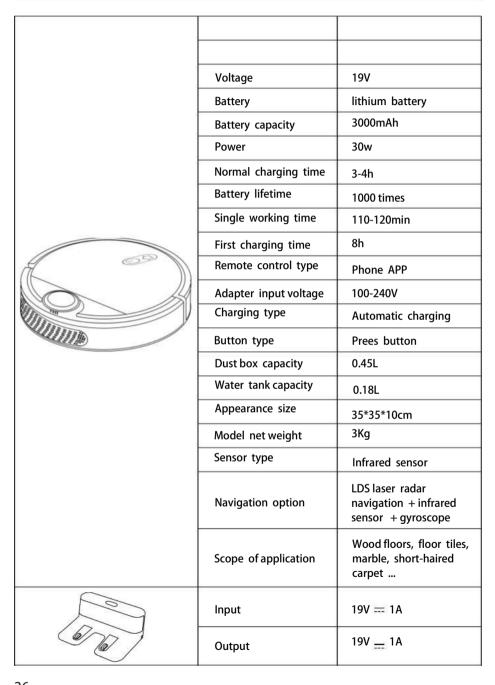

- 15. Do not use the product with a damaged charger or power socket. If the product cannot work normally due to falling, damage, outdoor use or water, do not use the product. To avoid injury, the product should be repaired by the manufacturer or after-sales personnel.
- 16. Please use the product in accordance with the instructions in the manual, our company will not bet responsible for any loss and damage caused by improper use.

#### ∧ caveat

- 1. Only the original charging dock provided by the manufacturer is applicable. It is forbidden for the user to change the battery privately. If you suspect that the battery is damaged, please contact the manufacturer, authorized dealer or a professional in similar departments to replace it.
- 2. It is forbidden to use the product in an environment with open flames or fragile objects.
- 3. Don't use the product in extremely hot (above 40 °C) or cold (below 0 deg.] C) environment.
- 4. It is for bidden to upt your hair clothes, fingers and other parts into the machine.
- 5. It is forbidden to use the product on wet or watery ground.
- 6. It is forbidden for the product to absorb anything that may block the product, such as stones, waste paper, etc.
- 7. The product is forbidden to absorb any flammable materials, such as gasoline and toner for printers or copies. It is forbidden to use the product in the areas with flammable materials.
- 8. It is forbidden for the product to absorb any burning items, such as cigarettes, matches, ashes and other items that may cause a fire.
- 9. It is forbidden to place objects in the suction port. Do not use the product when the suction port is blocked. Clean up the dust, lint, hair, etc. at the suction port to ensure air intake is good.
- 10. Use the power cord carefully to avoid damage. It is forbidden to use the power cord to drag or lift the product and product charging stand. It is forbidden to use the power cord as a handle. It is forbidden to clamp the power cord in the door gap. It is forbidden to pull the power cord at sharp corners and corners., and the power cord should be kept away from heat sources.
- 11. It is forbidden to use damaged charging dock. If the charging dock is damaged, it must be repaired or replaced by professionals from the manufacturer, authorized dealer or similar department in order to avoid danger.
- 12. It is forbidden to incinerate the product even when the product has been severely damaged. The battery of the product may explode as a result.

## Instructions for disposing of batteries

If you want to discard the battery in this machine, please do not throw it away along with household garbage, but hand it over to the nearest waste battery recycling station or our branch or after-sales service center for centralized disposal.



The following description is not for general users, but for the final disposal of the battery disposal instructions.

The chemical substances contained in the battery built into this unit will pollute the environment. Before disposing of the robot, please take out the battery in the fuselage in advance. The battery should be handed over to a professional battery collection point for centralized disposal.

Be careful! Leakage of the battery will cause human injury! If the battery leaks, make sure to avoid contact with eyes or skin. In case of accidental contact, please wash your hands and eyes with clean water immediately. If you still feel unwell, seek medical attention immediately.

# Remove the battery

#### Pay attention to:

The following information is only applicable when discarding this robot, not a daily operation instruction!

- Remove the battery only when the power in the battery is completely exhausted. Don' t let the battery come in contact with metal objects.
- The steps to remove the battery are as follows:
- · Let the robot run until it is completely out of power without touching the charging stand
- Turn off the robot power switch
- Remove the screws on the battery cover
- · Remove the battery cover
- Pull out the connector plug of the battery and remove the battery.

Robot is about to reboot	The firmware upgrade is complete, ready to restart
Please put robot on the docking station for system update	The machine was not at the charging station when the upgrade started
Water tank is empty, please fill it	
Safety module errors happened, please reboot robot	
	To exit the operation mode first
	The machine needs to be at the charging station but it isn't
Start scheduled cleaning	Cleaning time into the schedule
Schedule is set	Set Al schedule
	Restore original factory settings
Please calibrate cliff sensors	The anti-drop sensor is not calibrated
	Laser bumper stuck
Battery is not working, please check	
Authentication key is not found	UUID or AUTHKEY is null
test audio: 1kHz sine wave for 1 second	Test tone
	When the machine needs to be moved out of the restricted area
Please move robot out of the docking station before turn it off	When shutting down, the machine is
	still in the charging station

A0023		
A0024	Bumper may be stuck, please check	
		Press the "clean" (partial mode)
		Press the "clean" button (fixed-point mode
		When suspended, recharge
A0028	Low battery, please charge robot	During non-cleaning, the battery is fou to be insufficient
A0029		Cleaning is completed and normal pow
A0030		Fully charged
A0031	Charging completed, resume the last cleaning	Fully charged and not finished last cleaning
A0032		When performing certain operations, but found that the battery is too low
A0033	I am here	Find the machine through the app
A0034		Enter Quick Connect Mode
A0035		
A0036		
A0037		The firmware upgrade has been completed
A0038		Firmware upgrade failed
A0039		Wi-Fi connection succeeds
A0040		Wi-Fi connection failed
A0041		Setting succeeds
A0042		
A0043	Robot will be turned off	Robot will be turned off
A0044	Press and hold spot button to set current time as schedule	Confirm Al scheduling time
A0045		Confirm the AI scheduling function
A0046	Map is incorrect, rebuild the map	When the map needs to be rebuilt
A0047		Tilt the machine
A0048	Locating failed, rebuild the map	Failure to locate, map will be rebuilt

# Product composition/packing list

Robot sweeper			
Instruction Manual			
Мор		The power adapter	
battery (Installd in the machine)		Dust box (Installd in the machine)	
			1piece
Middle sweeping brush (Installed in the machine)			1piece





Robot sweeper

Recharge dock

The power adapter






(Installd in the machine)





Middle sweeping brush (Installd in the machine)

side brush

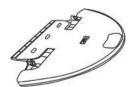





Water tank

Мор

**Dust box** (Installd in the machine)






Instruction Manual


# Product composition/part name

## **Front View**

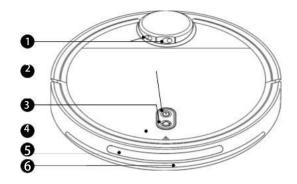

- 1 Laser Sensor
- Start Button
- Charging Button
- Flip Lids
- Anti-Impingement sensor
- 6 Infrared sensor

## **Back View**

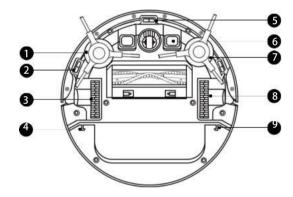

- 1 Side brush
- 2 Anti-droping sensor
- **3** wheel
- Water tank installation position
- 5 Anti-droping sensor
- 6 Recharging Contact
- Side brush
- 8 Wheel
- Water tank installation position
- 10 Recharging Contact
- Cardan Wheel
- 2 Suction port
- Anti-droping sensor


# Voice packets

		Press the "clean" button (automatic mode)
		When cleaning, press the "clean" button or pause for other reasons
		When paused, press the "clean" button
	Locating failed, stop cleaning	Positioning failed during cleaning
	Cleaning completed, start docking	Cleaning has been completed. It needs to be recharged due to low power
	Low battery, start docking	Cleaning has been completed. It needs to be recharged due to low power
		Recharge but can't find the charging
	Robot can not find docking station	station
	Relocating, please wait a moment  Wheels may be stuck, please check	
	Wheels may be stuck, please thetk	
	Please place robot on the ground	Machines are not laid flat on the ground
		Main swipe stuck
	Side brush may be stuck, please check	
	Please empty dustbin and clean its filter	
	Dustbin is removed, please put it back	Dust box is not installed
	Battery overheated, robot will be turned off	The battery is overheated
A0021		
A0022	Lidar sensor may be stuck or covered, please check	The radar is obscured or stuck


# Operational test

project	Test Case	test environment	Critical checkpoint
		1. Distribution network function Quick Connect  1. Turn on the sweeper, and when the sweeper prompts "enter quick connection mode"  2. Enter the Tuya APP, click "add device" or'+'> manually add> small appliances> sweeping robot  3. Follow the instructions of the Tuya APP, select the 2.4GHz Wi-Fi network and enter the password> Next  4. Click on the top right of the Tuya APP and select "Wi-Fi Quick Connect"> check to confirm that the indicator light flashes quickly> Next  5. The Tuya APP shows that the device is being added and confirms that the sweeper can be connected successfully	
WiFi connection	Quick connection distribution network / hot distribution network	Hotspot Distribution Network  1. Turn on the sweeper and wait for the sweeper to prompt "enter hotspot network distribution mode"  2. Enter the APP, click "add device" or '+' > manually add > small appliances > sweeping robot  3. Follow the instructions of the APP, select the 2.4GHz Wi-Fi network and enter the password > Next  4. Change "Wi-Fi Quick Connect" at the top right to "Hotspot Network Configuration" > Check to confirm that the indicator light flashes slowly. > Next  5. Connect the mobile phone Wi-Fi to the device hotspot> go to connect-select the sweeper to be connected > enter the password "Xxxxxxxx" > connect > press "Confirm the connection to the hotspot is correct, continue to the next step"  7. The APP shows that the device is being added, confirm that the sweeper can be connected successfully  2. After the sweeper is successfully connected, turn off the router, wait 5 minutes, then turn on the router, and then APP clean, confirm that the sweeper can perform cleaning	Confirm that the distribution network function is normal
APP schedule setting	1. There is internet confirmation to start cleaning 2. Cannot perform scheduled cleaning without internet	After the sweeper and mobile phone are connected to the network, place the sweeper at the charging station and set the APP timer. When the time is up, the sweeper will automatically perform cleaning     After the sweeper and mobile phone are connected to the network, turn off the router, place the sweeper at the charging station, and set the APP timer. When the time is up, the sweeper will not perform cleaning	Set up the schedule when using the Tuya APP plan. If there is no internet, it will not be able to go out according to time
Designated cleaning	Press the panel to clean at any point, and the sweeper will clean at 2m*2m, and it will not be recharged when it stops at the place after the sweep.	Any space 1. Cleaning at fixed points according to the panel and observing the behavior of the sweeper	Confirm that the sweeper can perform fixed-point cleaning at any position
Overcurrent protection	Main brush overcurrent protection Side brush overcurrent protection Wheel overcurrent protection	Any space  1. Swipe the main card to death, click the sweep button to confirm that the sweeper will stop working  2. Click the sweep button, the sweeper is cleaning, hold down the side brush and confirm that the sweeper stops working  3. If the wheel is stuck, click the sweep button to confirm that the sweeper will stop working	The sweeper will stop working and there will be voice prompts
Anti-jam protection	Front gear collision sensor anti-jamming protection	Any space During the cleaning process of the sweeper, manually press the front gear to confirm that the sweeper stops working	The sweeper will stop working and there will be voice prompts
Occlusion protection	Radar is blocked and protected	Any space During the cleaning process of the sweeper, cover the radar with objects to confirm that the sweeper stops working	The sweeper will stop working and there will be voice prompts
Other protection	Dust box placement protection	Remove the dust box and observe whether the sweeper has a voice prompt	The sweeper will not perform work, and there are voice prompts


# Dust box

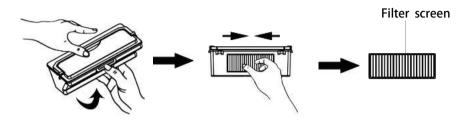

# Suction port

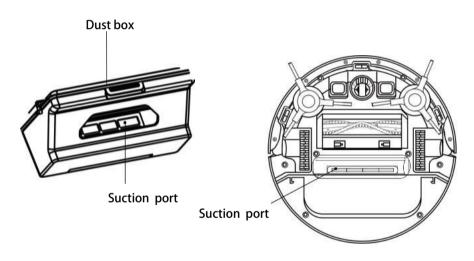


# Charging dock

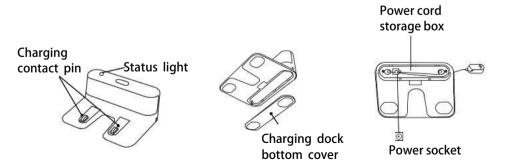

# Product use/precautions


## Arrange the furniture neatly

Before each use, please arrange tables and chairs and other furniture and sundries neatly, and organize the largest cleaning space.

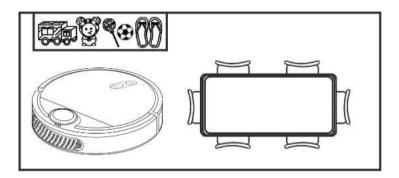

# Exclude unfriendly obstacles

Remove or block slippers, floor fan base and other low objects that may affect the normal work of the intelligent sweeping robot.

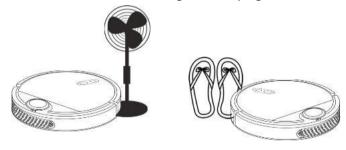


# 3 Do not use the mop function on the carpet

If the carpet in the home has fringe edge, please Fold the fringe of carpet under the carpet.


# Operational test

project	Test Case	test environment	Critical checkpoint
Panel buttons	Power button/recharge button/fixed-point cleaning button/key combination function	1. Power button: long press for 3 seconds-power on/off, short press (when the machine is paused)-start global cleaning, short press (when the machine is running)-pause cleaning, stop recharging  2. Recharge button: short press (when the machine is running)-pause and short press (when the machine is paused)-Charging  3. Fixed-point cleaning button: short press (when the machine is paused) -perform fixed-point cleaning long press (on the charging station): schedule  4. Combination keys (power key and fixed-point cleaning key): press and hold for 3 seconds at the same time-restore factory settings  5. Combination keys (power key and recharge key): short press at the same time-cycle change of wind power	Confirm that the keys are functioning properly
Mapping and positioning ability	Start from the charging station     Depart from any point in the environment (no map)     Select different room scenes	Ali self-built environment + IEC room  1. Put the sweeper on the charging station, press the cleaning button, and wait for the cleaning to be completed  2. Move the sweeper to any position, click the cleaning button, and wait for the cleaning to be completed (the sweeper and the charging station are placed in the same room)  3. Move the sweeper and charging station to another room and perform cleaning	Confirm that you can complete the full map cleaning and build the map. After the cleaning is completed, you can return to the charging station to charge.
Ability along the wall	1. Solid wall / skirting board 2. APP virtual wall / restricted area boundary 3. Magnetic stripe border	1. Ali's self-built environment + IEC room, observe the behavior of the sweeper along the wall 2. Use the APP to set up a virtual wall or restricted area, click the sweep button, and wait for the sweep to complete 3. It needs to be tested with a magnetic stripe to observe the behavior of the sweeper along the magnetic stripe	The distance from the wall is about 1.5cm     Walk along the virtual wall/restricted zone boundary     Explore walking along the ede
charging mode	1. Recharge after starting from the charging station 2. Do not start from  **##################################	Ali self-built environment + IEC room  1. Put the sweeper on the charging station, press the cleaning button, after cleaning again, press the recharge button  2. Meanings sweepper to any station richards by the standard in the charging station are in the same room)	Confirm that the sweeper can successfully return to the charging station for charging
Anti-drop ability	Walking on a dark floor (tested with side brushes), a test table with a height of X cm cannot be dropped during a battery cycle	Ali test table (black table top, white floor) (platform specification length * width * height = 90cm * 60cm * 10cm, 10cm high is an L -shaped wall)	Confirm that the sweeper will not fall off the test table
Ability to escape	IEC room layout 1. Long tables and chairs @IEC layout 2. Narrow entrance, 3.1.5cm gate, clouds walking back and forth 4. Fan base (IEC)/lamp base (IEC)/bar stool base (on- site test) 5. IEC iron rod	IEC Room  1. Place the sweeper on the charging station and click the sweep button. During the sweeping process, Observe the behavior of the sweeper	Will not always be around the long table legs and chairs, unable to get out of trouble 2. Will not be stuck by narrow entrances     Can cross the door intelligence 4. You can get out of trouble by yourself, and there will be a voice prompt if you get stuck 5. You can get out of trouble by yourself, and there will be a voice prompt if you get stuck.
Working voltage	1 Only when the battery is higher than 35% can be cleaned from the charging station 2 If the battery level is lower than 15%, start the search station mode, if the charging station cannot be found within 20 minutes, stop the search station 3 Automatic shutdown at 5% battery	Ali self-built environment (1) When the sweeper is at the charging station and the power exceeds 35%, press the sweep button to observe the sweeper behavior (2) Following the previous step, the sweeper will continue to clean. When the power of the sweeper is less than 14%, the sweeper will automatically return to the charging station for charging (3) Following the previous step, move the sweeper away from the charging station and turn off the power supply of the charging station. Click the recharge button. When the sweeper's power is 5%, the sweeper will automatically shut down.	Confirm that the working voltage of the sweeper meets the specifications
Working hours	Definition of working hours: Acceleration mode: 90 minutes +/- 10% Normal mode: 120 minutes +/- 10% Silent mode: 150 minutes +/- 10%, Charging time: (battery discharged to full charge), no more than 5.5 hours	Ali Office (1) Place the sweeper on the charging station, switch the suction power to turbo mode, wait for the sweeper's power to be 100%, press the sweep button, and let the sweeper toniune to clean to 14% of the power, recharge by itself, and record the cleaning time displayed by the APP (Switch the suction power to Normal or Silent, after the battery is fully charged, perform the cleaning work again, and record the time) (2) When the battery is consumed to 5%, after the sweeper is automatically shut down, put the sweeper on the charging station and record the time it takes for the sweeper to charge to 100%)	1: Confirm working hours 2: Confirm the charging time


Put in the dust box: with the handle of the dust box, put the dust box into the machine compartment, and gently press the front of the dust box to put the handle upside down. If the dust box is not placed in place, the handle will be difficult to put down, then take out and replay. (See the picture below)

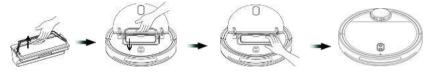

• Toggle the buckle on the front of the dust box by hand to open the dust box and take out the filter.(See the picture below)

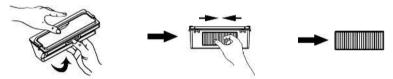


Open the lock of the dust box and take out the garbage (Figure 1 and Figure 2). To avoid spilling the garbage, please keep the dust box upward, hold the upper cover with your right hand and the transparent dust box with your left hand. To avoid clogging of the filter, please knock the fliter when pouring it out (it is recommended to clean it at least once a week). After a long period of use, remove the filter components (Figure 3): dust screen; washable filter (Figure 4) (recommended to replace a set of filter every 6-12 months To ensure a good cleaning effect of the equipment). Rinse the dust box and other filters (not frequently, it is recommended to clean monthly). be sure to wait until the dust box and filter are thoroughly dried before using (Figure 5) to ensure their service life.

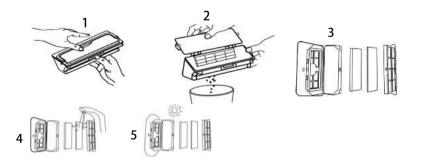

Prevent intelligent sweeping robot from falling


If the sweeper is performing tasks at the entrance of duplex stairs and the edge of steps, please place protective guardrail to ensure its safety and smooth operation.

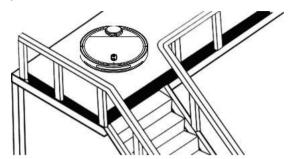

**5** Block objects with strong reflective surfaces

Please make sure that there is no object with strong reflective surface within 8cm from the ground; if so, please block it to avoid affecting the detection and cleaning route of the intelligent sweeping robot.


(Strong light will interfere with the work of the sweeper sensor)

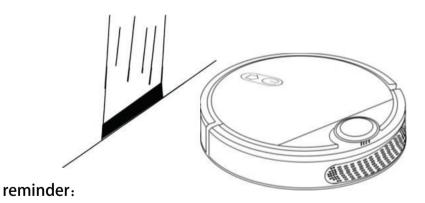

When using for the first time, please pay attenion to the intelligent sweeping robot throughout the whole process to help the intelligent sweeping robot eliminate some unfriendly small problems, so that the intelligent sweeping robot can clean smoothly. When following the intelligent sweeping robot, please pay attention not to block the sweeping robot


# Product use/accessory installation

- Find a suitable location to place the charging dock
- \* The charging dock is placed against the wall and placed on a flat ground. Do not place objects within 0.5m from left to right and 1.5m in front of it.
- \* If there is a mirror or other highly reflective objects near the charging dock, the bottom 8cm should be shielded. (See Figure 1 below)

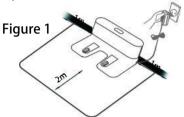


## 2 Install the side brush correctly

\* Pay attention to the raised square slot on the mounting position of the side brush is aligned with the square recessed hole on the side brush. Do not press violently when misaligned, otherwise the product may be damaged.

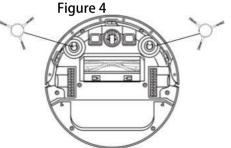

#### Clean the water tank

- The mopping function of the equipment only has a wiping effect, which is helpful for deep cleaning, but cannot effectively remove stubborn stains (such as dried coffee stains, etc.) and cannot completely replace manual labor.
- Please use the mopping function with caution if there is a carpet in your home. In order not to stain your carpet, please do not use the mopping function on the carpet. You can prevent the device from entering the carpet area with a water tank by setting a restricted area on the Tuya APP.
- If you need to add water to the water tank or clean the mop during the equipment work, please pause in place, lift the equipment at a small angle to remove the water tank components, reinstall the water tank after adding water or cleaning, and put the equipment back in place. When restarting, the equipment will Try to follow the planned path to continue working.
- For safety reasons, be sure to remove the water tank component of the device when charging.
- Do not use the water tank to mop the floor when no one is at home.

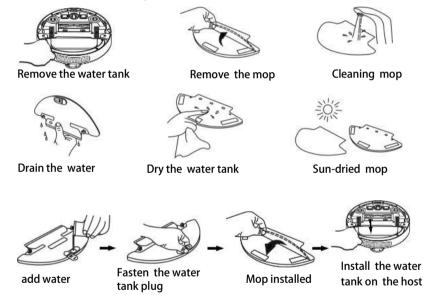

#### Clean the dust box


1 Take out the dust box: lift the flip lids cover on the robot by hand, hold the handle and lift the dust box up. (See below)




#### Clean side brush

Foreign objects (such as hair) are easily tangled in the side brush and may attached to dust. Make sure to clean them regularly.


- 1 Remove the screws mth a screwdriver, Carefully relax and pull away any hair or string entangled between the main body and the side brush. (figure 1).
- Wipe the dust off the brush with a cloth dampened with warm water or lightly reform the brush. (figure 2)

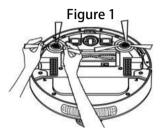


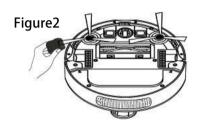

#### Clean the sensor

- · Cleaning of anti-impingement sensors and anti-droping sensors
- ① Use a cotton swab or soft cloth to clean the anti-impingement sensor and the anti-droping sensor.
- 2 The anti-impingement sensor is located in front of the smart sweeper, and the transparent window with the anti-droping sensor is located at the bottom of the smart vacuum cleaner. (Picture 3) (Picture 4)
- In order to make the smart sweeper more sensitive, please keep the transparent window of the sensor clean.

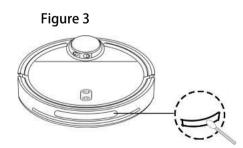


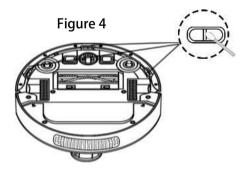


### Middle sweep brush installation

- \* First insert the fixed left protruding end and then place it in place to reinstall the middle brush (Figure 5).
- \* Press down to lock the brush cover in place (Figure 6).



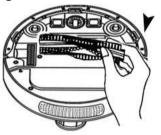


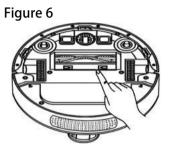

### **4** Turn on and charge


Note: Align the charging contact piece. Before charging, please wipe the contact piece with a dry cloth.

\* Place the machine on the charging dock and aim it at the charging contact sheet. The power indicator on the charging base will change from on to off. The device is automatically turned on and charging starts by default. After the device is turned on, it can be used normally (Figure 7).

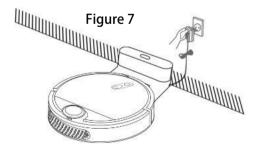

Note: If the battery cannot be turned on, please place the host on the charging dock, the device will automatically turn on, and the device needs 30% power to work normally.

- 2. press the button, the device will automatically search for the charging dock and go to charge. place the machine within one meter directly in front of the charging dock. Click the button and the device will automatically search for the charging base and proceed to charge.
- \* During the cleaning period, when the battery is low, the intelligent sweeper will automatically search for the chargingdock to charge;
- \* The smart sweeper encounters obstacles and reduced battery power when searching for the rechargeable dock, and is affected by the complex environment, which may cause the smart sweeper to fail to find the rechargeabledock. Therefore, the rechargeable cdock should be placed in an open place as much as possible;
- \* When the smart sweeper has just finished cleaning, the temperature of the battery is generally higher. At this time, if you continue to charge, the time to fully charge will be prolonged. (See Figure 8

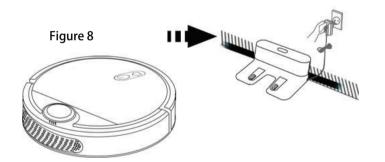

2. Cannot perform scheduled cleaning without internet


Set up the schedule when using the Tuya APP plan. If there is no internet, it will not be able to go out according to the time.


• Pay attention After the sweeper and mobile phone are connected to the network, turn off the router, place the sweeper at the charging station, and set the APP to clean regularly. When the time is up, the sweeper will not perform cleaning


#### Cleaning and maintenance

#### Cleaning middle brush

- **1** As show in the figure, pull the release tab to unlock the brush cover.
- 2 Lift the rolling brush to remove it.
- 3 Use scissors or a knife to clean rubbish and tangled hair.
- First insert the fixed left protruding end, and then place it in place to reinstall the middle brush.
- **6** Press down to lock the brush cover in place.
- **6** Rotate the roller brush by hand to ensure that it is in place and rotates normally.

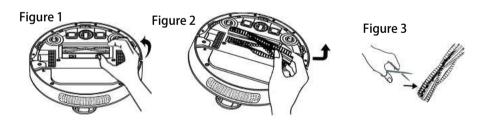

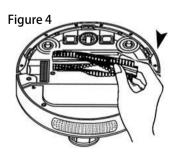

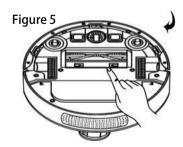

# Tuya APP connection

- 1. Distribution network function/fast connection distribution network
- 1. Turn on the sweeper, and when the sweeper prompts "enter guick connection mode"
- 2. Download Tuya APP on your phone enter the Tuya APP, click "Add Device" or'+'> Manually Add> Small Home Appliances> Robot Vacuum
- 3. Follow the instructions of the Tuva APP, select the 2.4GHz Wi-Fi network off yourhome and enter the password> Next
- 4. Click on the botton of the Tuya APP and select "Wi-Fi Quick Connect"> check to confirm that the indicator light flashes quickly> Next
- 5. The Tuya APP shows that the device is being added, confirming that the sweeper can be connected successfully
- 6.If you fail to connect the wifi. please the" " botton and " " botton at the same time for 3 seconds.Next, please the" (1) "botton for 3 Seconds to turn off the sweeper. After that, please retry the "1-5" step
- 2. After the connection is successful, the connection can be restored after the network is disconnected, press the APP to clean, and the sweeper can perform cleaning

### Tuya APP schedule setting


· After the sweeper and mobile phone are connected to the network, place the sweeper at the charging station and set the APP to clean regularly. When the time is up, the sweeper will automatically perform the cleaning

# Operation guide

#### To turn it off

Long press the" (1) "botton for 3 seconds on the machine to start the machine. The machine makes a sound, which means the power has been turned on and the machine is in standby state.

Long press " (1) "botton for 3 seconds on the machine to turn off the machine the machine will make a sound, indicating that the power has been turned off (as shown below).

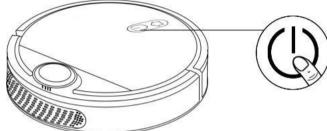

## 2 Cleaning/Pause


Method 1: After the power-on is completed, short press the botton" ( ) " on the main unit to start cleaning (press any key to pause during cleaning).

Method 2: Click the cleaning button of the APP to start cleaning (press the pause button to pause the current cleaning).

#### Note:

- If the power is less than 20%, the machine will not be performed. Please charge it before starting cleaning.
- When the power is less than 20% in the cleaning process, the device will automatically return to the charging dock for charging; when the power reaches 80%, it will automatically start cleaning at the breakpoint.
- Please sort out all kinds of wires on the ground (including the power cord of the charging dock) before cleaning, so as to avoid power failure, damage of items or wires caused by dragging during cleaning.




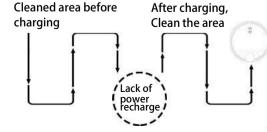

#### Clean way


After starting, the machine will scan and generate maps and intelligent partition. In the partition, the cleaning path will be planned by first cleaning along the wall and then filling in the area to complete the cleaning of each partition one by one, which is orderly, efficient and full coverage without omission. After cleaning, the device will automatically return to the charging base for charging (see the figure below).

Note: Do not move the equipment randomly or frequently during work. After moving, please place the device near the same place. When it is restarted, the device will try to relocate its own coordinates. If the positioning is successful, it will continue to work according to the planned path. If the positioning fails, the device will abandon the previous task to rebuild the map and clean, and It may canse it fail to charge bock.

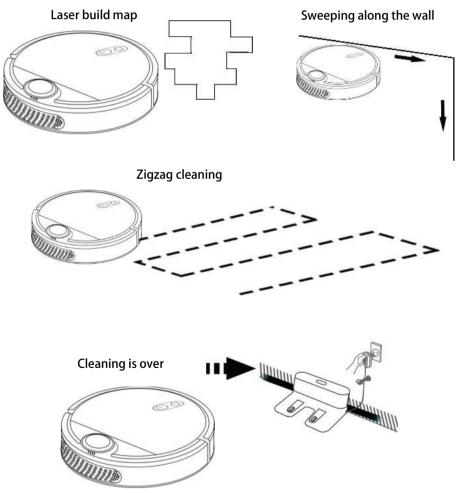


#### **Designated cleaning**

It is especially convenient when a certain area needs deep cleaning. The sweeper will come to the vicinity of a certain point on the map designated by the user, and take this point as the center to perform a 2m\*2m range cleaning. When operating on the map, you can drag or click to set the target point, which is easy to operate.

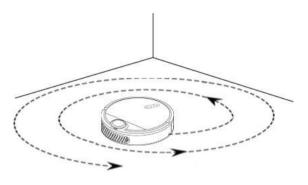

#### Local cleaning

When the device is offline or the mobile phone is not around, you can press and hold the recharge button for 3 seconds, and the sweeper will focus on itself and perform 2m\*2m cleaning. The user can manually move to the designated location for partial cleaning.

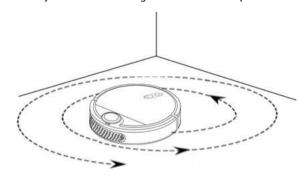

### Regular cleaning

Use the APP to set the regular cleaning time, the machine will automatically start cleaning at the specified time, and automatically return to the charging dock to charge after the cleaning is completed.





#### FCC STATEMENT

- 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- 1.Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/ TV technician for help.

#### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation

# **Intelligent Robotic Vacuum Cleaner**

# **USER MANUAL**

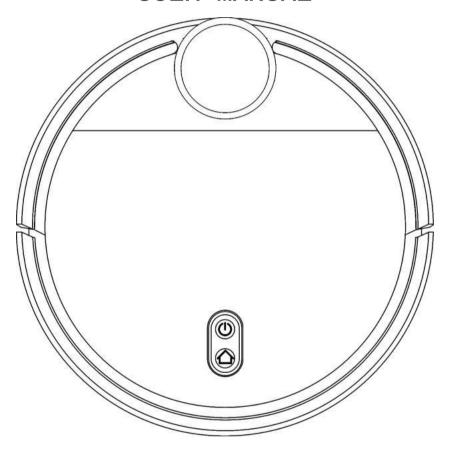

Thank you for purchasing this product, please read the manual carefully before using it.