

Electric Vehicle AC Charger

EVM003 Series (NA) - User Manual

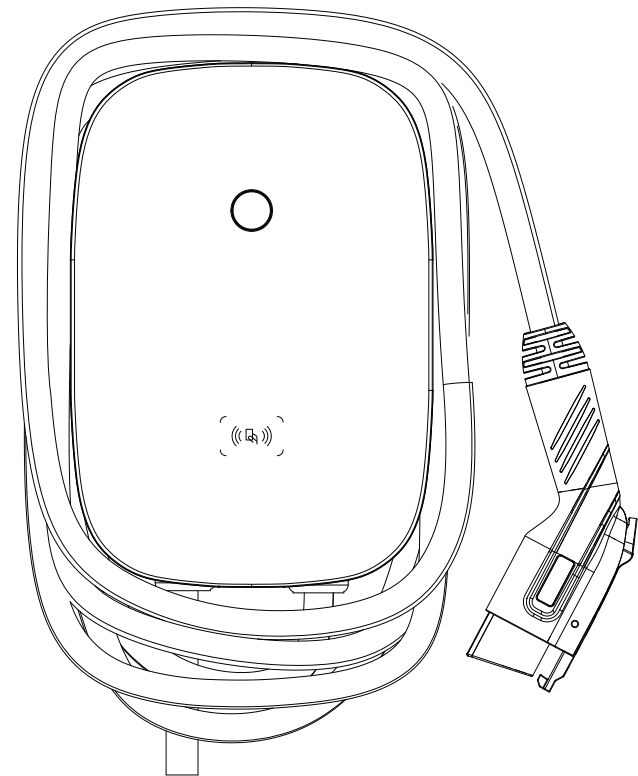


TABLE OF CONTENTS

1. IMPORTANT SAFETY INSTRUCTIONS	1
2. PRODUCT INTRODUCTIONS.....	5
3. VERIFY CONTENTS.....	8
4. GATHER TOOLS	9
5. PLAN THE MOUNTING	10
6. INSTALL 4G CARD	13
7. WIRE THE CIRCUIT	16
8. LIGHT CODES	17
9. FCC DECLARATION	18
10. WARRANTY AND MAINTENANCE.....	19

⚠ WARNING & CAUTION

1. Important Safety Instructions

1.1 Overall Warnings & Cautions

- ⚠ WARNING:** To avoid fire, injury or death, carefully read and follow the instructions during installation, operation and maintenance.
- **DO NOT** put fingers into the electric vehicle connector.
- **DO NOT** use this product if the flexible power cord or EV cable is frayed, insulation-broken, or any other signs of damage.
- **DO NOT** use this product if the enclosure or the EV connector is broken, cracked, open, or shows any other indication of damage.
- **DO NOT** remove cover or attempt to open the enclosure because of risk of electric shock.
- ⚠ WARNING:** This device should be supervised when used around children.
- ⚠ WARNING:** This device must be grounded.
- ⚠ WARNING:** To avoid a risk of fire or electric shock, do not use this device with an extension cord.
- ⚠ WARNING:** The suitability of the use of flexible cord in accordance with CE code, part I, rule 4-012, is to be determined by the local inspection authority.
- ⚠ WARNING:** To reduce the risk of fire, connect only to a circuit provided branch circuit over-current protection in accordance with the CSA C22.1–15 Canadian Electrical Code, Part 1 (Canada) or NOM-001-SEDE Electrical installations (utility) (Mexico) or ANSI / NFPA 70 National Electrical Code (USA).

Circuit Breaker Options table

Output Amperage (A)	16A	32A	40A	48A	70A	80A
Circuit Breaker Options (A)	20A	40A	50A	60A	90A	100A

⚠ WARNING & CAUTION

1.2 Installation Requirements

- ⚠ WARNING:** Disconnect electrical power prior to installing the charging station.
- ⚠ WARNING:** Be sure to preview the user manual and ensure local building and electrical codes are reviewed before installing the AC charger.
- ⚠ WARNING:** The AC charger should be installed by a qualified technician according to the user manual and local safety regulations.
- ⚠ CAUTION:** Use appropriate protection when connecting to the main power distribution cable.
- ⚠ CAUTION:** Type B, C or D breaker with the rating current for table should be installed in the upstream AC distribution box.
- ⚠ CAUTION:** The device shall be mounted at height between 2 feet and 4 feet from ground.
- ⚠ CAUTION:** Please keep the charger in a clean area with low humidity. Not recommended to be installed in coastal environments with high humidity or high dust.

1.3 Daily Maintenance

- ⚠ CAUTION:** Avoid moisture or water in the charger. If there is water or moisture ingress in the charger, it is necessary to immediately power off to avoid immediate danger, and notify the professionals to carry out maintenance before next use.
- ⚠ CAUTION:** Please use the charger properly. Do not hit or press hard on the enclosure. If it is damaged, please contact a professional technician.
- ⚠ CAUTION:** Avoid placing the charger near hot objects and at high temperature locations and away from dangerous substances such as flammable gases and corrosive materials.
- ⚠ CAUTION:** Do not put heavy objects on the charger to avoid danger.

⚠ WARNING & CAUTION

Consignes De Sécurité Importantes

1.1 Avertissement & Mise En Garde Généraux

⚠ AVERTISSEMENT : Pour éviter les risques d'incendie, de blessure ou de mort, il faut lire et suivre soigneusement les instructions pendant l'installation, l'utilisation et l'entretien.

- **Ne mettez pas** les doigts dans le connecteur du véhicule électrique.

- **N'utilisez pas** ce produit si le cordon d'alimentation flexible ou le câble EV est effiloché, isolé ou présentant tout autre signe de dommage.

- **N'utilisez pas** ce produit si le boîtier ou le connecteur EV est cassé, fissuré, ouvert ou montre toute autre indication de dommage.

⚠ Ne retirez pas le couvercle et n'essayez pas d'ouvrir le boîtier en raison du risque de choc électrique.

⚠ AVERTISSEMENT : Cet appareil doit être surveillé lorsqu'il est utilisé à proximité d'enfants.

⚠ AVERTISSEMENT : Cet appareil doit être mis à la terre.

⚠ AVERTISSEMENT : Pour éviter tout risque d'incendie ou de choc électrique, n'utilisez pas cet appareil avec une rallonge électrique.

⚠ AVERTISSEMENT : L'adéquation de l'utilisation du cordon flexible conformément au code ce, partie i, règle 4-012, doit être déterminée par l'autorité d'inspection locale compétente.

⚠ AVERTISSEMENT : Pour réduire les risques d'incendie, ne connecter qu'à un circuit protection contre les surintensités des circuits de dérivation conformément à la norme canadienne CSA C22.1-15 Code électrique, partie 1 (Canada) ou NOM-001-SEDE Installations électrique (Mexique) ou ANSI / NFPA 70 National Electrical Code (États-Unis).

Circuit Breaker Options table

Output Amperage (A)	16A	32A	40A	48A	70A	80A
Circuit Breaker Options (A)	20A	40A	50A	60A	90A	100A

⚠ WARNING & CAUTION

1.2 Exigence Avant L'installation

⚠ AVERTISSEMENT : Assurez-vous de consulter le manuel d'utilisation et assurez-vous que les codes locaux du bâtiment et de l'électricité sont passés en revue avant d'installer le chargeur.

⚠ AVERTISSEMENT : Débranchez l'alimentation électrique avant d'installer la station de charge.

⚠ AVERTISSEMENT : Le chargeur CA doit être installé par un technicien qualifié conformément au manuel d'utilisation et aux réglementations de sécurité locales.

⚠ MISE EN GARDE : Utilisez une protection appropriée lors de la connexion au câble de distribution d'alimentation principal.

⚠ MISE EN GARDE : Un disjoncteur de type B, C ou D avec le courant nominal indiqué dans le tableau doit être installé dans le boîtier de distribution CA en amont.

⚠ MISE EN GARDE : Cet appareil doit être monté à une hauteur entre 2 feet and 4 feet du sol.

⚠ MISE EN GARDE : Veuillez conserver le chargeur dans un endroit propre et peu humide. Il n'est pas recommandé de l'installer dans des environnements côtiers à forte humidité ou à forte poussière.

1.3 Entretien Quotidien

⚠ MISE EN GARDE : Évitez l'humidité ou l'eau dans le chargeur. En cas d'infiltration d'eau ou d'humidité dans le chargeur, il est nécessaire de l'éteindre immédiatement pour éviter tout danger immédiat et d'avertir le personnel professionnel d'effectuer l'entretien avant la prochaine utilisation.

⚠ MISE EN GARDE : Veuillez utiliser le chargeur correctement. Ne frappez pas ou n'appuyez pas trop fort sur le boîtier. Si le boîtier est endommagé, veuillez contacter un technicien professionnel.

⚠ MISE EN GARDE : Évitez de placer le chargeur à proximité d'objets chauds et à des endroits à haute température et loin de substances dangereuses telles que des gaz inflammables et des matériaux corrosifs.




⚠ MISE EN GARDE : Ne placez pas d'objets lourds sur le chargeur pour éviter tout danger.

2. Product Introductions





CAUTION: Avoid placing the charger near hot objects and at high temperature locations and away from dangerous substances such as flammable gases and corrosive materials.

2.1 Basic Interface

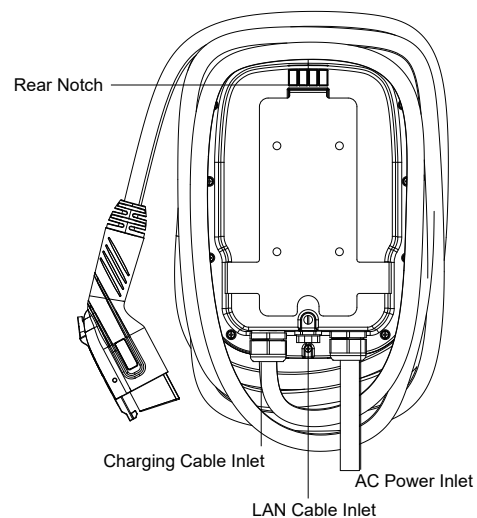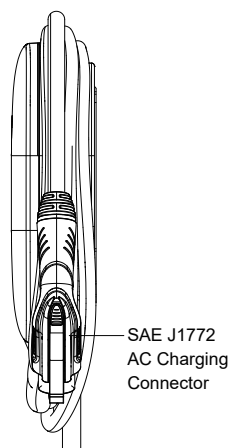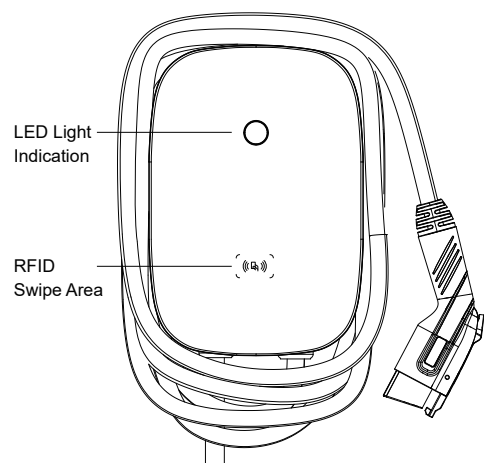

2.2 Basic Dimensions

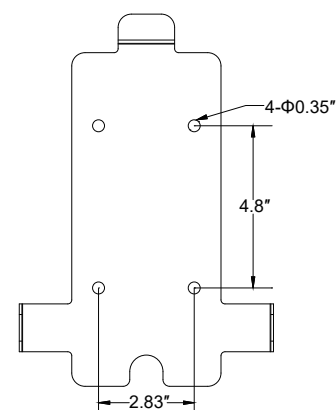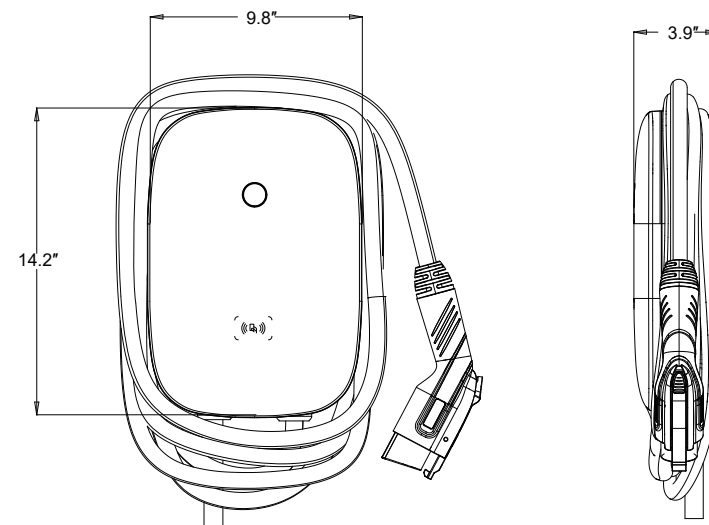


2.3 Specifications


EVM003		
POWER		
Input Rating	208~240V AC	
Output Current&Power	11.5 kW (48A)	19.2 kW (80A)
Power Wiring	L1 / L2 / GND	
Input Cord	Hard-wire	
Mains frequency	50 / 60 Hz	
Connector Type	SAE J1772 Type1 18ft / SAE J3400 NACS 18ft (Optional)	
Ground Fault Detection	CCID 20	
Protection	UVP, OVP, RCD (CCID 20), SPD, Ground Fault Protection, OCP, OTP, Control Pilot Fault Protection	
Meter Accuracy	±1%	
USER INTERFACE		
Status Indication	LED indication	
User Interface	Compatible with multiple CPOs	
Connectivity	Bluetooth5.2, Wi-Fi (2.4G / 5G), Ethernet, 4G (optional)	
Communication Protocols	OCPP2.0.1 / OCPP 1.6Js self-adaptation	
	ISO15118-2/3 (optional)	
Pile Group Management	Dynamic Load Balancing	
User Authentication	Plug&Charge (Free)、Plug&Charge (PnC)、RFID Card、OCPP	
Card Reader	RFID, ISO14443A、ISO14443B, 13.56MHz	
Software Update	OTA	
CERTIFICATION & STANDARDS		
Safety & Compliance	UL991, UL1998, UL2231, UL2594, ISO15118 (P&C)	
Certification	ETL / FCC / Energy Star	
Warranty	36 months	
GENERAL		
Enclosure Rating	NEMA 4 (IP65), IK08	
Operating Altitude	< 6561ft (2000m)	
Operating Temperature	-40°F ~ +131°F (-40°C ~ +55°C)	
Storage Temperature	-40°F ~ +185°F (-40°C ~ +85°C)	
Operating Humidity	5~95%	
Mounting	Wall mount / Pedestal (optional)	
Product Dimensions	14.2"×9.8"×3.9" (360×249×99mm)	

3. Verify Contents


Check the box to ensure you have this installation guide and these parts:

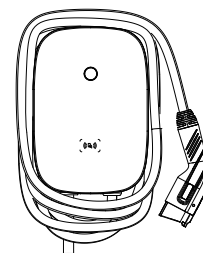


AC Charger x1

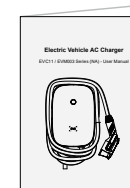


User Manual x1

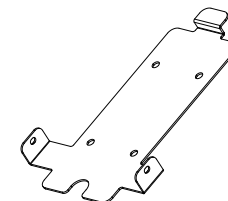

Wall-Mounted Bracket x1

 


M5 Anti-Theft Round Head Screws x2

 

M6 Hexagonal Expansion Screws x4



 Allen Wrench x1



Mounting Template x1




RFID Card x2

4. Gather Tools

Tools required before installing the Wall-Mounted charger, gather the following tools:


1. Wire stripper
2. Adjustable Wrench
3. Voltmeter or digital multi-meter (for measuring AC voltage at the installation site)
4. Level
5. Pencil or marker
6. Drill
7. Phillips screwdriver

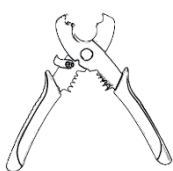


1



2

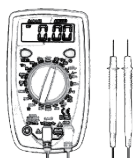

3

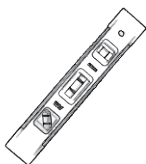

4



5



6



7

Note: The above tools are very important, please gather them all.

5. Plan The Mounting




WARNING: In areas with frequent thunderstorms, add surge protection at the service panel for all circuits. Ensure all power and ground connections, especially those at the breaker and bus bar, are clean and tight.



CAUTION: Not recommended to be installed in coastal environments with high humidity or high dust.


STEP 1

Make sure the installation wall is vertical, and use the Mounting template to drill four screw holes with a diameter of 0.33"(8.5mm) and a depth of 2.17"~2.36"(55mm~60mm) at a height of 47.24"~51.18" (1200-1300mm) from the ground according to the hole positions.

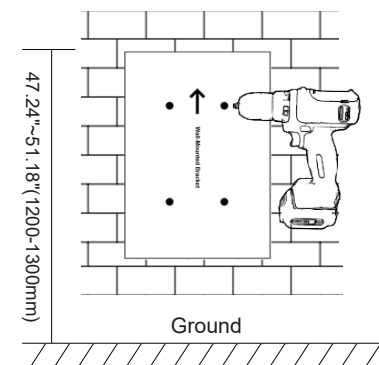


STEP 2

Push the bracket down to remove the wall hanger.

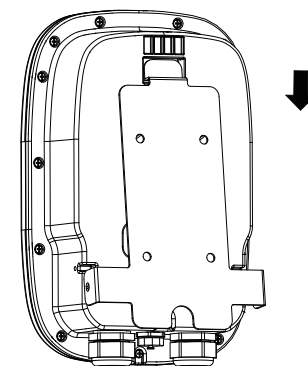


STEP 3

Use 4 Hexagonal Expansion Screws to secure the wall-mounted bracket on the wall, Use an wrench to tighten the screw nuts on the expansion screws.

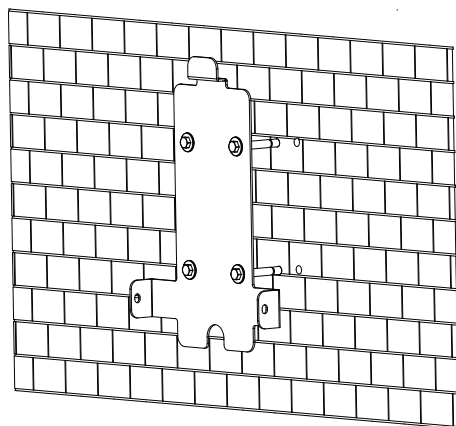

STEP 4


Align the rear notch of charger with the wall-mounted bracket and fit the screw holes of the right and left side, tighten two M5 anti-theft screws to complete the installation.

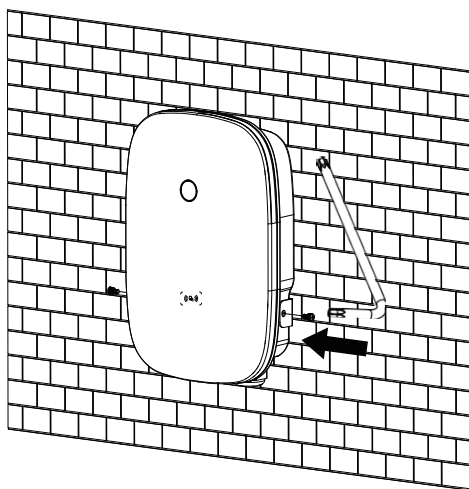


STEP 5

Overall outlook picture after installation:


Wall-mounted cable winding

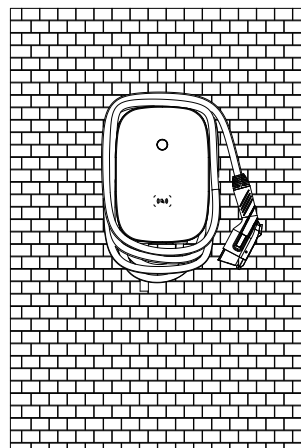

Plug holder(optional)

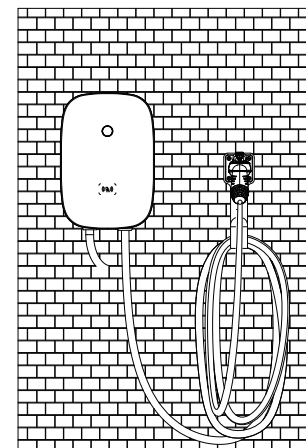


Pedestal(optional)

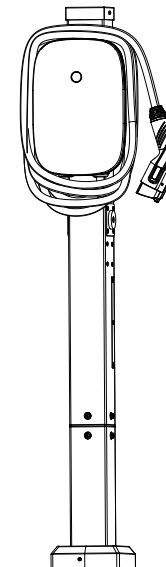

6. Install 4G Card

STEP 1


Use screwdriver to loosen the 13 fixed screws on the rear of charger, then remove the front cover.

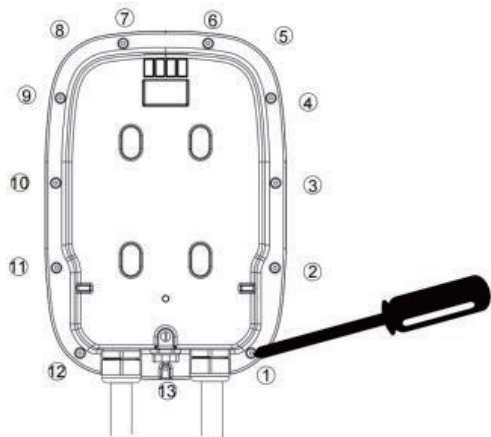

STEP 2

Insert the SIM card according to the picture's instruction (for 4G Version, Optional).

Tips: Use your fingernail to gently punch / close through the middle gap of the 4G slot in the direction shown in the illustration

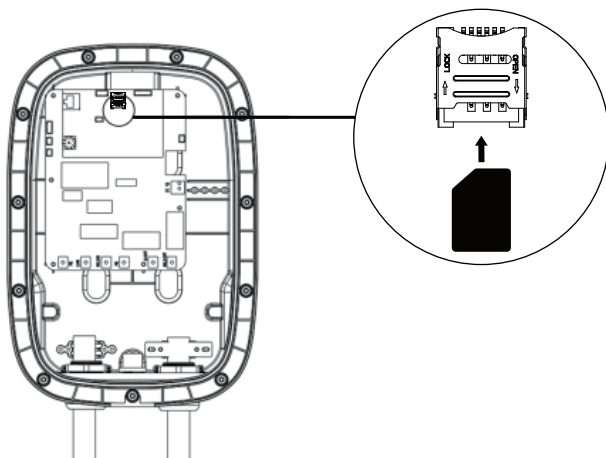


STEP 3

This AC charger is equipped with one current selectors, enabling it to support different maximum output currents via the setting rotary switch.

Setting methods are shown below:

Before setting the rotary switch, make sure the input power is turned OFF.

Use a non-conductive object to set the rotary switch.

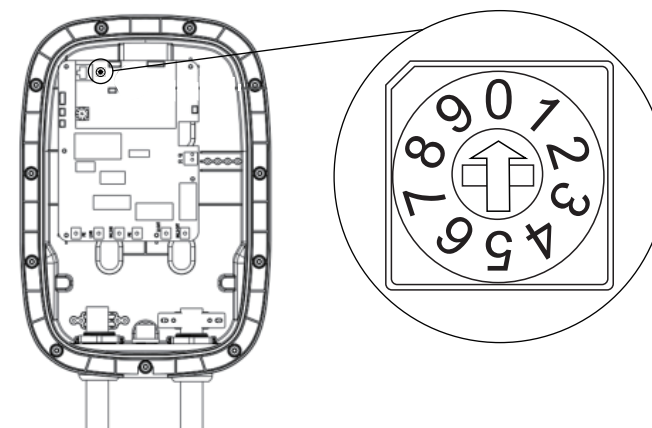


WARNING: The load capacity of the selected AC input cable must be greater than the maximum output current.

Switch Setting Number	0	1	2	3	4	5-9
Maximum Output Current	8A	16A	24A	32A	40A	48A


STEP 4

Tighten 13 screws on the front cover after the front cover is put back, the recommended screw torque is 1.0 N.m (9.6 lbf.in).

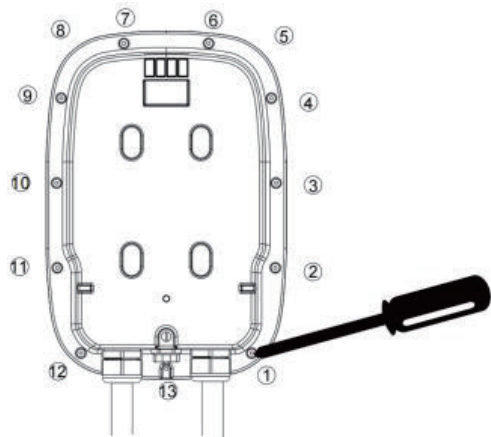

STEP 5

Align the rear notch of charger with the wall-mounted bracket and fit the screw holes of the right and left side, tighten two M5 anti-theft screws to complete the installation.

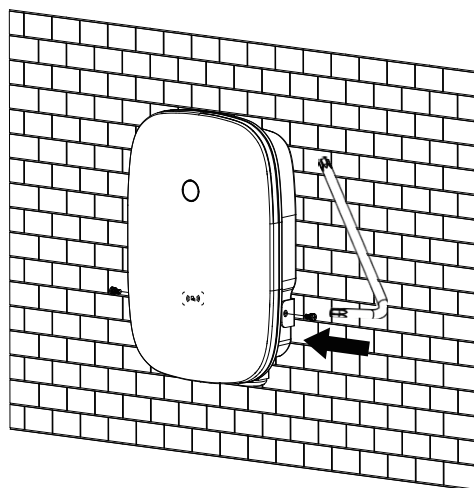

7. Wire The Circuit



WARNING: This device must be grounded. Disconnect electrical power prior to installing the charging station.




WARNING: Improper connection of the equipment-grounding conductor would result in a risk of electric shock. Check with a qualified electrician or serviceman if you are not sure whether the product is properly grounded. Do not modify the plug provided with the product – if it doesn't fit the outlet, have a proper outlet installed by a qualified electrician.



CAUTION: Use appropriate protection when connecting to the main power distribution cable.

For safe use of electricity, please set circuit breaker protection in the input part of EV Charger. The wiring is not complicated, just need to follow the instructions below:

Connect the L1 lead to the grid L1, connect the L2 lead to the grid L2, connect the GND lead to the grid GND.

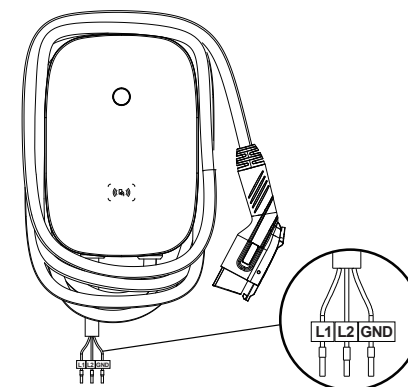

Circuit Breaker Options table

Output Amperage (A)	16A	32A	40A	48A	70A	80A
Circuit Breaker Options (A)	20A	40A	50A	60A	90A	100A

8. Light Codes

8.1 After Start UP

Device Status	Light Codes
Power On	Blue, green and red run clockwise
Standby	Solid Green
Plug The Charging Connector	Solid Blue
Authentication (Swipe Card)	Blue Blinking
Charging In Progress	Blue Breathing
Finished / Stopped Charging	Solid Blue
Reservation Charging	Solid Yellow
Device Unavailable	Yellow Blinking
OTA	Yellow Breathing
Fault	Red

6.2 Error and Warning Messages

No.	Fault Status	Red Light	Remark
1	Meter Fault	1 flash followed by 3 sec pause	Auto Recover
2	CP Fault	2 flashes followed by 3 sec pause	Unplug the Connector to Recover
3	UVP	3 flashes followed by 3 sec pause	Auto Recover
4	OVP	4 flashes followed by 3 sec pause	Auto Recover
5	OTP	5 flashes followed by 3 sec pause	Auto Recover
6	OCP	6 flashes followed by 3 sec pause	Unplug the Connector to Recover
7	Ground Fault	7 flashes followed by 3 sec pause	Unplug the Connector to Recover
8	Relay Fault	8 flashes followed by 3 sec pause	Unplug the Connector to Recover
9	RCD Abnormal	9 flashes followed by 3 sec pause	Unplug the Connector to Recover
10	RCD Self-Test Fault	10 flashes followed by 3 sec pause	Reboot to Recover
11	Relay Self-Test Fault	11 flashes followed by 3 sec pause	Reboot to Recover
12	Sensor Fault	12 flashes followed by 3 sec pause	Check sensor or contact after-sales
13	Cable Fault	13 flashes followed by 3 sec pause	Check cable or contact after-sales

9. FCC Declaration

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

This device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

WIFI module: Containing FCC ID: XMR2023FCS960K

LTE module: Containing FCC ID: XMR202008EC25AFXD

To satisfy FCC RF exposure requirements, a separation distance of 20cm or more should be maintained between the antenna of this device and persons during device operation. To ensure compliance, operations at closer than this distance is not recommended.

10. Warranty and Maintenance

- The warranty period for this charger is three years.
- During the warranty period for any malfunction under normal use according to the User Manual

(to be determined by certified maintenance technicians of sellers), the product shall be repaired free of charge. Except for the following situations, the charger shall be subject to the above warranty terms:

1. The warranty certificate cannot be provided or the contents of the warranty certificate are modified or inconsistent with the label indication of the repaired product.
2. Those who are unable to provide valid proof of purchase.
3. Those who exceed the manufacturer's specified warranty period.
4. Those who damage the product due to not following the product service instruction for use, maintenance and storage.
5. Damage or malfunction caused by external object entering.
6. Unauthorized repair, disassembly or modification.
7. Damage caused by force majeure (such as lightning, excessive voltage, earthquake, fire, flood, etc.).
8. Malfunction and damage caused by other unavoidable external factors. Malfunction and damage caused by improper use of equipment, such as water or other solutions entering into the equipment.
9. Malfunction and damage caused by the grid power supply and voltage which is not specified for use with the charger equipment.

The above guarantees shall be made solely, and no other express or implied warranties shall be made (including the implied warranties of merchant ability, particular and applicable reasonableness and adaptability, etc.) whether in the contract, civil negligence, or other aspects, the Company shall not be responsible for any special, incidental or consequential damages.