



2.0 CH SOUND BAR

LASB-2800BLK



User Manual

Important Safety Instructions

⚠️ WARNING: To reduce the risk of electric shock, do not dismantle the product and do not expose the product to rain or moisture. No user-serviceable parts inside. Refer servicing to qualified personnel only.

1. Read the user manual before use. Keep all instructions for future reference.
2. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the rating label.
3. This product is intended for indoor, household use only.
4. To protect against electric shock: do not immerse unit, plug or cord in water or spray with liquids; do not place unit on windowsills or other places where it may be exposed to dripping or splashing of water; do not place vases or similar objects filled with liquids near the unit.
5. Do not use this product in the immediate vicinity of water such as bathtubs, washbowls, swimming pools etc. where the likelihood of immersion or splashing occur.
6. Keep the unit away from heat sources like radiators, heat registers, stoves or other products that produce heat. No open flame sources like candles should be placed on the unit.
7. Use only with attachments/accessories specified by the manufacturer. Use of attachments/accessories not recommended can be hazardous.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
9. This product is not a toy! Children should be supervised to ensure that they do not play with the appliance.
10. Do not cover the unit during use. Do not impede ventilation by covering ventilation openings with cloths, curtains or similar items.
11. Do not operate the product with a damaged cord or plug or if the product malfunctions, or is dropped or damaged in any manner.
12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
13. For safety reasons, do not remove any covers or attempt to access the inside of the product.
14. Do not clean the unit with any harsh chemicals as this might damage the finish. Wipe clean with a dry cloth.
15. When removing the power plug from the wall outlet, always pull directly on the plug; never pull on the cord.
16. Do not expose the batteries to excessive heat, direct sunlight, fire or similar.
17. Do not throw used batteries in your household rubbish. Dispose of it responsibly according to local regulations.

Remote Control Description

Using the remote control:

1. POWER

Press this button to power on or power off.

2.

In Bluetooth and USB mode, press this button to go to previous song.

3.

In Bluetooth and USB mode, press this button to go to next song.

4. -

Press VOL- to increase volume.

5. 0-9 100+

6. MODE


Press this button to switch the mode within Bluetooth, USB, Aux-in, FM.

7.

In working mode, press this button to turn off sound of soundbar, press it again to turn on the sound.

8.

when playing music, press this button to pause playing, and repress to play .
In Bluetooth mode, long press to disconnect the Bluetooth connection.

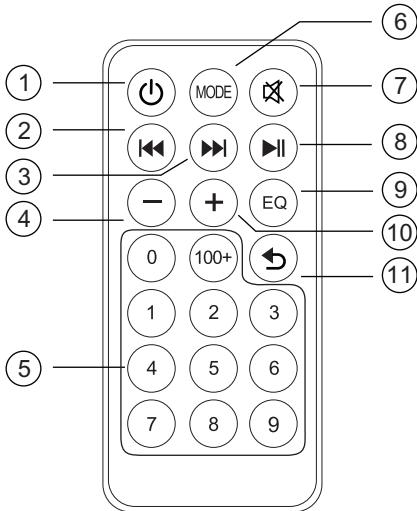

9. EQ

Nor Roc Pop Clas Jazz

10. +

Press VOL+ to decrease volume of the soundbar

11.

Return

Front/Back panels

FRONT



1. ⏻ /MODE

Power On/Off (long press) /Mode (USB, TF, FM, AUX)
(short press)

Press and hold for 10-15 seconds to restore
factory settings

2. VOL-/⏮

Volume down (long press) / Previous (short press)

3. VOL+/⏭

Volume up (long press) / Next (short press)

4. ⏸/⏸/⌚

Pause/Play In Bluetooth mode, long press to
disconnect

U disk/TF long press to loop single/all loops
In clock mode, short press to adjust time, long
press to save time

In FM mode, short press to mute, long press to
automatically search for radio channels.

5. TF

Port for TF card (32 GB maximum)


6. USB

Port for USB drive (32 GB maximum)

7. AUX

Audio input

8. DC 5V == 1A

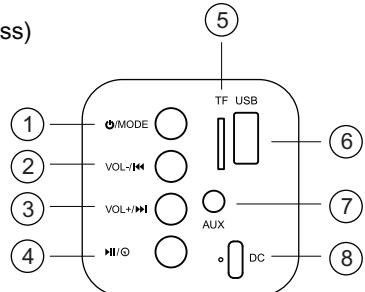

Bluetooth Mode:

- 1.Press the 'MODE' button repeatedly until Bluetooth Mode is selected.Display shows'BT'
- 2.On your Bluetooth-enabled device choose 'LIFESTYLE ADVANCED SOUNDBAR ', the name of the sound bar.The display blinks indicating that it is waiting for pairing, once pairing is successful, the indicator remains on, display shows 'BT' and stop flashing.
3. Now you can play music from your Bluetooth-enabled device on the sound bar. Press the \ll or \gg button on the remote control to play the previous or next song.

Aux Input

If using the Aux cable connect the Speaker to audio equipment, select 'AU' by using the Mode key on the remote control or the Power/Mode key on the side panel. 'AU' will be displayed on the display accompanied by 'AUX' voice prompt.

Clock


- 1.Short press the "MODE" button to switch to the clock mode after power on, short $\blacktriangleright\text{II}/\text{@}$ press to adjust the time, long $\blacktriangleright\text{II}/\text{@}$ press to save the time
- 2.After the Sound Bar is connected to the Bluetooth of the mobile phone, a permission request pops up in the window. Whether to allow the request to read text messages. After clicking Allow, the standard time on the mobile phone will be synchronized to the Sound Blaster.

FM

Switch the mode button to enter FM, short press the play button to mute, and long press to automatically search for radio channels. (Plug in the TYPE-C charging cable as an antenna before searching for radio channels)

Connection schematic

RECOMMENDED PLACEMENT

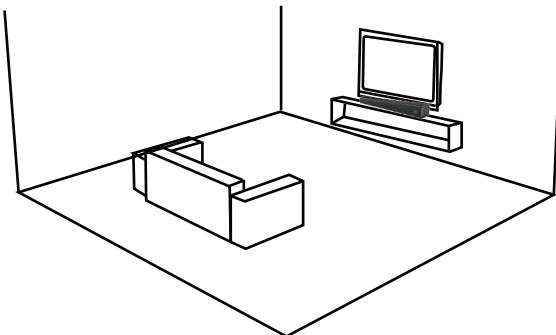

Soundbar: in front of the TV

Speaker Specification

Soundbar Rated Power	10W+10W
Input Voltage	5V == 1A
Power consumption	20W
Battery	3.7V 2400mA
Input signal source	AUX,USB,TF,Bluetooth
Dimensions for sound bar	600*60*60mm
ACCESSORIES:	Remote control, AUX line, Type-c Cable Manual

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.