


To avoid short-circuiting the speakers

- Short-circuiting of the speakers may damage the system. To prevent this, make sure to take the following precautions when connecting the speakers.
- Make sure the stripped end of each speaker cord does not touch another speaker terminal or the stripped end of another speaker cord.

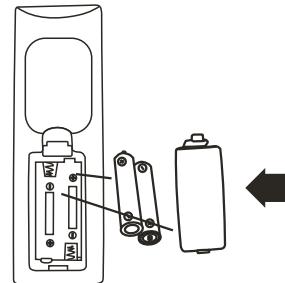

Inserting Batteries into the Remote Control

The system can be controlled using the supplied remote. Insert two batteries by matching the + and - on the batteries. When using the remote, point it at the remote sensor on the front panel of the system

1. DVD menu setting

Press the <SETUP> button on the remote control, the SETUP MENU (main) will be displayed.

1. After accessing the SETUP Menu, press the direction buttons for up and down movement to select an item desired, then press the < > button to confirm your entry and move to the sub-menu. Use the left and right direction buttons to move the pointer, and the up and down direction buttons to select the option desired. Also, press the < > button to confirm your selection. Now, setup of this current function is completed.

2. To end the setup, press the SETUP button again. In the SETUP MENU, you may choose any of the following options as you like.

1.1 GENERAL SETUP

This menu is used to set up TV screen format, video functions and DVD functions, with options of "TV Display", "Angle Mark", "Osd Language", "Captions", "Screen Saver", "HDCD", "last Memory".

1.1.1 TV form

Follow the operating instructions stated in "DVD MENU SETUP" in combination with the desired option in the following figure.

General	Audio	Video	Preference
--General Setup Page --			
TV Display	Wide	Normal/PS	
Angle Mark	On	Normal/LB	
OSD Lang	Eng	Wide	
Captions	Off		
Screen Saver	On		
HDCD	Off		
Last Memory	Off		

Note:


- No matter what screen format you have selected, if your screen displays in 4:3 format, the picture will be shown in that format anyway.
- For DVDs, the screen format is convertible.
- If your screen displays in 4:3 format, when a DVD with 16:9 display format is used, the picture will be flattened.

TV screen Film format	4:3		16:9	
	Normal	Full view	Mailbox	Wide screen
4:3				
16:9				

1.1.2 Angle labeling


When a DVD providing multiple angles is used, the user may select a particular shooting angle.

Follow the operating instructions stated in "DVD MENU SETUP" in combination with the desired option in the following figure.

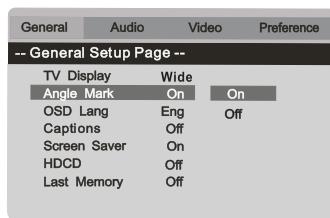


1.1.3 OSD Language

The user may use this item to set the language of the setup menu and screen display to English, German, Spanish, French, Italian.

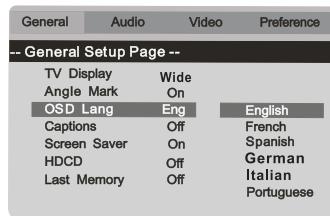

1.1.4. Captions


Turn captions on or off. Captions availability depends on the disc.

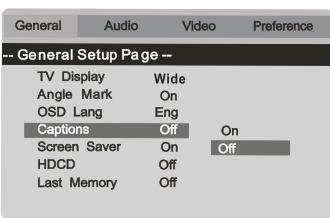

Note: This function doesn't work if the DVD doesn't show it.


1.1.5. SCREEN PROTECTION

Select in " General setup " menu to turn on the Screen SAVER

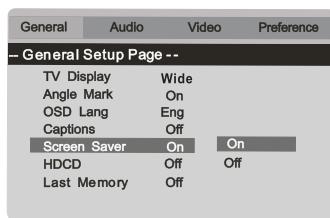

1.1.6. Memory Play Setting



Turn this function on to enable the player to remember where playback was stopped

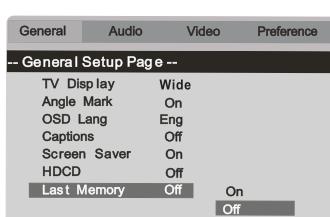

1.2. Audio Setup

1.2.1 Downmix Mode

Follow the operating instructions stated in "DVD MENU SETUP" in combination with the desired option in the following figure.

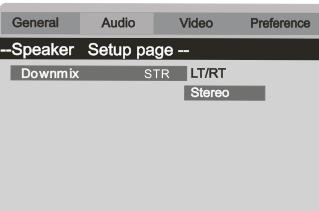
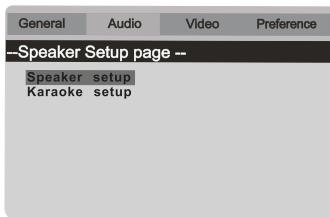


1.2.2 Karaoke setup

MIC ON: To turn ON or Turn OFF the microphone function

MIC VOL: To adjust Microphone volume(1-20)


Echo Level: To adjust Echo Level(1-15)

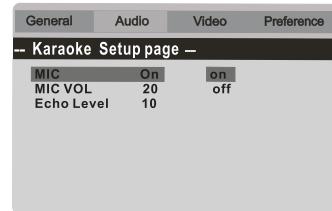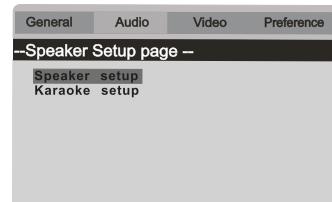

1.3 contrast


Video setup includes: Component, TV mode, Quality (Sharpness, Brightness, Contrast)

Adjust the contrast between light and dark

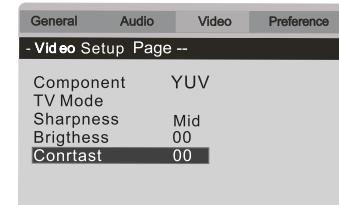


1.4.1 Brightness

Adjust the level of light

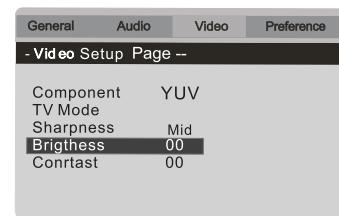

1.4.2 Sharpness

Adjust the sharpness of object edges in the picture

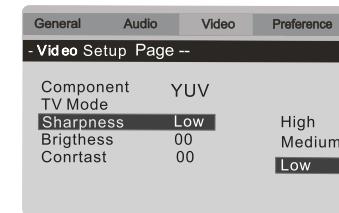

Press right arrow button to enter adjustment mode; press Right and Left buttons to make adjustment.
Press ENTER button to return to setup menu.


1.5 Preference Setup

During stop mode, press the SETUP button to access the PREFERENCE SETUP menu, which includes items of TV type, Audio, subtitle, disc menu language, age control, Password, default values.

Preset values are essential to a DVD player. The user may change these items as desired.

1.5.1 TV Type

Follow the operation instructions stated in "DVD menu setup" in combination with the desired option in the following figure.

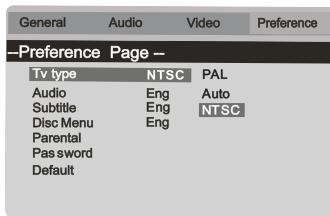


This product supports output of various systems
PAL TV, multi, NTSC TV

1) If your TV set has only NTSC or PAL system, the screen will blink and become colourless when a wrong system is selected. In this case, press the N/P button on the Remote Control to switch the TV TYPE.

2) For more information of output format, refer to the instructions or your TV set.

1.5.2 AudioLanguage

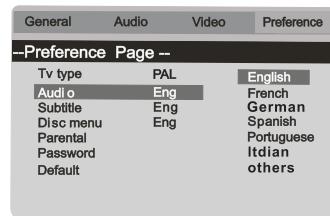


This machine provides English, French, Spanish, Chinese Japanese Korean, Russian, Thai as the built-in disc dubbing language options.

Availability of alternate languages tracks depends on the disc

1.5.3 Subtitle

This machine provides English, French, Spanish, Chinese Japanese Korean Russian and Thai as the built-in subtitle languages. When a DVD is played, the user may hide the subtitle or choose any of them as the preset subtitle language.


Availability of subtitle depend on the disc

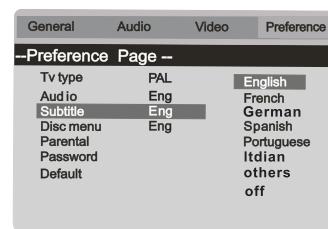

1.5.4 Disc Menu Language

This machine provides English, French, Spanish, Chinese, Japanese, Korean, Russian and Thai as the film's menu language options.

Availability of alternate menu language depends on the disc

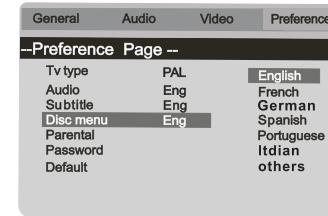


This machine provides English, French, Spanish, Chinese Japanese Korean, Russian, Thai as the built-in disc dubbing language options.

Availability of alternate languages tracks depends on the disc


1.5.5 Age Control

Set the viewing threshold by the movie rating

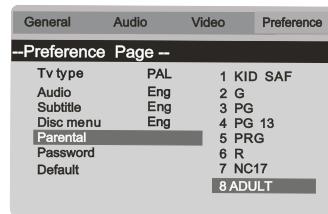


For a film to be restricted for children, the film class may be set according to label marking on the disc.

1.5.6 Password Setup page

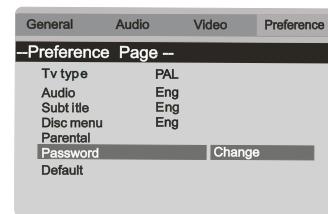

Set it On: Every time you change the parental level the unit will ask you for the old password.

Set it Off: you can change the parental level without enter the password.

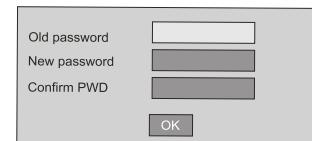


Move the cursor to change option menu; Press ENTER, a password change menu appears;

You must enter old password first (default is 0000), if the old password is correct, you can change the password.

1.5.7 Defaults

This option will resume the original settings of this machine.

Follow the operating instructions stated in "DVD MENU SETUP" in combination with the desired option in the following figure.

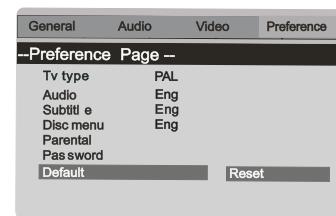


7. CD RIPPING


CD Ripping: copying music from the inserted disc onto the plugged-in USB memory stick

1. With your disc in the disc tray, and your USB memory device in the U SB port, you can make a copy of the music from the disc onto the USB stick. Press the RIPPING button, and a screen similar to the screenshot below will appear.

2. Use the directional buttons and the ENTER button to select the item you want to copy.

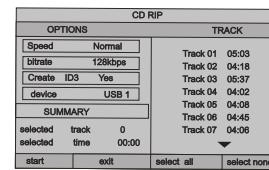

3. After making your selection, select the on-screen 'Start' with the ENTER button to begin the 'ripping' process, indicated by a screen similar to this one:

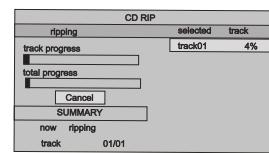

4. During the above process, selecting "Cancel" can abort from the ripping at any time.

5. Once the 'ripping' is complete, the music from your disc is now also available on your USB memory stick.

8. OPERATION OF MP3 FUNCTION

MP3 is an audio compression mode using Level 3 of the international standard MPEG, whereby sound signal is compressed in a rate of 12:1. A MP3 disc can record music for play of over 600 minutes or record over 170 songs, rivaling CD in sound quality.

To play a MP3 disc

Select the track using numbered buttons

- Follow the basic operating instructions to insert a MP3 disc, this machine will start to search the information on the disc and show it in the display.
- Press the number buttons to select the track number desired.
- Press stop key then direction key to select other items

Repeat play

Using this function, the user will be able to enjoy a particular song or all the songs on the disc over and over again.

- Choose a particular song to be repeated.
- Press the REPEAT button to show "REPEAT ONE" on the TV screen.

The screen will display as illustrated:



- Exit repeat play, the screen will display as illustrated:



- Cancel the repeat function, folder will be on screen.

Other functions:

When a MP3 disc is played, the features of mute, volume control, pause and forward and backward search will also be available. The operations are the same with those of CDs.

9. JPEG

JPEG adopting the most efficient compression is widely used as picture storage type flattened and stored format.

Even if pictures are compressed by 15-20 times. They still have good effect. Supported by most picture Processing software, fit for picture storage, it has small data and easy use. This machine can read JPEG-format picture CD disc.

Press number key to select picture display.

- Put in disc correctly, the machine begins to search disc information.
- Press number key to select picture.



- It's efficient only in present picture when press number key.

Select to play by menu

- Put in disc, the machine searches disc information and main menu displays on screen. Press number key to select picture, press play key to make sure.
- Press direction key to select picture then press play key.
- In condition of stop, press direction key to select other pictures.

Parameter

Remote

NOTE:

DO not leave the remote in an extremely hot humid place.
Do not use a new battery with an old one.
Do not drop any foreign object into the remote casing.
Do not expose the unit to direct sunlight or strong, direct artificial light-the remote control may not respond as expected.
If the remote control will not be used for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

Note

- Be sure to match the speaker cord correctly.
- For optimal sound performance, use the supplied speakers.
- Do not use speakers with an impedance lower than the supplied speaker

Accessories

Check that you have the following items:

- Main unit (1)
- Speakers (2)
- Remote control (1)
- FM antenna (1)
- AV cable (1)
- Operations manual(1)

WARRANTY

Supersonic Inc. ("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety (90) DAYS from the date of original purchase. Proof of purchase (receipt) required. Please visit <https://www.supersonicinc.com/pages/warranty> for additional information.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment