


# USER MANUAL

WS-858

Wireless

Karaoke

Microphone

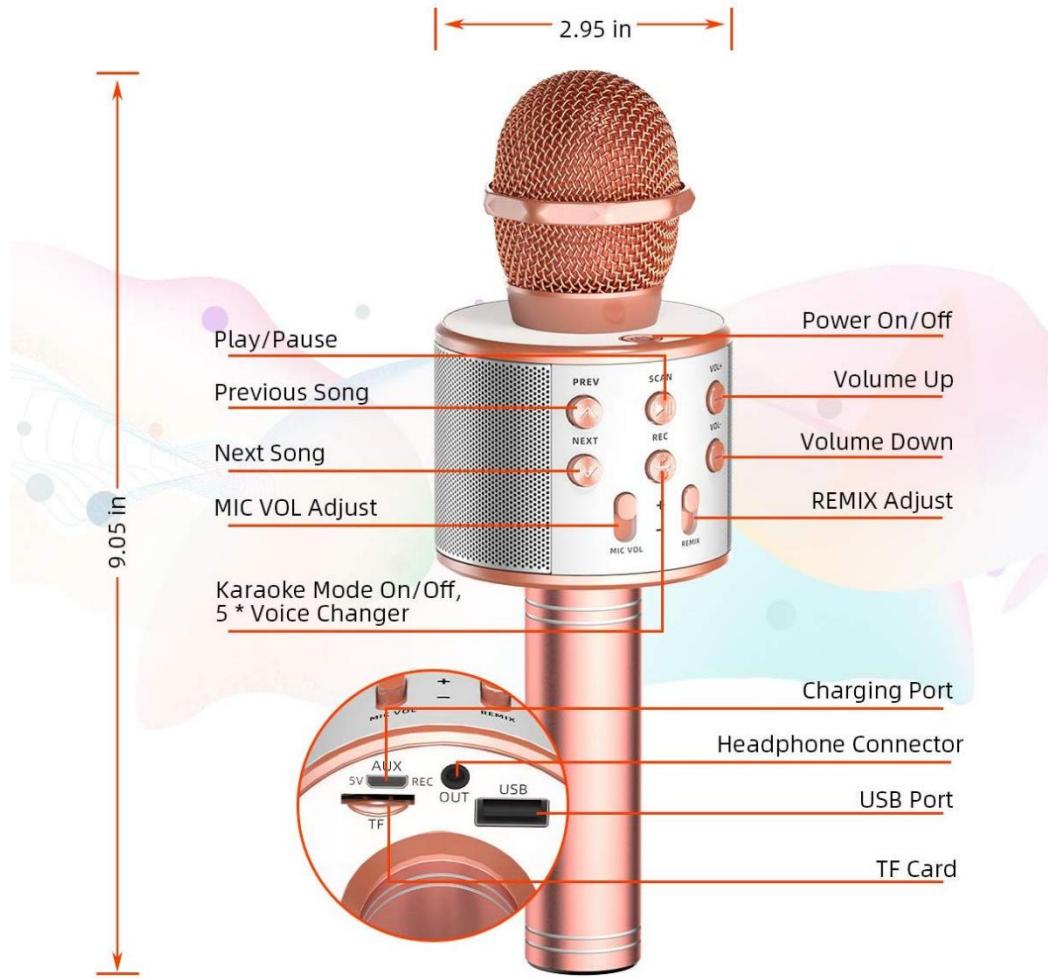

## 1. INSTRUCTIONS

## HOW TO USE

1. Long press the switch button to turn on the microphone within 3-4 seconds, the 'Beep' will be on/off. \*\*\*The default is Bluetooth mode;
2. Bluetooth connection: Turn on bluetooth on your mobile phone, and search the bluetooth name 'WS-858', click and connect successfully with voice prompts;
3. Playing music: Turn on mobile phone music app, download your favorite songs or accompaniment songs, volume could be adjusted by cellphone and microphone.
4. Start singing and have fun!
5. During karaoke, you can shortly press the one-key elimination button (REC) to weaken the original song and leave the accompaniment, or you can long press the voice change button (REC) during karaoke to change your original sound to magic sound.

**Note:** After connecting with the mobile phone once, the Bluetooth has a memory function, and it will automatically connect after turning on the phone. If you need to connect to the Bluetooth of other mobile phones, you need to turn off the connected mobile phone's Bluetooth first.

## HOW TO RECORD

1. Connect the audio cable, plug the micro USB port into pocket and 3.5mm audio port into cellphone; or directly connect to Bluetooth to use the recording function;
2. Open recording app like Apple Music, Spotify, select your favorite song, and start recording the song;
3. Debug and record songs: press the relevant mobile phone music applications to operate.

**Note:** The song is kept in the APP, not in the microphone!

## HOW TO CHARGE

1. When the battery voltage is too low, the product will automatically turn off; Please charge the device for about 3 hours before using it. The red light will turn on during charging, and the red light will go out when it is fully charged. Please keep it off during the process!
2. Using Micro-USB cable to connect with mobile phone standard jack, then the red light will be on;
3. Normal charging 4 hours, fully charging; the red light is automatically off.
4. Normal conditions work 4-5 hours.

**Note:** Please keep it off during the process; The charger current cannot exceed 2A;

## **HOW TO USE TF CARD/FLASH DRIVE**

1. Download the accompaniment/music into the TF card/flash drive, insert the corresponding position on the microphone,
2. Automatically recognize and play music, use buttons to change playlist/pause/play;

Note: The music is placed directly in the TF card/flash drive, do not store in the folder, otherwise it will not be recognized;

## **2. SPECIFICATIONS**

Microphone: Capacitance

Output power: 5W/6W (Speaker Output)

Charging port: micro-USB

Material: ABS material

Frequency Range: 100Hz-10KHz

Maximum sound pressure level: >115dB 1KHz THD<1%

Reverb Mode: Echo sound reverberation

Power Supply: Build-in-Li-ion Battery

Battery Capacity: 800mAh

Charging Voltage: DC 5V=1A

### 3. FAQS

- 1 Please read these precautions carefully before using the phone to ensure the correct use of the microphone.
- 2 When approaching places where fuel, chemicals or explosives are stored, please abide by laws, regulations and related signs.
- 3 To avoid damage to your microphone, you can only use accessories such as a charger with 1A current for your microphone.
- 4 Do not slam, shake or throw violently to avoid malfunction and fire.
- 5 Do not place the microphone in a place with high temperature, high humidity or a lot of dust, otherwise it may cause the microphone to malfunction.
- 6 Do not disassemble or modify the microphone without authorization. Otherwise, it may cause the battery to leak, overheat, burst and catch fire.
- 7 Prevent the microphone from getting damp or other liquids from entering the microphone, causing short-circuit, leakage and other malfunctions of the microphone.
- 8 Do not throw the battery into the fire, otherwise it will cause the battery to catch fire and burst.
- 9 Do not put metal objects such as necklaces into the microphone to prevent short circuits.

## **FCC Warning**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## **4. SERVICE**

**If you have any problems with the microphone, please don't hesitate to contact us, we have 24-hour friendly customer service for you!**

**120 Days Unhappy Return**

**700 Days Warranty Extension**

**24 Hours 100% Happy Support**

**100% happy guaranteed for any issues.**

**warranty@litofelo.net**