


# ROBO SHARK INSTRUCTIONS


Item# 17006

## SHARK AND REMOTE CONTROL BATTERY INSTALLATION

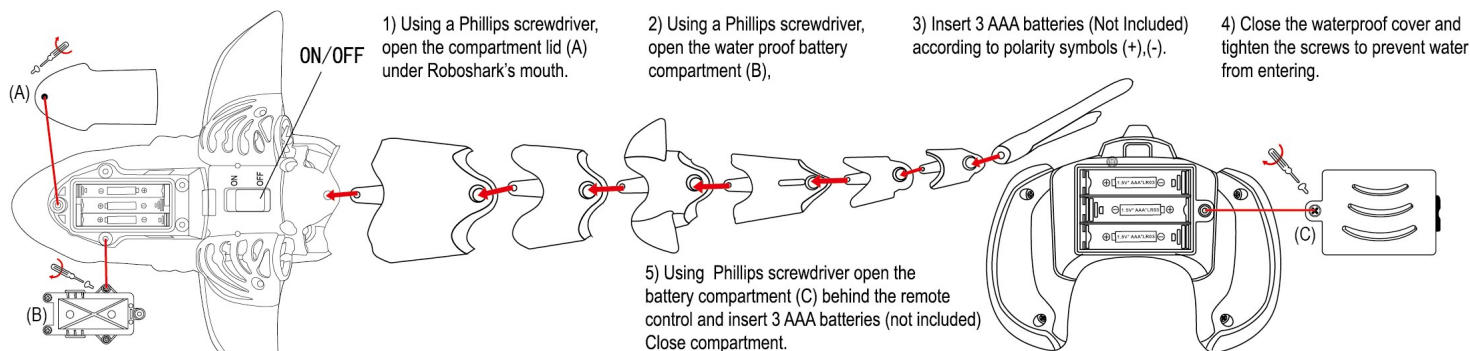

**IMPORTANT: Roboshark's motor will only run when shark is in water.**

## OPERATION AND FUNCTION OF REMOTE CONTROL

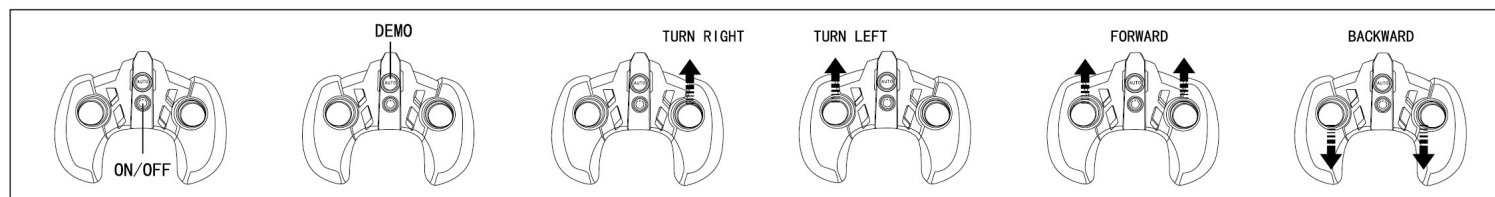

### How to pair Roboshark with remote control:

- 1) To pair the remote control to the Roboshark, please follow steps above to insert batteries. Once batteries are in, turn on the remote control.
- 2) The light on the remote will start to blink. Turn on the shark. If the light in the remote stops blinking, then the remote and Roboshark are paired and you are ready to test the waters. If the light on the remote keeps blinking, the pairing was unsuccessful and you will have to turn the remote and Roboshark off and try again.
- 3) Please note, the shark will not function unless it is in the water. Motor will stop working as soon as you remove Roboshark from the water.



### WARNING:

- 1) This product is a children's toy that should only be played with on the water using the 2.4GHz wireless Remote control.
- 2) Roboshark is waterproof however the remote control is not. Keep remote control away from water.
- 3) After each use, dry Roboshark completely using a towel.



© 2020 Jupiter Creation, INC. All rights reserved  
www.jupitercreations.com

## FCC Statement

**WARNING:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID for shark: 2A2UF-TECK2317006

FCC ID for controller : 2A2UF-TECK23CON

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.