



HVIN : T8LBHV5.1 User Manual

The package includes 2 pack walkie-talkies with license-free operation, which conform to European Radio Communications Committee and Federal Communications Act. It is a simplex device that operates on assigned frequencies. They come with 22 FRS channels, and a back-lit LCD screen, allowing you to communicate for several miles for free-of -charge.

Note: Please read user instructions carefully before using the equipment and keep it for future consultation!

Information to User Note:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

This device complies with Innovation, Science, and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil n'émet pas de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

RF Exposure Requirements:

For body-worn operation, this radio has been tested and meets the FCC/ISED RF exposure guidelines when used with accessories supplied or designated for this product. Use of other accessories may not ensure compliance with FCC/ISED RF exposure guidelines.

Normal Position

Hold the transmitter approximately 25 mm from your face and speak in a normal voice, with the antenna pointed up and away.

Transmit no more than the rated duty factor of 50% of the time. To transmit (talk), push the Push-To-Talk (PTT) button. To receive calls, release the PTT button. Transmitting 50 % of the time, or less, is important because this radio generates measurable RF energy exposure only when transmitting (in terms of measuring for standards compliance).

Pour une utilisation portée sur le corps, cette radio a été testée et est conforme aux directives d'exposition aux radiofréquences de la FCC/ISED lorsqu'elle est utilisée avec les accessoires fournis ou conçus pour ce produit. L'utilisation d'autres accessoires peut ne pas garantir la conformité aux directives d'exposition aux radiofréquences de la FCC/ISED.

Position normale

Tenez l'émetteur à environ 25 mm de votre visage et parlez d'une voix normale, l'antenne pointée vers le haut et vers l'extérieur.

Ne transmettez pas plus de 50 % du temps que le facteur de marche nominal. Pour transmettre (parler), appuyez sur le bouton PTT (Push-To-Talk). Pour recevoir des appels, relâchez le bouton PTT. Une transmission de 50 % du temps, ou moins, est importante, car cette radio génère une exposition mesurable à l'énergie RF uniquement lors de la transmission (aux fins de la conformité aux normes).

Getting Staeted





Reset: press[]button power on, It can be restored to default settings

BEFORE USE

Removing the belt clip

Before insert batteries into the devices, first pull and hold latch on the belt clip and slide the belt clip up to remove it

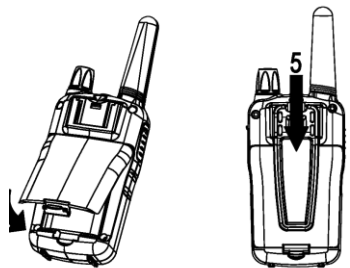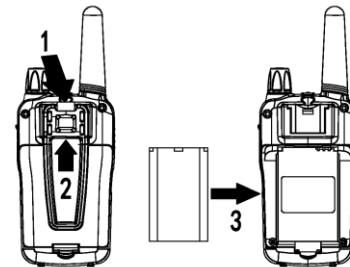

Charging Instructions

This product comes with an 80cm USB/Type-C charging cable.

1. Align the lithium battery with the "+" and "-" symbols and install it properly.
2. Connect the USB end of the charging cable to a DC 5V adapter (sold separately) and plug it into an AC power outlet (AC 110V 60Hz). Connect the Type-C end of the charging cable to the charging port of the walkie-talkie. When charging with the device turned off, the display backlight of the walkie-talkie will illuminate red, and the red light will turn off when charging is complete. When charging with the device turned on, the battery icon on the walkie-talkie will flash, and the battery icon will stop flashing when charging is complete.

Turning the device on/off

- 1.Switch on: Turn on the volume ON/OFF switch knob clockwise until a beep heard;
- 2.Shutdown: Turn the volume ON/OFF switch knob counterclockwise.

Adjusting the volume

- 1.Volume up: Turn the volume ON/OFF switch knob clockwise;
- 2.Volume down: Turn the volume ON/OFF switch knob

3. Battery Charge Level/Low Battery Indication

The battery charge level is indicated by the number of squares present inside the battery icon on the LCD Screen.

-  Battery Full
-  Battery 2/3 charged
-  Battery 1/3 charged
-  Battery empty

When the battery charge level is low, the battery icon will flash and a beep will be heard to indicate that the batteries need to be replaced or recharged.

4. Receiving/transmitting communications:

The devices are in "Reception" mode when it is turned ON and no transmitting.

When a signal is received on the active channel, the LCD will display in reception.

When you press the **PTT** (push to talk) button, the device switches to "**Transmission**" mode.

Hold the device in a vertical position with the MIC (microphone) 3-5 cm away from your mouth. While holding the PTT button, speak into the microphone in a normal tone of voice.

Release the **PTT** button when you have finished transmitting. For others to receive your transmission, they must be on the same channel with you.

Note:

- 1.The talking range depends on terrain and weather conditions. It will be affected by obstructions such as hills, bush or buildings.
- 2.Don't try to use two devices which are less than 1.5m (5 feet) apart. Otherwise, you may experience interference.

5. Changing Channels

Press the **MENU** button one time, the channel number will lash on the display. Press the up▲/down▼ button to change the channel.

Press the PTT button to confirm and return to standby mode.

Note: if no button is pressed within 10 31seconds during setting, the device will return to standby mode.

6. 99 Privacy codes

Press the MENU button twice, the current privacy code will flash on the display.

Press the PTT button to confirm and return to stand-by mode. Press the up▲/down▼ button to change the 99 available privacy codes.

By using privacy codes, your channel will not be easily occupied or interfered by others. It makes your communication more safe and privacy.

7. VOX (Hands free function)

Press the MENU button three times, the current VOX setting will flash on the display and the VOX icon will display, Press **UP▲** button to set the VOX sensitivity level between 1 and 3 level (level 3 is the high sensitive level).

Press **down▼** button until "**OFF**" appears on the display to turn VOX OFF.

Press the **PTT** button to confirm and return to standby mode. In VOX mode, the radio will transmit a signal when it is activated by your voice or other sound around you. VOX Operation is not recommended if you plan to use your device in a noisy or windy environment.

Note: VOX mode will be over-ridden when you press the **PTT** button

8. Scanning for an active radio channel

Press and hold the **UP▲** button 2 seconds: The "**SCAN**" function indicator will appear on the display and the channel will scan continuously from 1 to 8 /I to 22. Once an active channel is found, the scanning will stop and you can listen to the transmission.

When the transmission is on the found channel stop, the scanning will resume automatically.

Note: If you press the **PTT** button while listening to a found channel,

9. Monitor

Press and hold the **DOWN▼** button about 3 seconds to active monitor.

Release the **DOWN▼** button return to standby mode.

10. Setting the Call tones

The device has 10 call tones. Press the **MENU** button 4 times, "CA" is displayed and on the current call tone. Press the **UP▲/Down▼** button to change another call tones.

Press the **PTT** button to confirm and return to standby mode.

11. Sending a call tone

Press the  button ; the call tone will be transmitted on the setting channel.

12. Key-Tone On/Off

When a button is pressed, the unit will beep briefly. To set the key-tone.

- Press the **MENU**- button five times. "**to**" will be displayed.
- Press **▲** to enable (**ON**) or **▼** disable the Key Tones (**OFF**)
- Press the **PTT**- button to confirm your selection and return to the standby mode.

13. Roger Beep On/Off

After the PTT button is released, the device will send out a Roger beep to confirm that have stopped talking.

Press the **MENU** button six times; "**ro**" will be displayed. Press the **UP▲/Down▼** button to disable the Roger beep ON/OFF.

Press The **PTT** button to confirm your selection and return to the standby mode.

14. Double waiting

Dual standby function allows the device to receive messages from two channels

- Press the MENU- button 7 times, the 2CH character flashes on the display

- Press the **▲**up key or the down key to select the second channel, and select to (OF) to close the dual standby function
- Press the PTT- button to confirm the selection and return to standby mode.

15. Backlit display

Press any button except for the **MENU** button to activate the backlight of the LCD display. The backlight will light on about 5 seconds.

16. Earpiece connection

The device can be used with an earpiece (If there is an earpiece packed together with the device). The connector is located on the top of the device. Insert the earpiece plug into the connector (2.5mm jack).

There is a small "**PTT**" button on the earpiece that has the same function as the **PTT** button on the device.

When you use the PTT button from the earpiece, you must also use the microphone from the earpiece to talk.

Note: Do not connect other earpieces; it may damage your device.

17. Battery saving function

When the device has not been used for 6 seconds, the economy mode is automatically activated. This does not affect the reception of transmission and the standby mode is automatically re-activated as soon as a signal is detected.

18. Built-in Flashlight

Your device has a built-in flashlight that can be used in sending light signals or for our lighting needs.

18. Lock & Unlock the device

Press and hold the **MENU** button for 3 seconds to lock the device. Press and hold the **MENU** button for 3 seconds to unlock the device.

19. Technical specifications

Channel:	22 FRS channels
Frequency:	462.5500MHz ~ 462. 725MHz 467. 5625MHz ~ 467.7125MHz
Privacy Code:	99 Groups
Transmission Power	≤0.5W
Range	Up to 5 mile in open field
Battery type	3.7V Li-ion batteries

Modulation type	FM-F3E
Channel spacing	12.5 kHz

Channel and Frequency (MHZ)

USA (22CH)

Ch.	Frequency	Ch.	Frequency	Ch.	Frequency	Ch.	Frequency
1	462.5625	7	462.7125	13	467.6875	19	462.6500
2	462.5875	8	467.5625	14	467.7125	20	462.6750
3	462.6125	9	467.5875	15	462.5500	21	462.7000
4	462.6375	10	467.6125	16	462.5750	22	462.7250
5	462.6625	11	467.6375	17	462.6000		
6	462.6875	12	467.6625	18	462.6250		