 


noise

noise

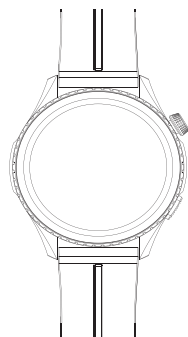

Noise Origin

Please refer to this user manual before using the product.



FRONT

Power On

- Press and hold the functional crown for a few seconds to turn on the watch.

Power Off

- Long press the functional crown. Select 'Power off' to confirm.

Waking the Watch

The Noise Origin smartwatch has an AMOLED touchscreen. Navigate the watch by tapping on the screen, swiping side to side, swiping up and down, and pressing the functional crown and the lower side button.

 
Charging the Watch

- Plug the USB cable into a power adaptor. Plug the power adaptor into an electrical socket. (Power adaptor not included).
- Place the charger's magnetic pins on the magnetic charging points of the watch.
- Once the battery is fully charged, remove the charger.


Contents



1 NOISE ORIGIN SMARTWATCH



1 CHARGING CABLE

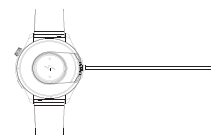 

Pairing the Watch

- Make sure your smartwatch and phone are next to each other before pairing. Turn on the Bluetooth and location on your mobile device.
- Download the NoiseFit App from the Play Store or App Store, or scan the QR code.
- Open the NoiseFit app and allow the Bluetooth and GPS positioning to be turned on.
- Set up Bluetooth calling, set your health goals, enable watch notifications and select the apps you want to receive notifications from.
- Go to the 'My Device' section in the app, and tap on the 'Add' icon in the top left corner. Select Noise Origin and link the watch by scanning the QR code on your watch or by searching for nearby devices.



SCAN TO DOWNLOAD THE APP

Detailed User Manual

For further details on using the watch, visit the Noise website: www.gonoise.com



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

BACK

84 x 84 mm (bi-fold)

300 gsm Matte art card