

Wireless Remote Control

Model: FSQ02


Operating elements

Upper button- **ON**

Down button- **OFF**

Inserting/replacing battery

1. Remove the remote control from the bracket, then revolve the battery compartment lid according to the marks there.
2. Remove the battery Insulating sheet or insert one round cell battery, type CR2032, into the battery recess. The positive pole should face upward (see the "+" imprint on the battery). Push the battery all the way into the battery recess.
3. Close the battery compartment. The battery must be replaced when the remote control's range decreases noticeably or when the indicator lamp no longer lights when a button is pushed.

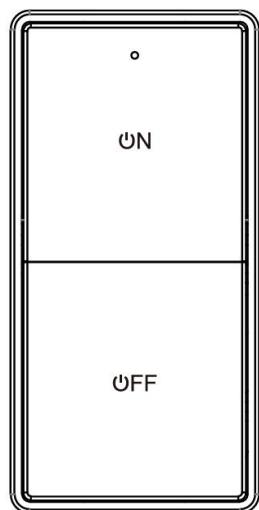

Key functions

- Two control key: upper = **ON**/ down = **OFF**.
- Use the upper key to turn ON receiver.
- Use the down key to turn OFF receiver.

The indicator lamp lights up each time a key is pressed.

The remote control can control an unlimited number of compatible receivers.

Technical data


Battery typeCR2032

Number of channels1 channel

Transmission frequency.....433.92 MHz

Transmission rangemax. 150ft (in open area)

Dimensions (W x H x D) Remote 66 x 32x 9 mm, bracket 105x44.5x3mm

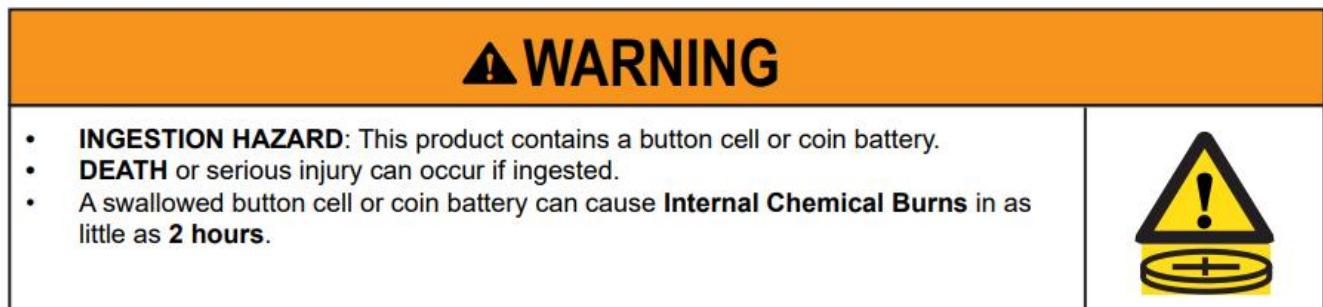

Battery statement

1. Ensure the batteries are installed correctly according to polarity (+ and -). Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
2. Even used batteries may cause severe injury or death. If any problems, please call a local poison control center for treatment information.
3. The compatible battery type is non-rechargeable 3V CR2032, and it's not to be recharged.
4. Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion in chemical burns.
5. Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
6. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

FCC statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement.

The device can be used in 0mm exposure condition, compliance with exposure requirements.

Only in the stated conditions, the device is shown to fully comply with the FCC RF Exposure requirements of KDB 447498.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.