

**Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on.

The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

## True Wireless Earbuds

### Instruction Manual



### Included:

1 x Charging Case / 2 x Wireless Earbuds / 1 x USB Type-C Charging Cable

### Diagram:

	Button Operation	Status Before Execution	Status After Execution	Prompt Tone	LED Status
1	Long Press for 5 Sec.	Power On	Power Off	Power Off	Red Light Flash 1 Time
2	Long Press for 3 Sec.	Power Off	Power On	Power On	Red and Blue lights keep flashing
		Paired w/ iPhone	Connect "Siri"		
		Incoming Call	Rejection		
		Music Mode	Play/Pause		
3	Single Click	Incoming Call	Pick Up		
		On Call	Hang Up		
		Dialing	Cancel Dialing		
4	Fast Double-Click	Music Mode	Left Earbud: Volume Down Right Earbud: Volume Up		
5	Fast Triple-Click	Music Mode	Left Earbud: Back to Previous Song Right Earbuds: Skip to the next song		

### Specifications:

- Pairing Name: GC6219
- Earbud Battery: 3.7V 30mAh (each)
- Charging Case Battery: 3.7V 250mAh
- Charging Case Input: 5V / 0.3A
- Charging Case Charging Time: 1.5 hr
- Earbuds Charging Time: 2 hr
- Earbuds Frequency: 20Hz-20KHz
- Playback Time (at max volume): 3 hours
- Standby Time (after pairing): 60 hours
- Case Measurements: 2" x 13/16" x 7/8" (50 x 46 x 22 mm)

### Charging the Case:

- Charge the case using the included charging cable. Insert the USB-C plug into the case and connect the USB-A plug into a PC, wall charger, or other certified 5V charging device.
- While charging or returning earbuds to the case, the LED display will show the remaining percentage of power held in the case's battery from 0-100.
- Fully charged case can recharge earbuds 3 times.
- Charge time: Approximately 1.5 hours from empty to full charge.



### Caution & Safety:

1. Please read all safety and operating instructions before use.
2. To reduce the risk of injury, close supervision is necessary when the product is used near children.
3. Do not put fingers or hands into the product.
4. Do not expose the product to rain or snow.
5. Use of a power supply or charger not recommended or sold by the product manufacturer may result in a risk of fire or injury to persons.
6. Do not use the product in excess of its output rating. Overloading outputs above rating may result in a risk of fire or injury to persons.
7. Do not use the product that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.
8. Do not disassemble the product. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury to persons.
9. Do not expose the product to fire or excessive temperatures. Exposure to fire or temperature above 100 °C may cause an explosion.
10. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
11. Please re-charge both earbuds every three month if in a long-term storage