

Topjoy Butterfly E-reader

E701

Quick Implementation Guide

Topjoy Butterfly

 
- 1.Read me first
- Please read following safety instructions before use.
- 1.1 Waste Disposal
- Please DO NOT dispose this final product as normal trash, the assembled parts are designed for recycling and reuse, please follow the related disposal regulation at your region.
- 1.2 Handling, Maintenance and Safety
- Please DO NOT place or store this final product close to the fire source, it may cause explosion accident.
 - Please DO NOT place heavy objects on your Butterfly E-reader, failure to do so may result damage to the display panel.
 - Touch panel surface easily have scratch damage, please operate with care, and avoid contact damage with other object.
 - Touch screen with your finger on display, DO NOT use of sharp or metallic objects may cause scratch and damage.
 - Please use the standard USB-C cable to charge the device, failure to do so may cause damage to it.
 - Before cleaning the equipment, the power must be cut off. Please DO NOT use alcohol, liquid or spray type of detersive to clean the equipment.
 - Please wipe the surface of the appliance with a soft cloth with water or non-alkaline cleaners, or gently wipe the display with a soft, lint-free cloth.
 - Use a soft cloth to remove dust from the display, touch screen surface has a special protective coating, will prevent dust from sticking to it; without using a soft cloth, and may cause damage to the protective coating.

- Please DO NOT disassemble the equipment. For your safety concern, only qualified serviceman can open the equipment.
- The using temperature is 0-40°C, please use this tablet in this range.

2.Topjoy Butterfly E-reader Structure Illustrations

Please find the below the E-reader product illustration picture to learn more about the product.

The picture includes front, back, top, bottom side faces. All the key hardware features are identified as listed.

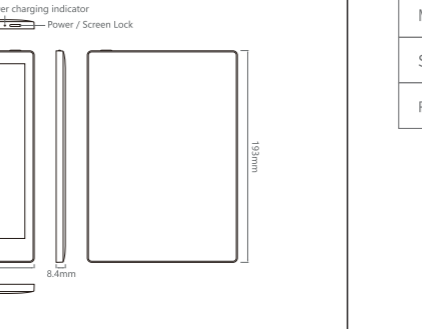

- 3.Topjoy Butterfly E-reader and Accessories List Inside the Case
- Topjoy Butterfly E-reader ----- x1
- Stylus Pen (Note:Only E701 is equipped with a stylus pen) ----- x1
- USB-C Cable ----- x1
- Quick Implementation Guide ----- x1

Power

- Press to turn the device on and off
- Press to lock and unlock the screen
- Long press 10s to force shutdown

USB-C port

- Connect the PC and device by using data cable to transmit data, or charge the color e-Paper reader
- Support OTG

Indicator

- Battery charge indicator

MIC

- Record

Speaker

- Play audio

Reset button

 
- Press to reset the device

4. Start using

4.1 Home

Home interface

Include status bar, content area, and function bar.

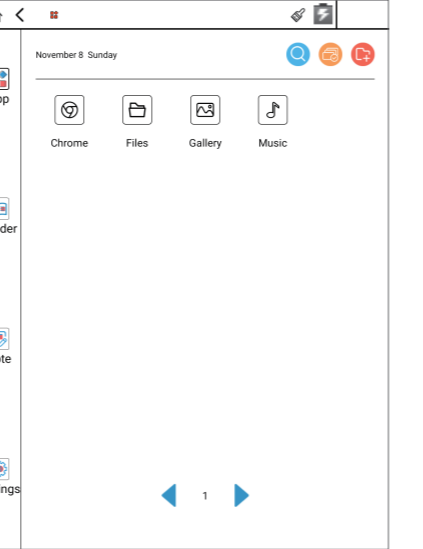


Function bar can switch the main functions of the device; Click the function icon to return to the home page.

4.2 Read


Press Read to enter bookshelf interface, all the book covers are showed here.

 Click on book cover to enter reading, while you can also search, sort, multi select and create new folders for books.

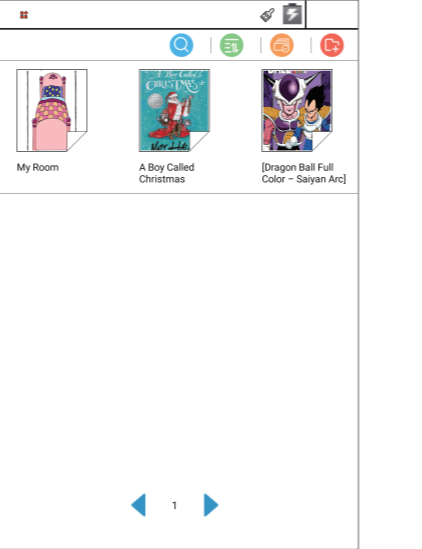


4.3 Note

 There is tool bar, content area and page number three parts.

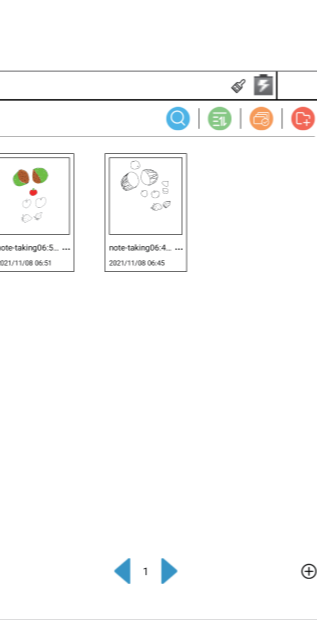

4.4 Settings

 You can check the equipment model and version in the settings, and set other parameters. Click product picture to download user manual.

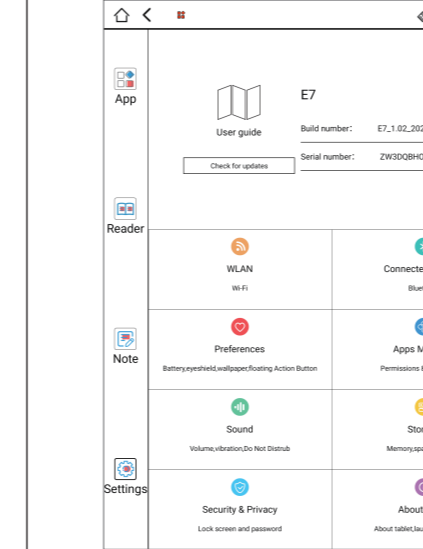

4.5 Specification

Mode	E701
Dimensions	180*131*6.6mm
Screen	7.8" 16:9 New Color E-Paper screen
Resolution	1404*1872
B&W PPI	300PPI
Color PPI	150PPI
Color Mode	Support black & white and color display mode
CPU	4 core 64 bit Cortex A55, max 1.8GHz
GPU	Mali-G52
RAM	2GB / 4GB LPDDR4
Internal Storage	32GB / 64GB
Touch Screen	Capacitive touch full lamination technology
Stylus	4096 Level with Eraser
Reading Front Light	yes
WiFi+BT	802.11 ac/b/g/n 2.4G/5G +BT4.2
Speaker	Built-in 0.8W speaker*1 (BOM)
Microphone	Noise Cancelling MIC (dual MIC)
Battery	3.8V 3320mAh
Standby time	70 days
Charging	USB Type-C (Charging + data + OTG)
Material	Plastic (UV)
Weight	315g
OS	Android 11.0
File Formats	PDF, EPUB, TXT, DAU, HTML, RTF, FB2, DOC, MOBI, CHM etc.

5. Basic Trouble Shooting

5.1 The device displays an error message for the network or service

If you are in an area where the signal is weak or the reception is poor, may not receive signal well.

Please move to another area and try again. Error messages may occur repeatedly as you move.

5.2 The device is unable to POWER ON successfully

When the battery is fully discharged, the unit will not be turned on. Fully charge the battery before turning on the unit.

5.3 Touch the screen to respond slowly or unresponsive

- If you install a screen saver or buy accessories on the touch screen, the touch screen may not function properly.
- If you wear gloves when touching the touch screen, your fingers are not clean, or you touch the screen with a sharp object or fingertip, the touch screen may fail.
- Touch screen may fail in wet conditions.
- Restart your device to clear any temporary software errors.
- Confirm that your device's software has been updated to the latest version.

5.4 Equipment crashes or a serious heating issue

Try the following solutions, if the problem is still not resolved; please contact the designated after-sales service center.

5.4.1 Reboot the device

If the device occurs, you may need to close the application or turn the device off and power it on again.

5.4.2 Force restart

If the unit fails to respond, press and hold the power key for more than 10 seconds to restart the device.

5.4.3 RESET

If the above party does not resolve the issue, perform a factory-reset operation. Settings → About tablet → Factory data reset → Erase all data → Delete all data (factory reset).

Please remember to back up all the important material stored in the unit before performing the reset set-up operation.

5.5 The network is often interrupted

5.5.1 Wi-Fi signal weak

- The e-Reader may be out of range. Move it closer to an access point or another wireless LAN device associated with it.
- Check your surroundings for interference, such as microwave ovens, wireless phones, and mobile tablets should stay away from objects that cause interference.

5.6 Battery Status Icon is empty

Battery Level is low; please charge the battery right away.

5.7 The battery is not charging properly

- Please make sure the battery charger is connected correctly.

5.8 Battery runs out faster than at the start of purchase

- When the device or battery is exposed to extremely cold or extremely hot temperatures, the effective charge may decrease.
- Battery is a consumer and will be less effective over time.

5. 9 Bluetooth doesn't work

If another Bluetooth device is not located or has a connection or performance problem, try the following:

- Make sure the device you want to connect to is ready to search or connect.
- Make sure your device and other Bluetooth devices are within the maximum Bluetooth range(10m).
- On the device, switch Bluetooth OFF and ON to restart.
- On the device, restore factory default, perform this operation will clear the data, please do a backup first.

5. 10 Data stored on the device has been lost

Please ensure that you have fully backed up all the data stored on the device regularly. We are not held liable for the permanent loss, damage, or misuse of your data.

Warranty Card

Product Name : _____

Model: _____

Buying Date: _____

User Name: _____

User Phone: _____

Warranty Description:

During 1 year warranty,we will provide free repair service if the fault is caused by the quality issue of device under normal use.

This card is warranty certificate,pls keep it well.

Warranty Clauses

- User can find 1 User Manual and 1 warranty card after they buy it.Pls fill in the warranty card to keep as a Warranty Certificate.
- During 1 year from the buying date,users who hold the warranty card can enjoy free repair Service if quality issue occurs when the device is used normally.
- Below situations no included in warranty range:
 - There is no signature or stamp of sales unit
 - Contrived or irresistible factors lead to damage
 - Device normal wear
- If the faults are caused by contrived or irresistible factors, we will charge certain spare part cost for repairing.
- Pls request warranty from local agent or our factory when the device occur faults,pls write Detailed address,name, phone no. and fault description.

Service Hotline: +86 755 82814862
Email: support@topjoyint.com
Website: www.topjoyint.com
Address: 2A,Block A, Central Avenue, Baoyuan Road,Xixiang Ban An District, ShenZhen, China,518100

www.topjoyint.com

Federal Communications Commission (FCC) Statement. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received,

including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by **Top Joy International Development Group Ltd** may void the FCC authorization to operate this device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

The device complies with RF exposure requirements and can be installed and used without restriction.