


Intelligent Cloud Film Cutting Machine

User Manual


(Please read this manual carefully before operating the machine)

Packing list

smart phone

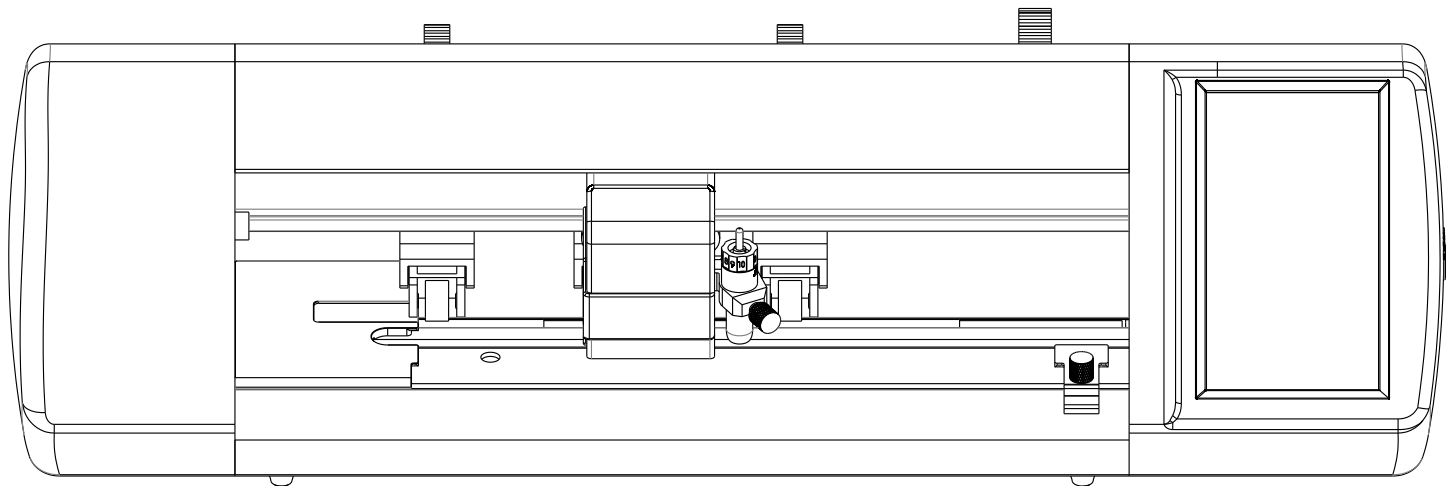


Cutter*1

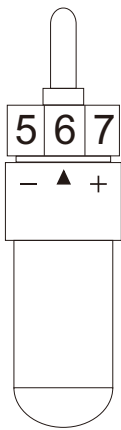


Blade holder *1




Blade*3

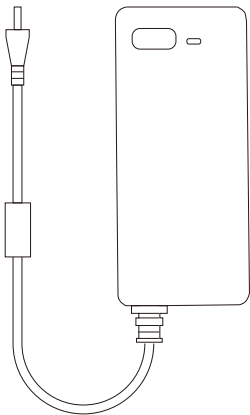


Power adapter*1

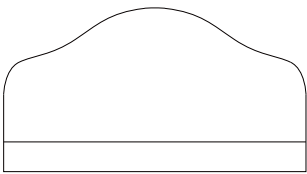


Scraper*1

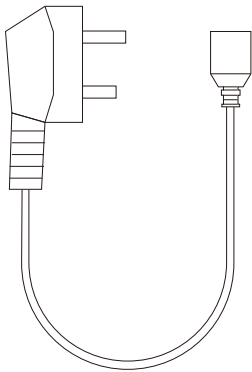


Power cable*1

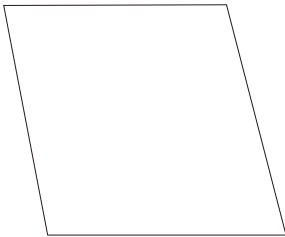

Warranty card*1

 


Non-slip mat*1

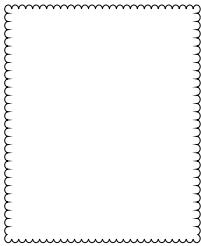

Cleaning cloth*1

Packing list


smart phone

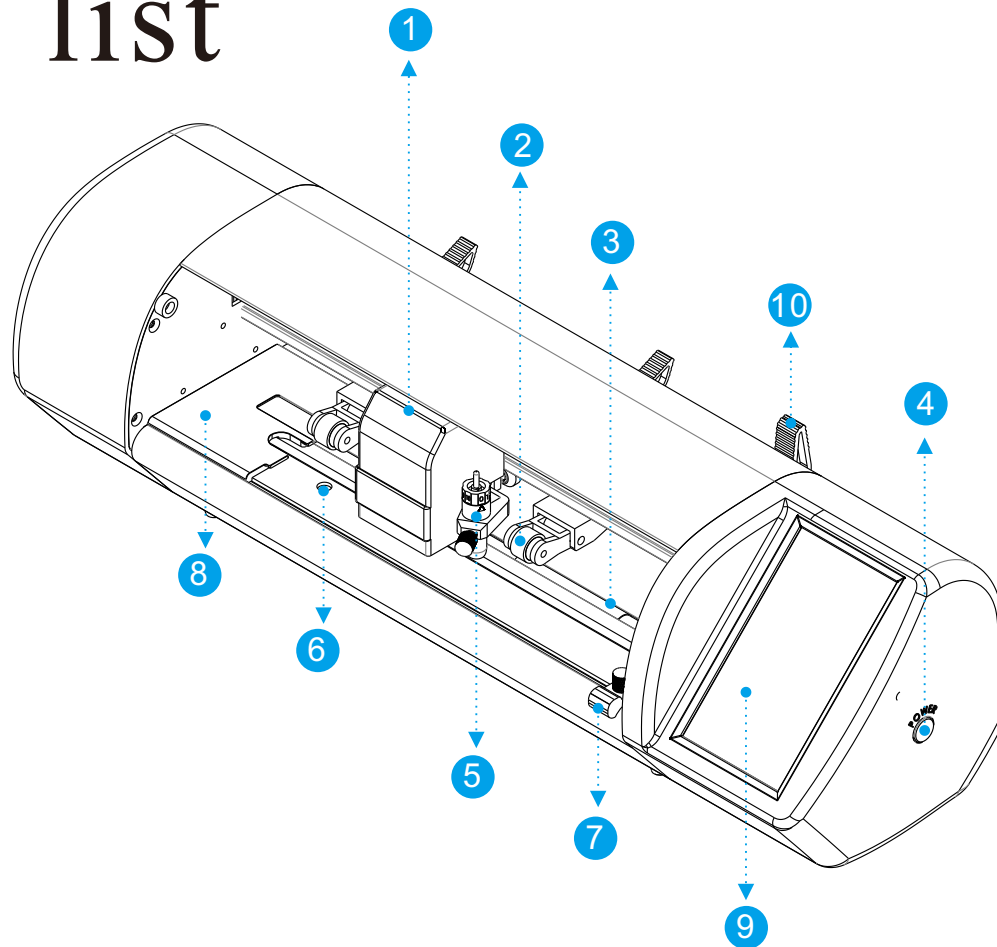

- ① **Cutter carriage**
Control the blade to cut the film sheet
- ② **Rubber wheels**
Work with steel axis to keep cutting without slip
- ③ **Steel axis**
Work with rubber wheels to fix and protect film sheet
- ④ **Power switch**
Turn on the machine . Press it lightly to turn back the films during stand-by
- ⑤ **Blade holder**
Install the blade to cut the film sheet
- ⑥ **Film feeding sensor**
Auto feeding the film after detecting it
- ⑦ **Right baffle**
Used along with left baffle to keep film sheet without shift
- ⑧ **Left baffle**
Used along with right baffle to keep film sheet without shift
- ⑨ **High definition screen**
6 inch touch screen , built in operation system
- ⑩ **Roller handle**
Press handle and the roller will put up , then the roller can be moved

Blade installation

smart phone

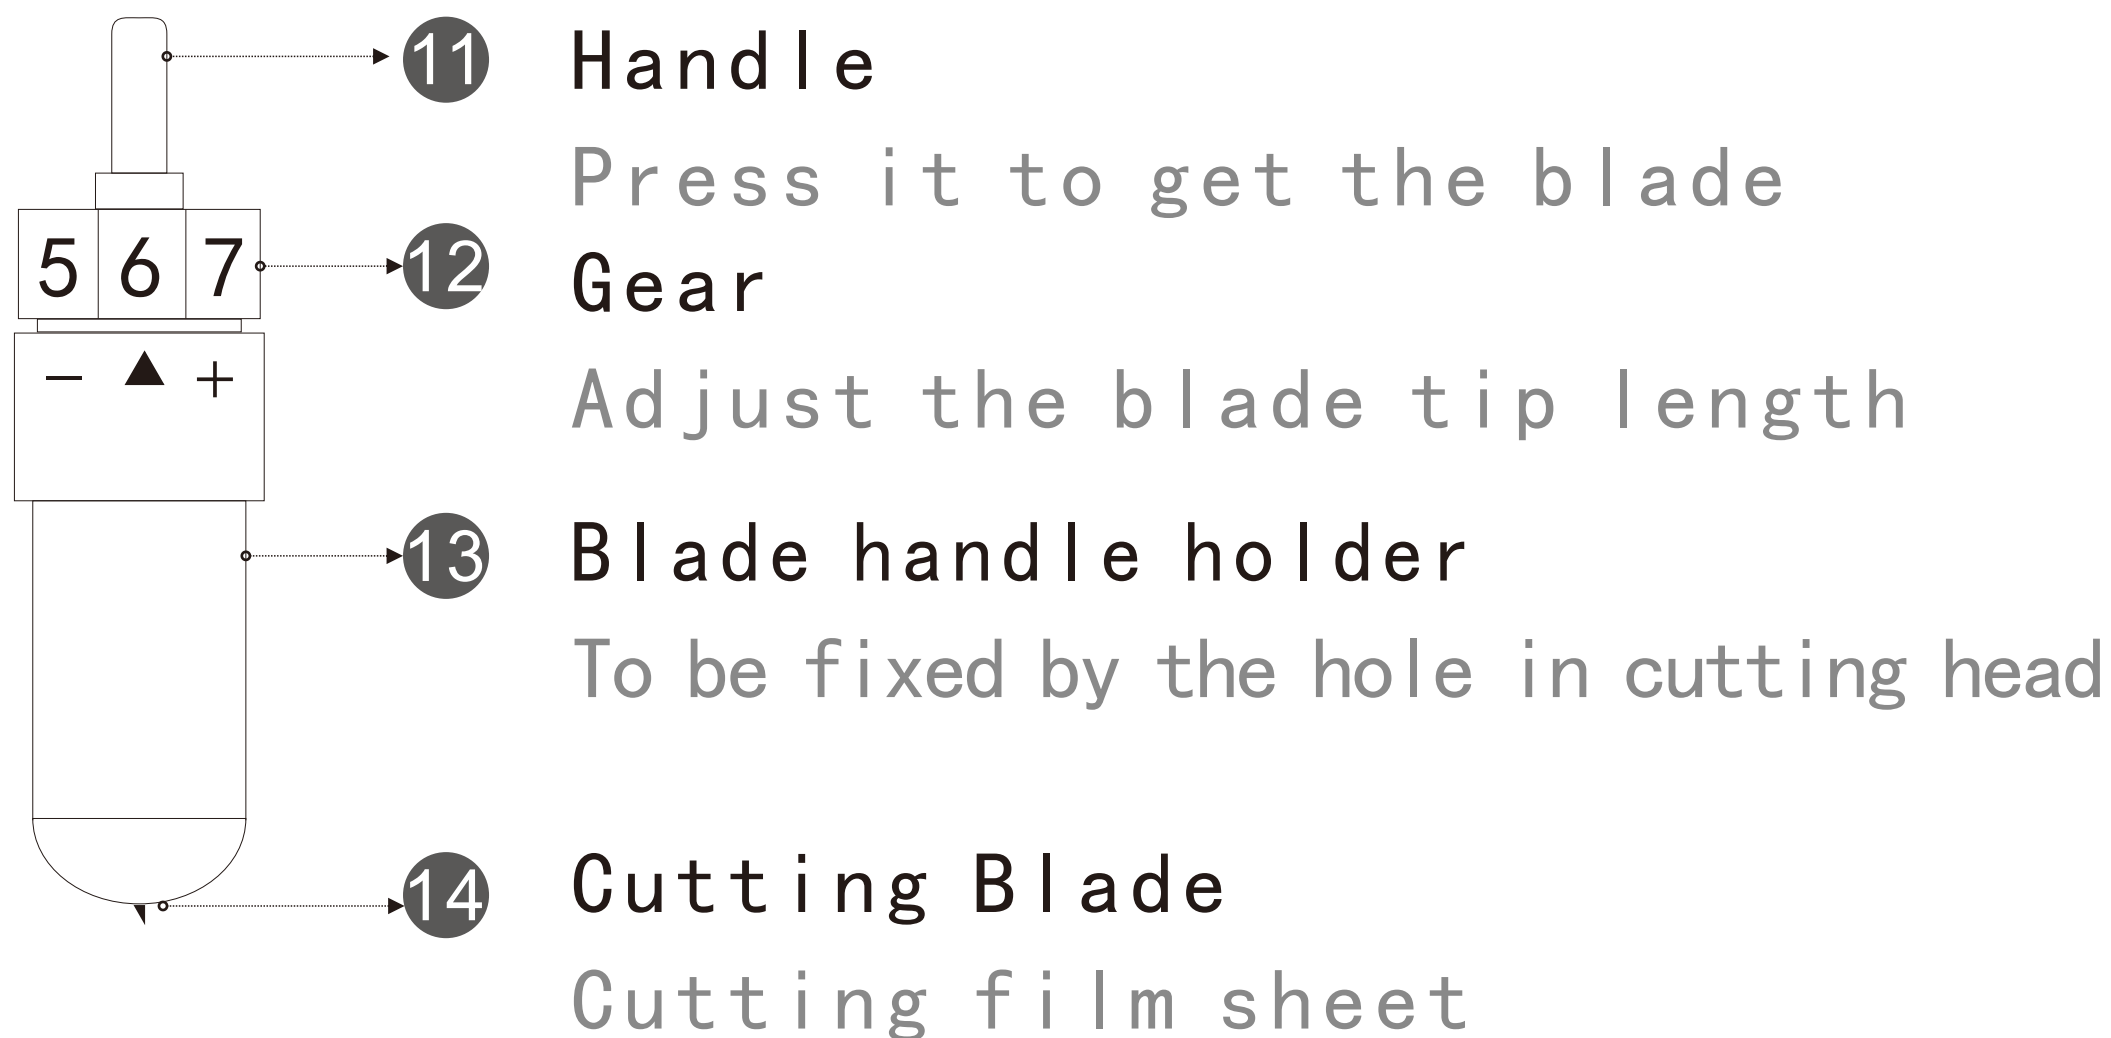

Notes:

Ajust the blade:

Twist the gear to adjust the blade tip

Value bigger, tip longer

Value smaller, tip shorter

Factory setting is gear 6



Change blade:

Press handle


take out the old blade, put a new one in it

Blade holder installation


smart phone

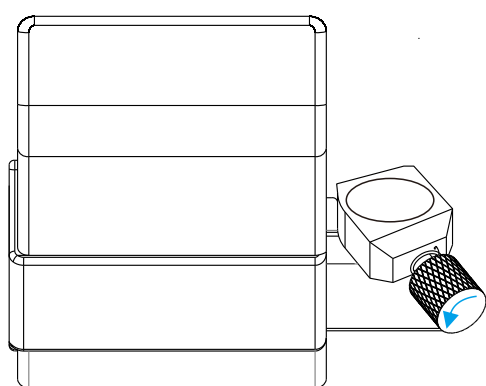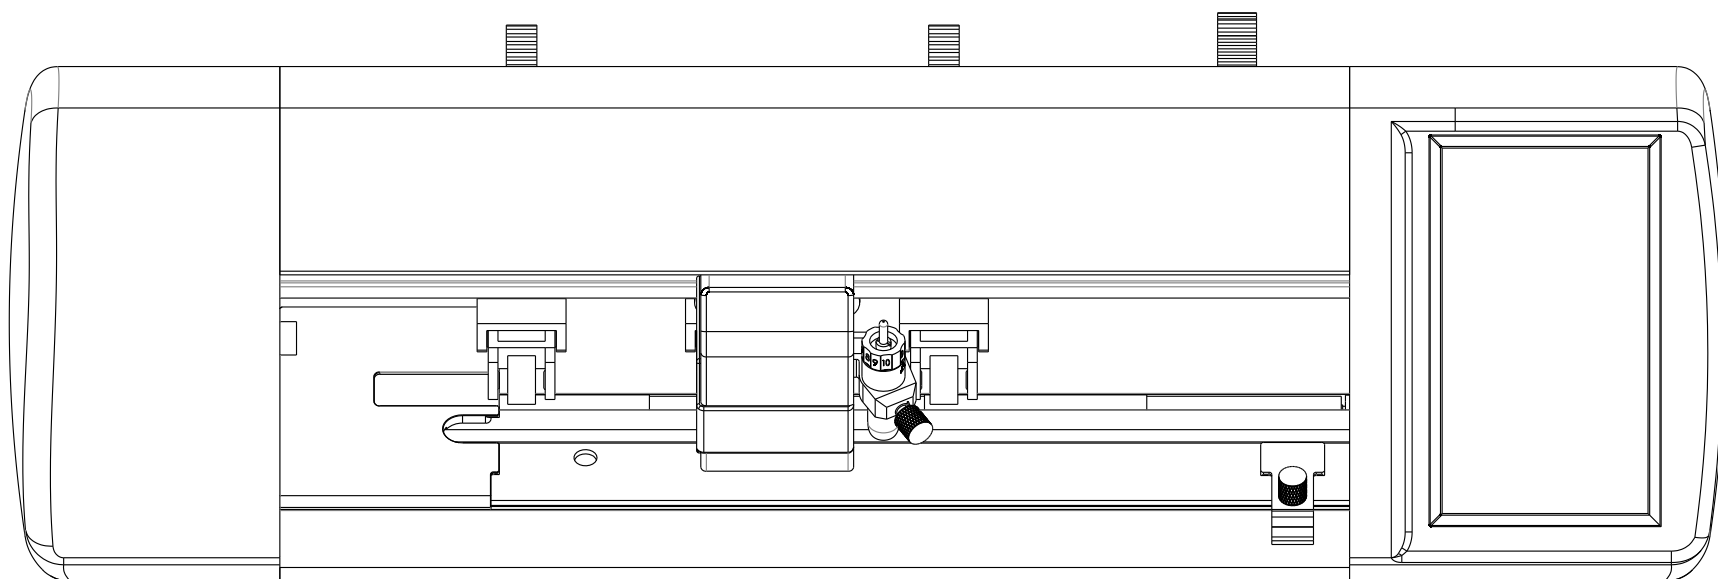

- 1** loose the screw
Turn the screw counterclockwise in 8 times

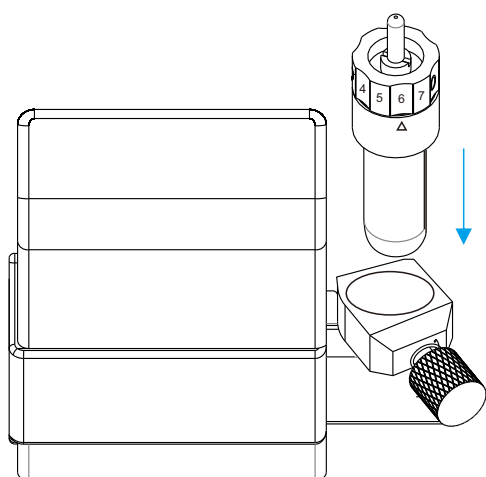


- 2** Insert the blade holder
The blade holder with the cutting blade is placed vertically into the holder's hole.

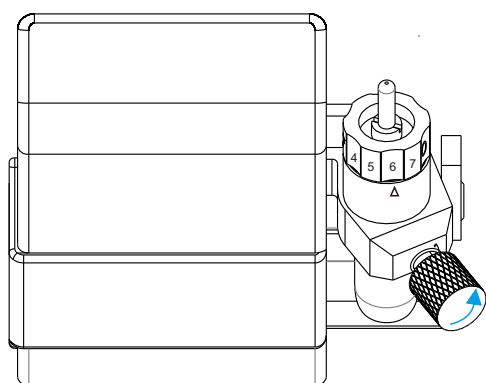

- 3** Fix the screw
Turn the screw in clockwise.

Power on / off

smart phone

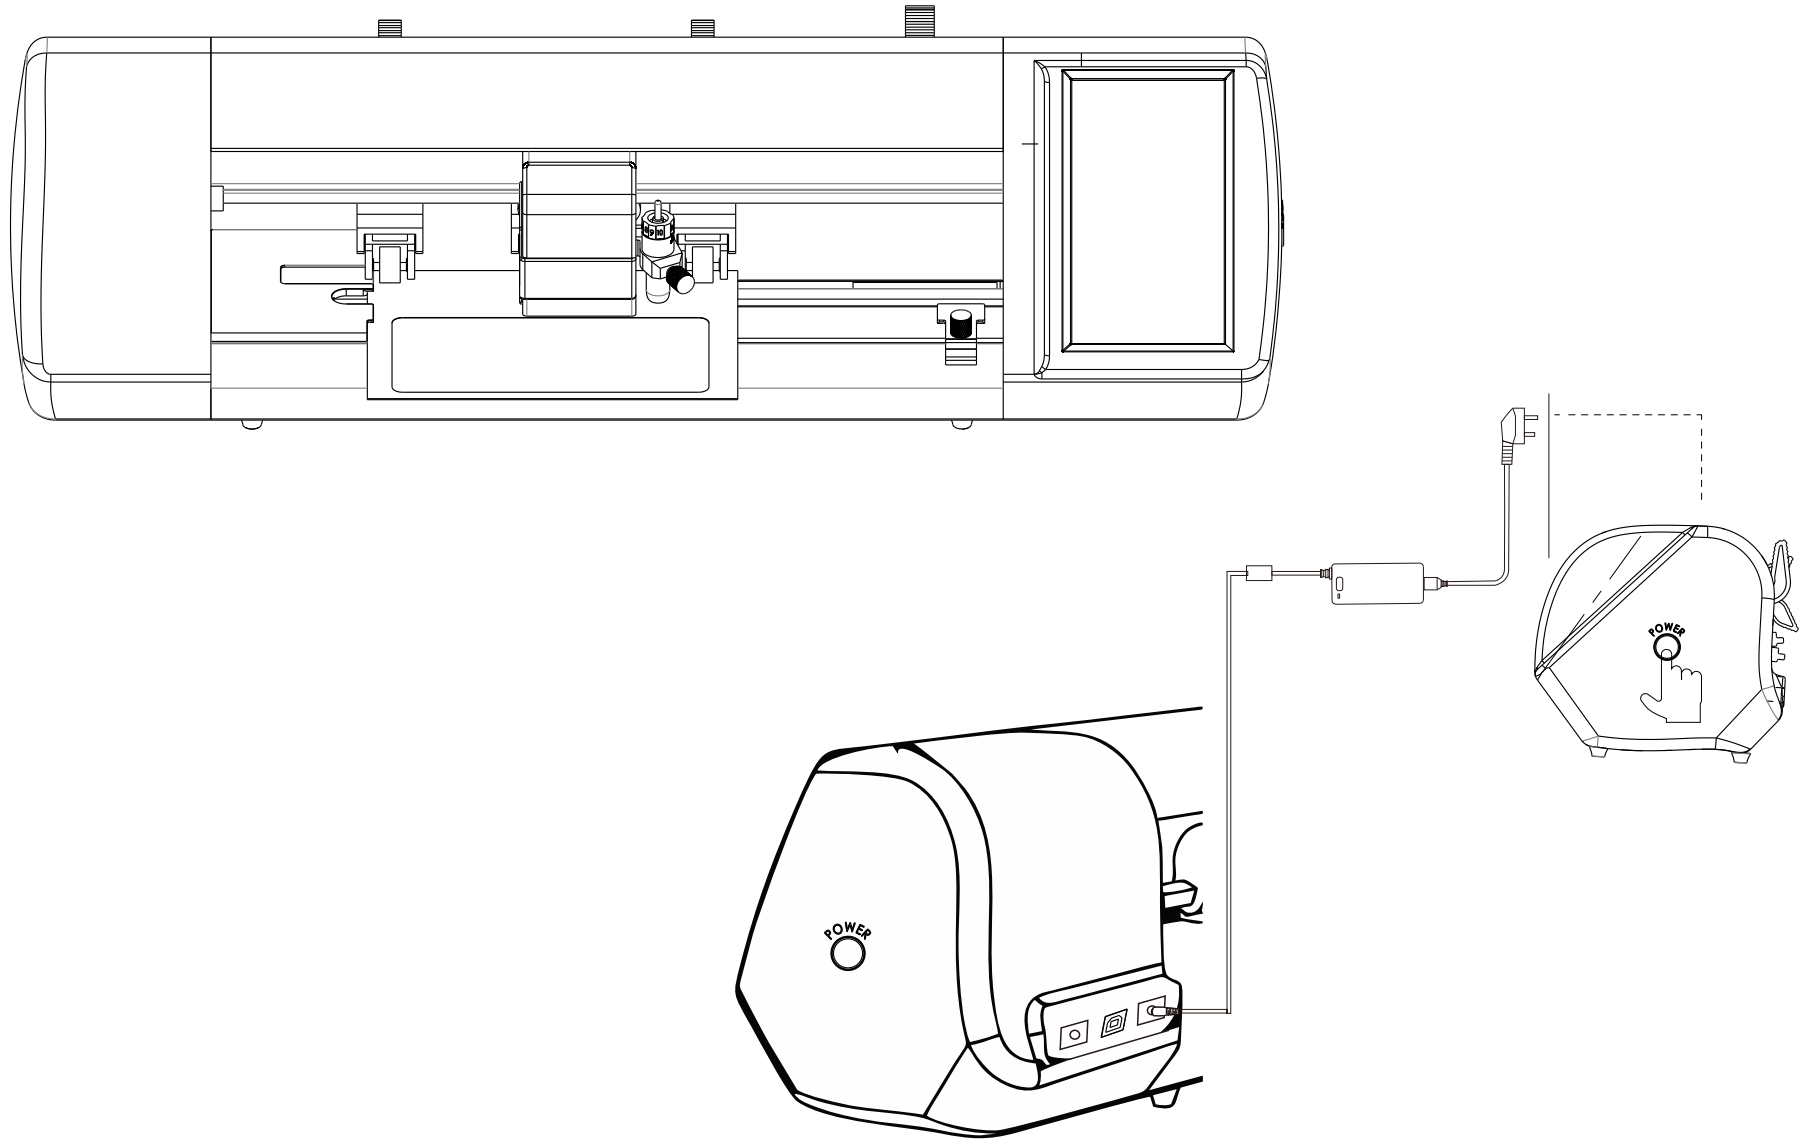

Connect the cable and adapter.



110-240V AC power for the plug connection.
The adapter connects the machine.

Press the power button, machine power on.

It takes 30s for starting.

Material installation


smart phone

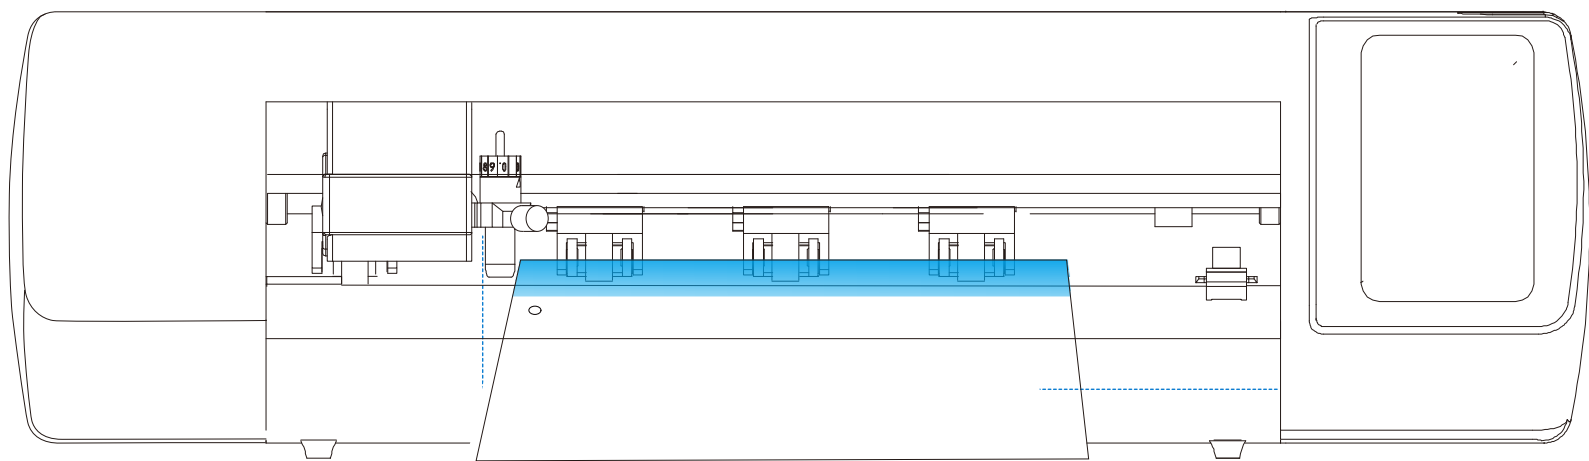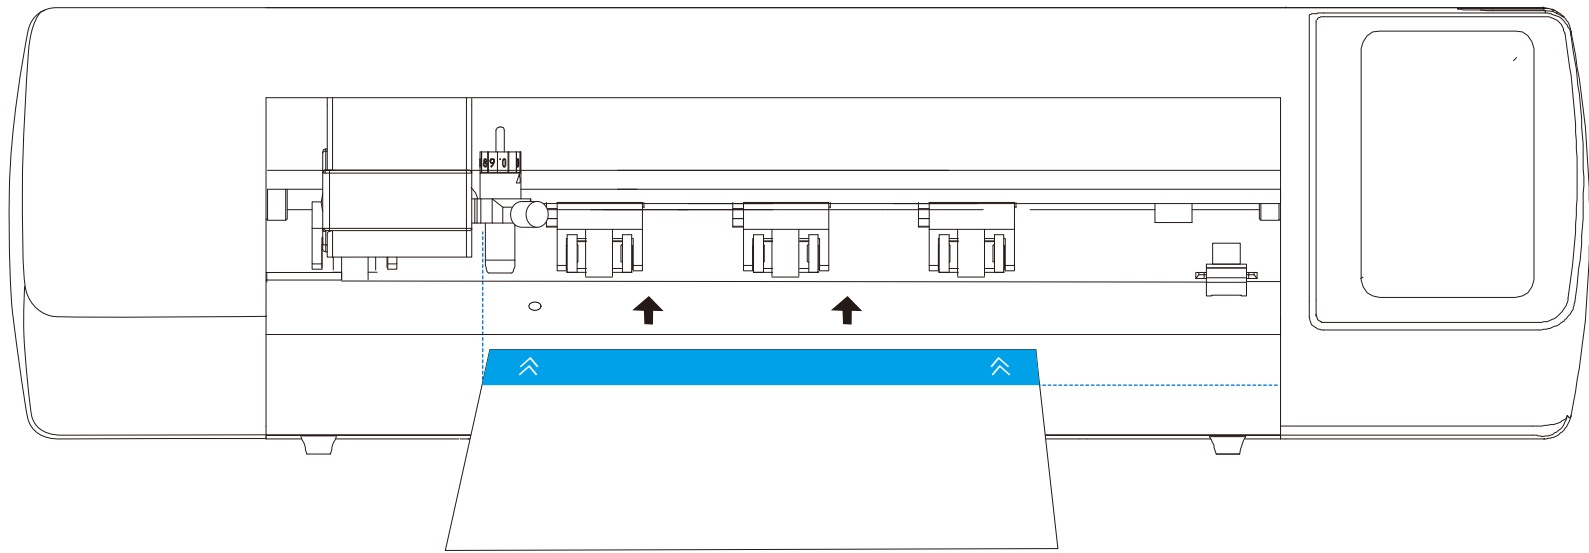

Put the material on the table flatly
and align left based on the feeding guide

The material will be feed automatically
after the cutter detect it..

(If the film shift, press the switch in 1
second and the film will be returned back
automatically)

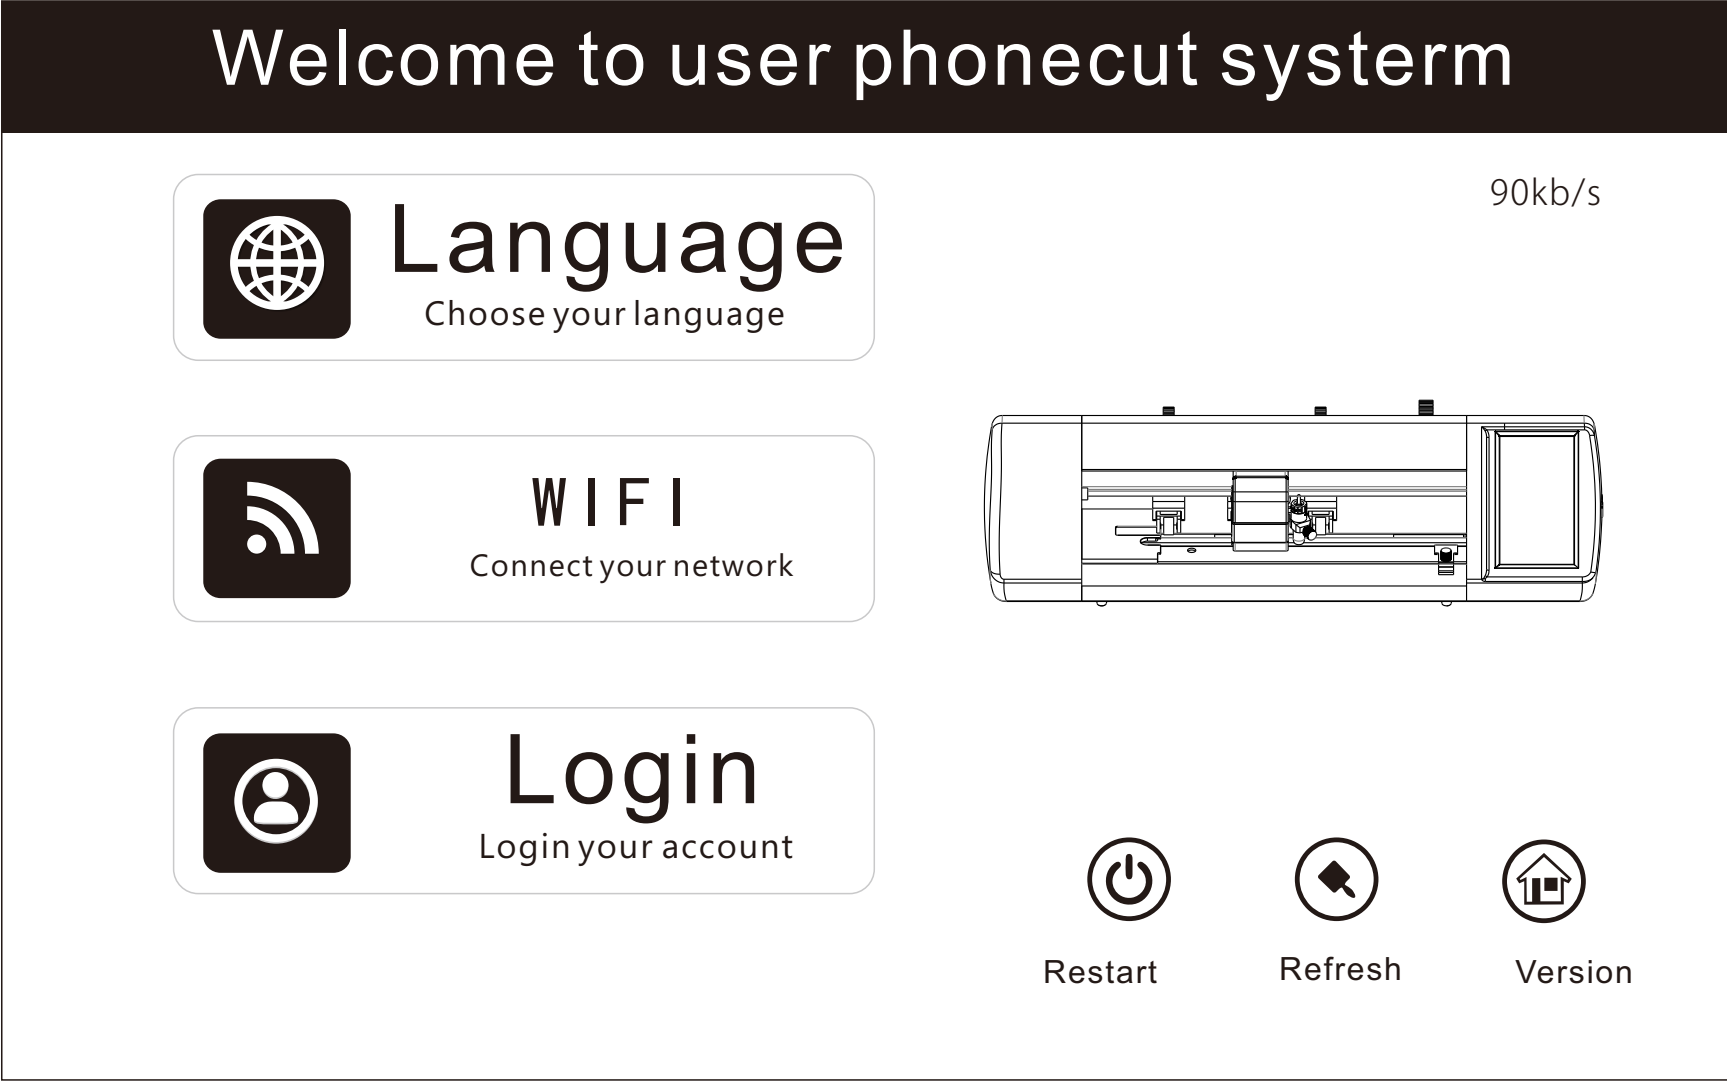

After turn on the wifi on the cutter , click and choose a wifi to connect .

phocut008		
Connect ?		
Don ' t save	Cancel	yes

Note: Conncting succeed, the wifi ID will be showed below if not, you may need insert the correct password and connect. .

Login account

smart phone

Login

Account:

vip003

Version:

Count

▼

Password:

* * * * *

👁

☒ Auto login

Register

Clear account

Login


Return

After connecting wifi, choose login and insert the account and choose version , then insert your password to login the data page..

Account and password may paste on the bottom of the cutter or you can get from your supplier

Choose Cutting Data

smart phone

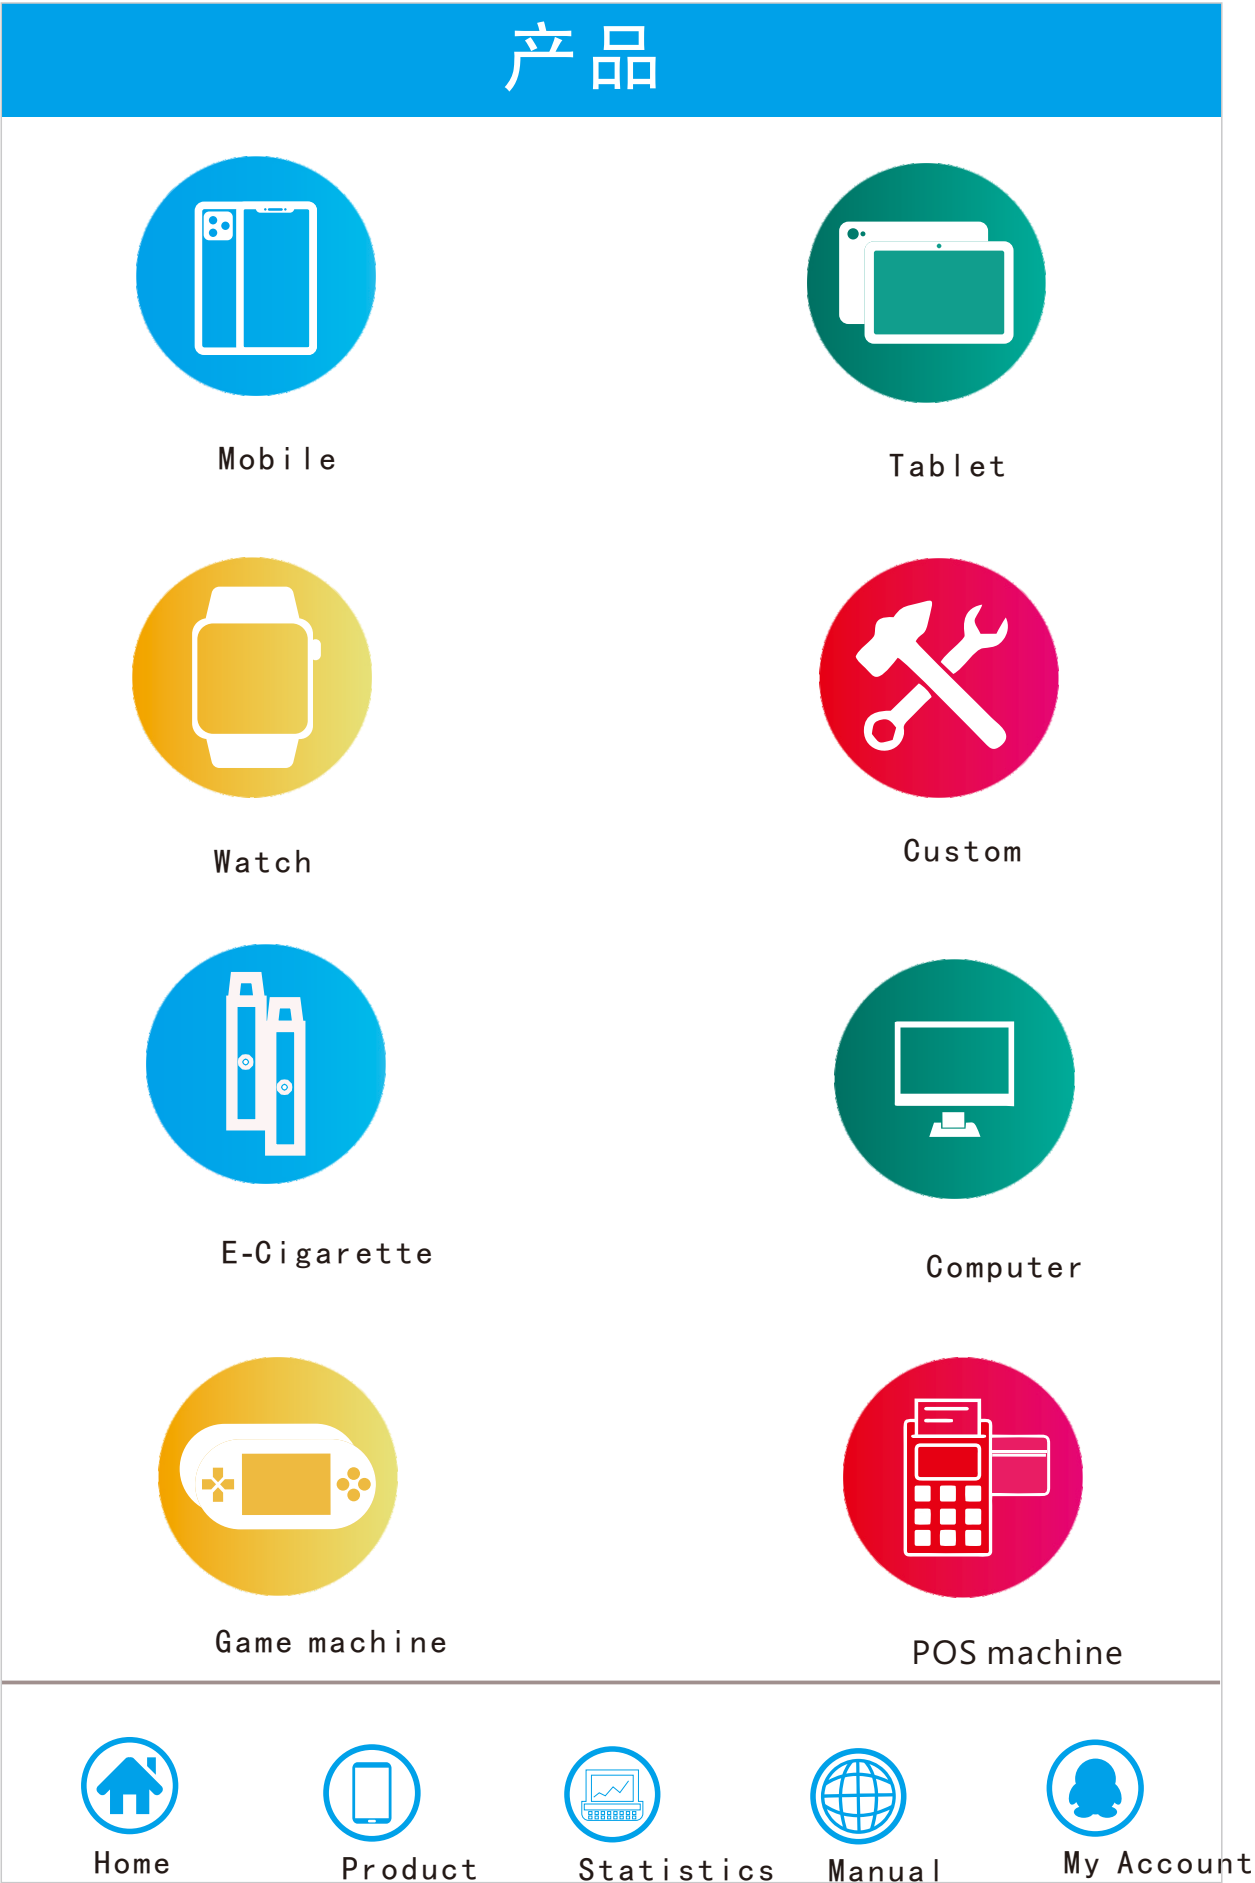

After enter the product page and choose the data you need to cut .

Choose a cutting data

smart phone

Mobile

search

切割记录

Hot brands

Apple

苹果

HUAWEI

华为

honor

荣耀

SAMSUNG

三星

mi

小米

Redmi

红米

oppo

OPPO

vivo

VIVO

一加

一加

Realme

真我

TECNO mobile

传音

moto

摩托罗拉

Main brands

alice mobile

Altice

ALLVIEW

AllView

AGM

AGM

ACCENT

ACCENT

ADAM

ASUS ROG

ARCHOS

ALCATEL

ABCDEFGHIJKLMNOPQRSTUVWXYZ

IPHONE 13 PRO

☐

180center cut

☒

Y mirror

+

300

-

CUSTOMIZED BACK FILM

TEST

CUT

Front film

back film

Explosion-proof film

Full screen edge film

Front film -A+ is accurate data, the front screen is wrapped to the edge of the screen; -A is slightly smaller than A+ by about 0.5mm - with cover A is the data with cover; - Frosted A is the hole data, suitable for frosted/matte materials..

Back film -B+ is back film with full cover, -B- is back film packaging data; -B is back sticker data


The explosion-proof film is only suitable for straight screen mobile phones, the size is similar to the tempered glass.

Full-screen film-DA full-screen half-package data , -DB back-stick data;-DC is the whole machine full-package data

11

Cutting finished

smart phone

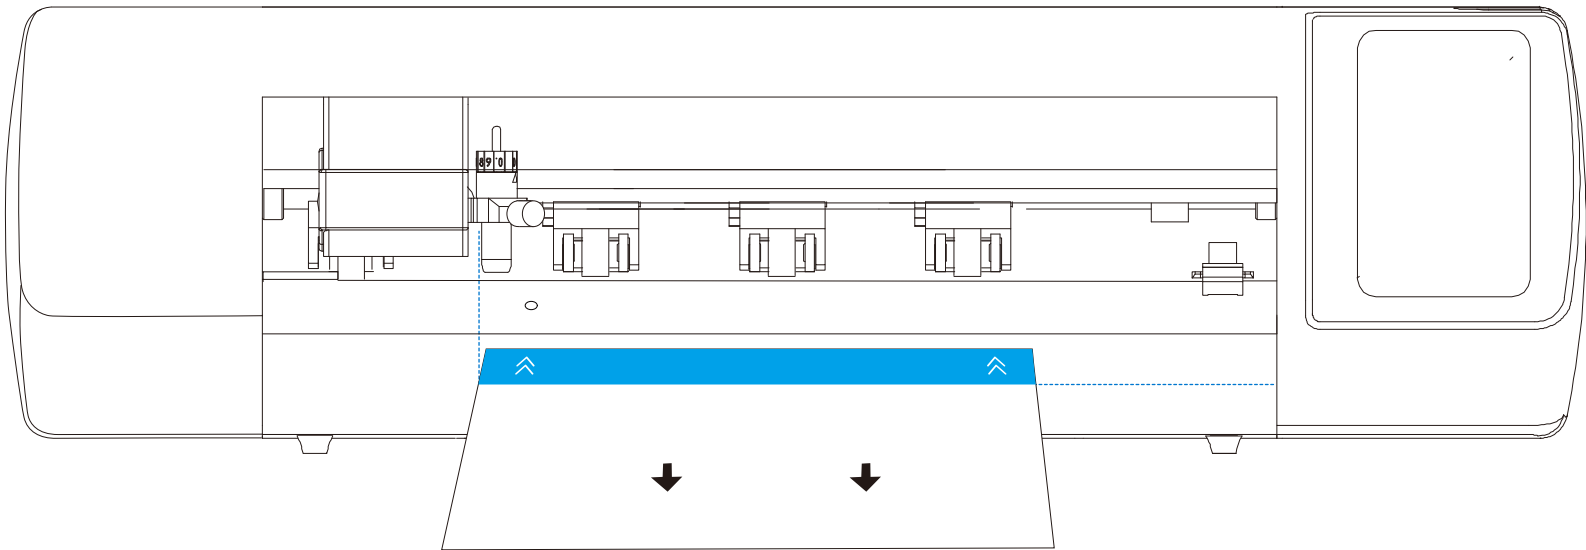

The sheet will be dropped out automatically after cutting finished, please take out the finished parts and paste on the phone.

Parameters and precautions

Parameters	
Connection	wifi or Bluetooth
Internal Power	DC24V 1.75A
Screen size	6.0 inches
machine size	594*284*290mm
machine weight	6.5kg

Don't touch the knife tip by finger

The finger may be hurt by the knife tip

Don't seep into liquid

This may cause fire or electric shock

Don't use non-original power supply

This may damage the cricuit or electric shock

Don't use in thunderstorm days

This may damage the machine

Don't use the non-standard materials

Please cut the standard size of material to reach the perfect result



Press power switch for emergency stop during working..



Forbid moving the carriage by hand after connecting the power to avoid machine damage..



Knife is a consumable part, please change to a new one if it is dull..



Press the power switch in 3 seconds continually to turn off the cutter, forbid taking out the power cable directly to turn off the machine because it will damage the mainboard

Troubleshooting

F C C W a r n i n g

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body:

Use only the supplied antenna.