



Kids Tablet 7"



USER MANUAL

CONTENTS

1.	Warm Tips.....	1
2.	Technical Specifications	1
3.	Hardware Overview	2
3.1.	Initial Setup	3
4.	Software Overview	5
4.1.	Home Screen.....	5
4.2.	Navigation bar.....	6
5.	Camera.....	6
6.	Browsing the Internet	7
7.	Google Services - Quick Setup.....	7
8.	Connecting to a Computer	8
9.	Factory Settings	9
10.	Control Panel Settings.....	9
11.	Managing Kid's Place	10
11.1.	Entering Kid's Place.....	10
11.2.	Add/Remove Apps in Kid's Place.....	11
11.3.	Enable/Disable Internet Access for Apps	11
11.4.	Time Management	11
12.	Product Care.....	12
12.1.	Micro SD Card Slot.....	12
12.2.	Charging	12
13.	Trouble Shooting.....	13

Welcome!

Thank you for purchasing your new **weelikeit** Kids Tablet. This User Manual will provide step-by-step instructions to help you learn to use your new device. After opening the box, please make sure the package contents are available for you.

Package Contents:

- 1*7" Kid Tablet
- 1*Quick Start Guide
- 1*AC Charger
- 1*Type-C USB Cable




1. Warm Tips

- 1) Do not disassemble the product or accessories.
- 2) Do not use alcohol, thinner, or benzene to clean the surface of the device.
- 3) The device should be charged for about 6 hours during the first three charge cycles.
- 4) Do not store the device in places with high temperature, humidity, or dust. Avoid dropping or strong impact.
- 5) Use an appropriate volume setting. High volume may cause hearing damage when using headphones.
- 6) To charge the device, use the included Type-C USB cable and AC adapter.
- 7) When transferring data to/from a computer, do not suddenly disconnect the cable; this may cause the device to malfunction. Use a "Safely Remove Hardware" or "Eject" function on the computer.
- 8) Obey all local laws and regulations when using the device, such as when driving or aboard an aircraft.
- 9) The device and included accessories are not water resistant or waterproof.

2. Technical Specifications

Operating System	Android 11.0
Display	7" HD IPS display
Resolution	1024 x 600
Storage	32GB
RAM	2GB
CPU	Quad-core 1.5 GHz
Battery	3000 mAh, Li-Ion Polymer
Battery life	4-6 hours
Ports	Type-C
Camera	2MP front camera, 5MP rear camera
Cart Slot	Micro SD card slot, supports up to 128GB
Speakers	Box Speaker
Special Features	Bluetooth Pairing Button
Voltage	AC 110~240V 50/60Hz; DC 5V/1.5A
Network Access	Wi-Fi (802.11 b/g/n)

3. Hardware Overview

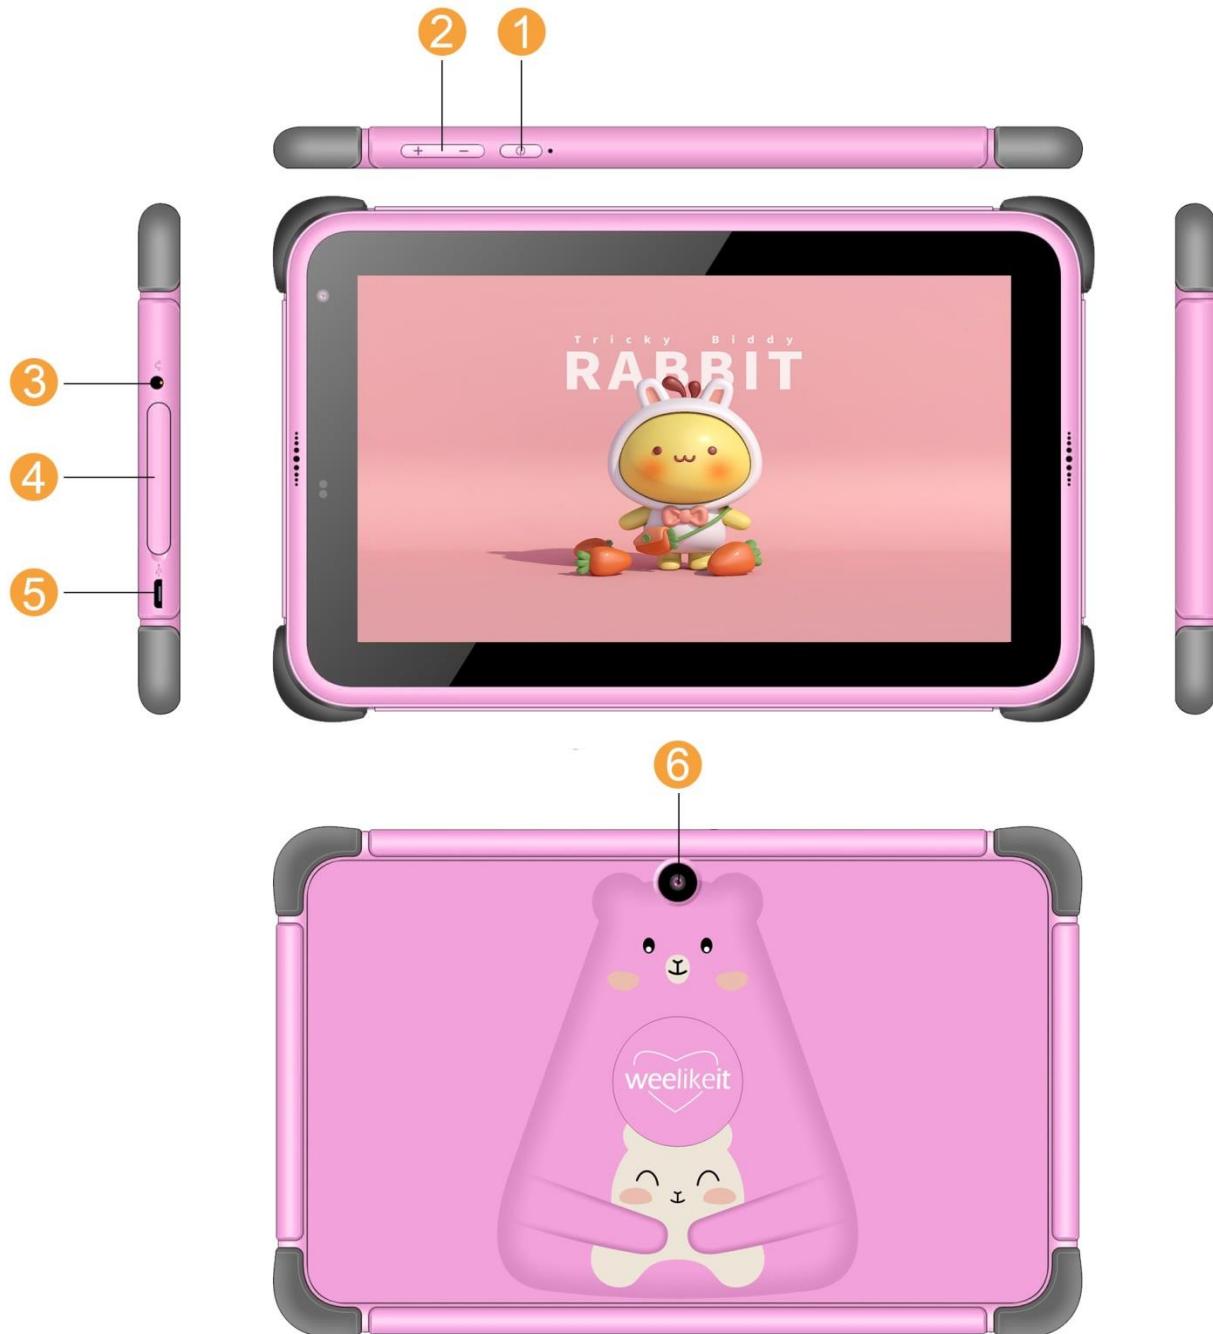

① Power Button

④ Micro SD Card Slot

② Volume Button

⑤ Type-C Port

③ 3.5 mm Headphone Port


⑥ Camera

3. 1. Initial Setup

To get started with your new tablet, ensure that your tablet has been fully charged before the first use. Press and hold the power button for 5 seconds until you see the **weelikeit** logo on screen. Allow 10 seconds for the tablet to power on. You will be prompted to start the initial setup process.

Step 1:


Language selection: scroll through the list of languages to choose your preferred language then tap **Start**.

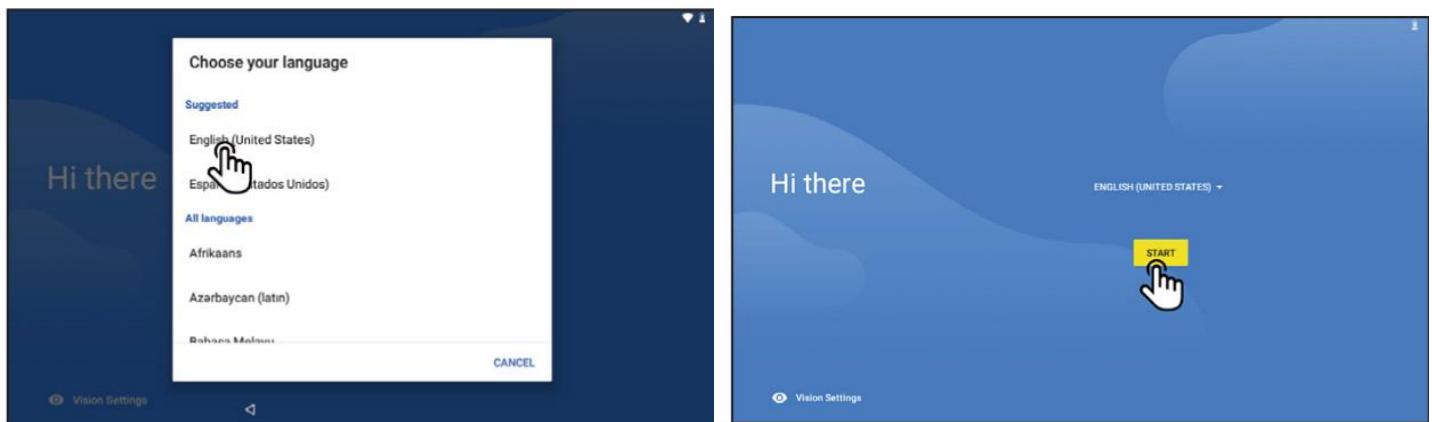

Note: If the touch screen becomes unresponsive, insert a small pin or paperclip in the reset hole to restart the tablet.

Step 2:


Wi-Fi setup: A list of Wi-Fi networks will appear. Tap your network name. If your Wi-Fi network is password protected, you will be prompted to enter the password. Tap **Continue**.

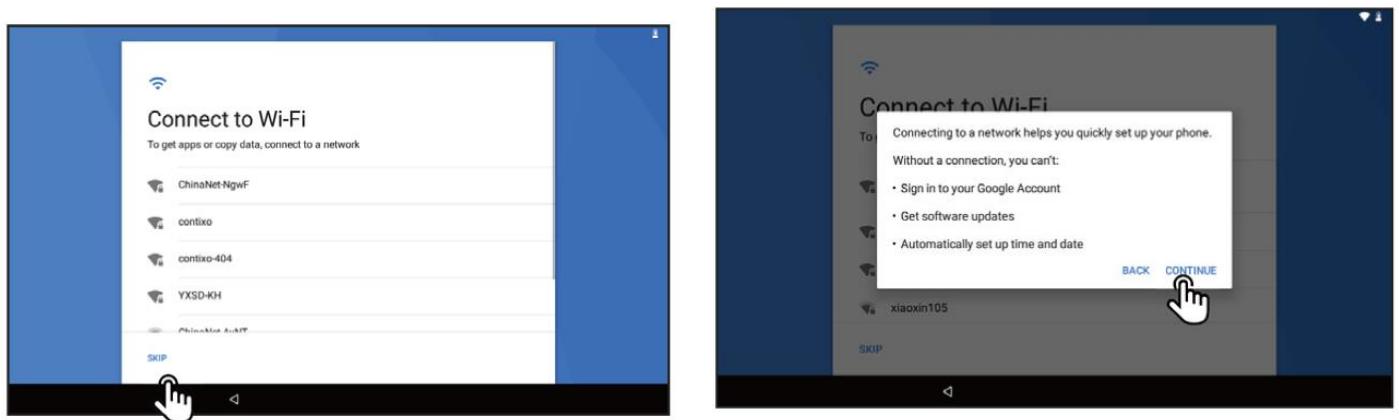

Step 3:



Enter the username and click “Next”.

Protect Your Tablet: Create password or select “Not now” and set it later.

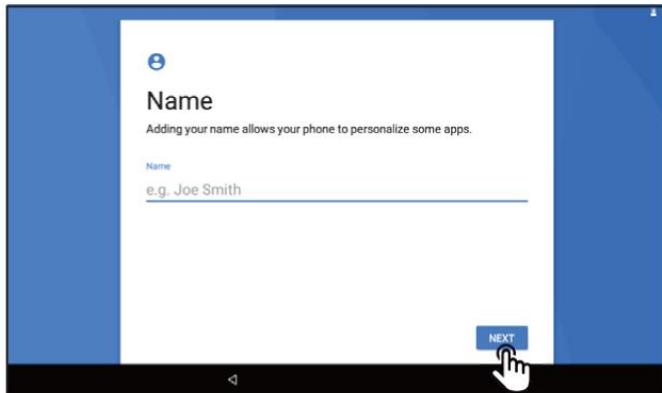

Tap/Click ”SKIP ANYWAY”.


Click “MORE”, and then click ”ACCEPT”. Wait a few seconds to get into the desktop.

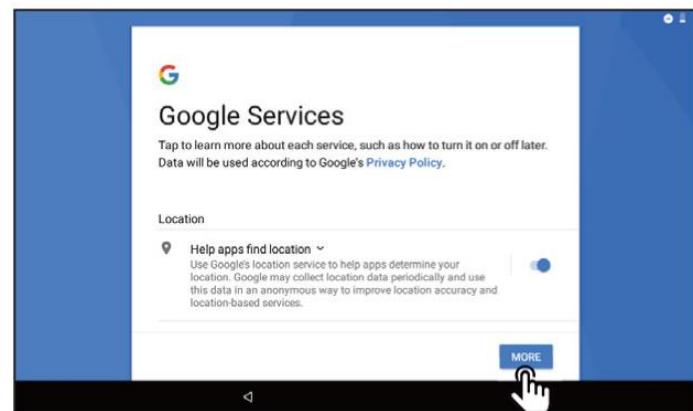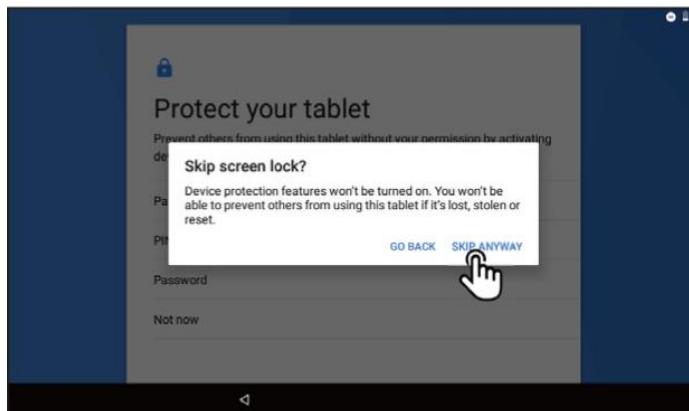


4. Software Overview

4.1. Home Screen

Your Learning Tab features the Android™ operating system, version 11.0. The included Google Play™ store app gives you access to a catalog of over one million apps. This is the default home screen in Grown-up mode. To learn about using Kid's Place, refer to the chapter, "Managing Kid's Place."

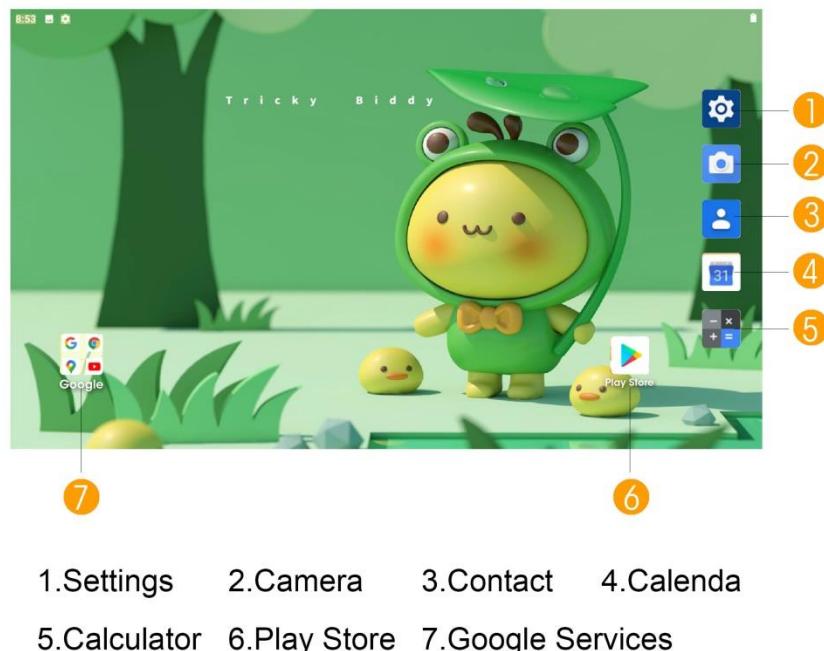


Swipe down from top of screen to access quick settings.

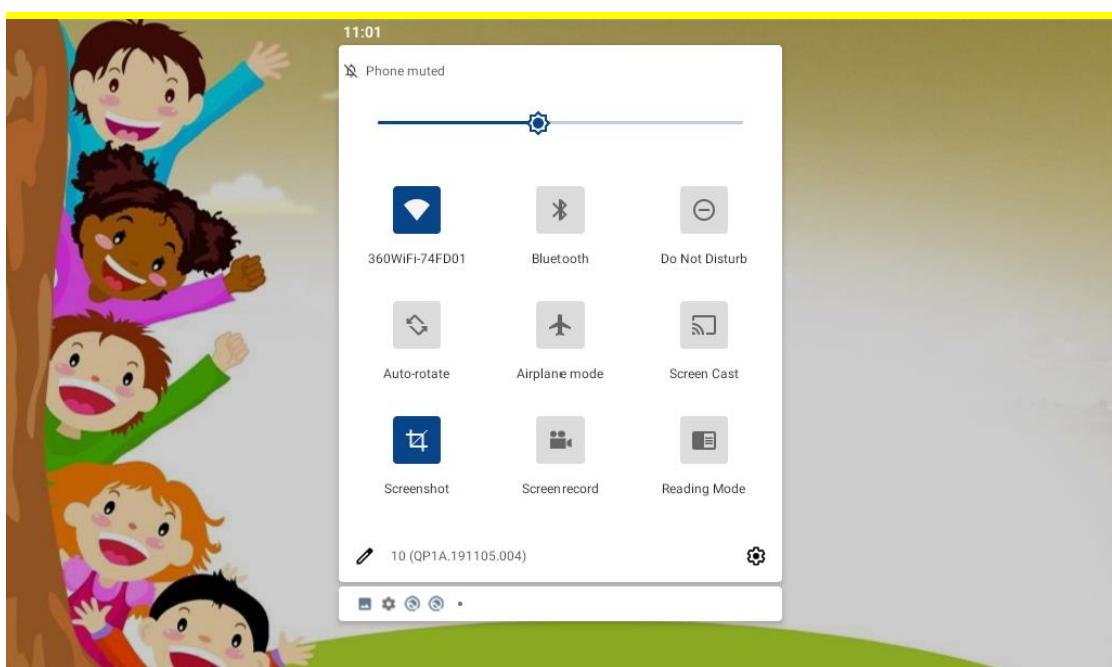

4. 2. Navigation bar

The navigation bar along the bottom of the screen allows you to switch between apps. In some apps, the navigation bar becomes hidden. To reveal it, swipe up from the bottom edge of the screen. The left button, back, takes you back one screen. The center button, home, takes you to the home screen. The right button, recent apps, brings up thumbnails of recently used apps; tap one to Switch to it.

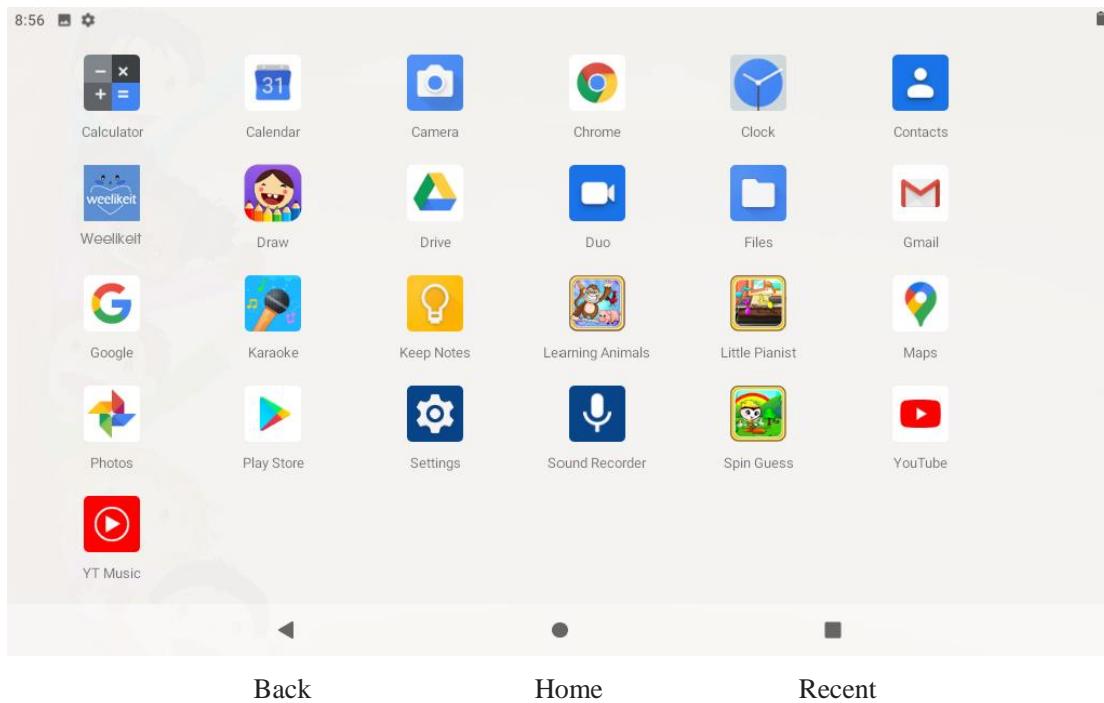



5. Camera

The camera app can be accessed from both Kid's Place and Grown-ups.

Note: photos taken from the camera are accessible to Grown-ups and Kid's Place.

Swipe from left to right on the screen, you can choose the photo or video options.


Settings is on the top right corner.

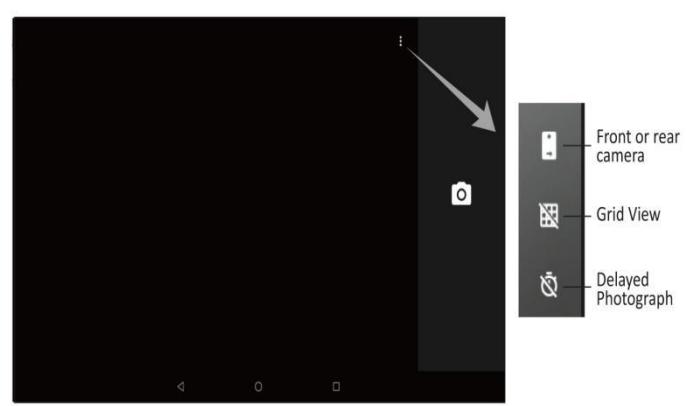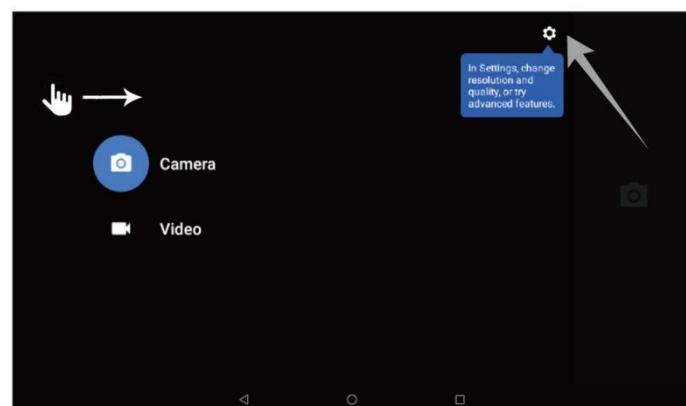

To view photos you have taken, swipe from right to left.

6. Browsing the Internet

Your tablet comes preloaded with the Chrome web browser. Locate and tap the icon  in your apps. Chrome works just like a web browser on other devices and computers.

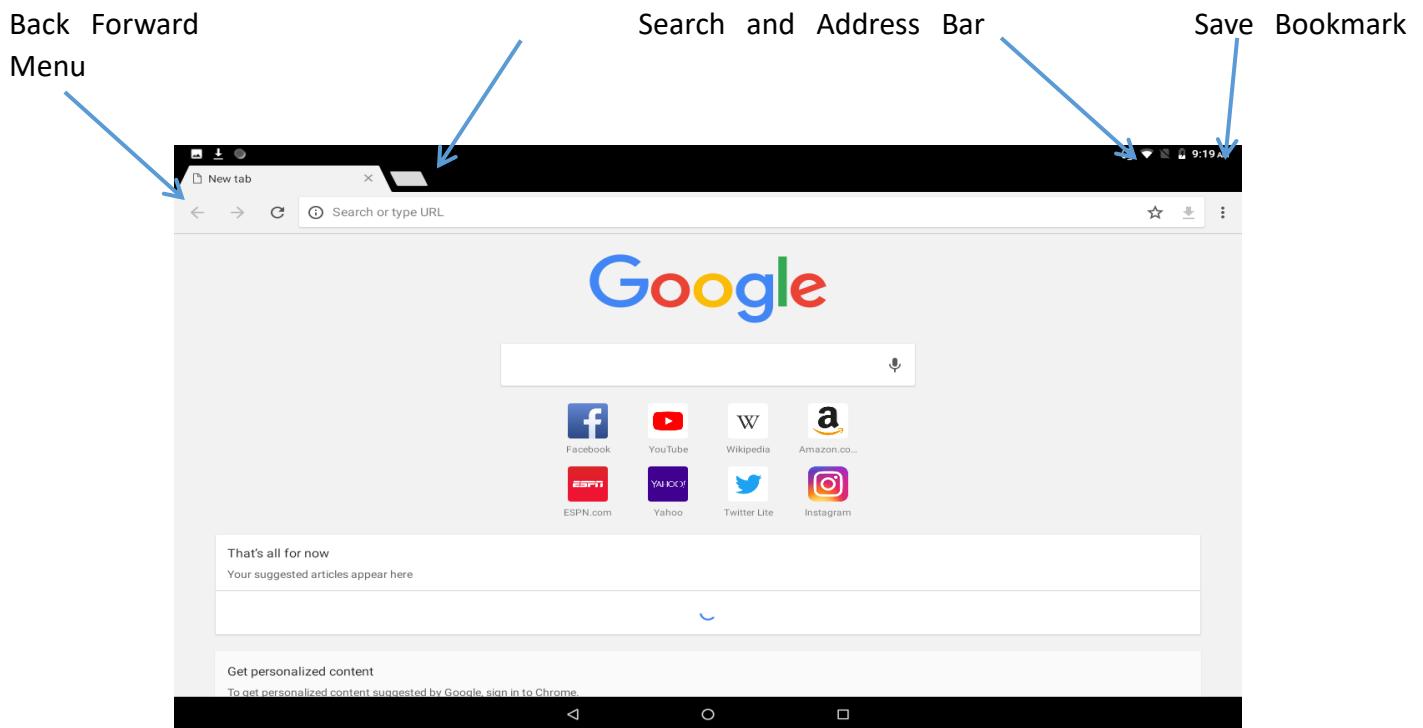

Downloading Content from the Google Play Store

Google Play offers an expansive catalog of apps, music, movies, etc.

Backup with Google

When you create a Google account on your Learning Tab, you are given the option to automatically back up app data, Wi-Fi passwords, and other settings to Google's servers. If you wish to change this setting after creating or using your existing Google Account:

1. From Grown-Up mode, tap Settings;
2. Scroll down and tap  and reset;
3. Check, or uncheck Back up my data to enable or disable automatic backup of your data to Google's servers.

7. Google Services - Quick Setup

- 1) Wi-Fi connection required to access Google Services. First connect to a network.

- 2) Sign in with an existing account or create one. You can create a new account for the child that is linked to an existing adult account; this allows the parent to be notified when changes occur or a new device is logged into.
- 3) The Account Added screen provides confirmation the account has been added.
- 4) Additional services such as "Backup to Google Drive" can be accepted to save and preserve data (pictures and files).
- 5) Sign in to Google Play Store to update existing apps or download new apps. Kids Place software and Google Services may change or update without any advance notice. Kids Place software and Google Services may change or update without any advance notice. Parents are responsible for additional installed apps or websites allowed on this product. Always backup any important data before resetting the tablet.

8. Connecting to a Computer

Step 1:


Connecting to your computer by Type-C USB



You MUST be in Parent mode in order to connect with your computer devices.

Step 2:

Pull down the menu from the right top of the screen, click/ tap “Charging this device via Type-C USB” and click “tap for more options”

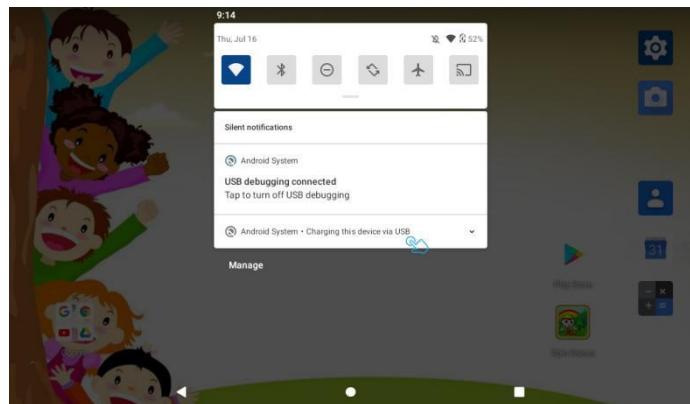

Step 3:

Select “File Transfer”



Your device/disk name will appear as C71W on your computer. You can now transfer or backup files from the tablet to a computer.

9. Factory Settings

To perform a factory data reset, you must use the Grown-up login and PIN.

WARNING: A factory data reset will delete all user settings and data such as apps that you have downloaded, music, videos, photos, etc. **Please back up important data on the device before resetting your tablet.** All preloaded applications will automatically be re-installed. After the factory data reset, you need to complete the initial setup process.

- 1) Tap Home at the bottom of the screen;
- 2) Tap Settings;
- 3) Scroll up and tap System;
- 4) Tap Reset Options;
- 5) Tap Erase all data (factory reset).

10. Control Panel Settings

The control panel settings allow the following features:

- **Network & Internet** — Change Wi-Fi settings, check your network Configuration, airplane mode, or VPN (virtual private network).
- **Connected Devices** — USB (Charge phone, transfer files, etc.), Pair new device, turn on Bluetooth.
- **Apps & Notifications** — Set permissions & default apps.
- **Battery** — Set power saving modes.
- **Display** — Set brightness, wall paper, sleep timer, auto-rotate screen, font size, display size.
- **Sound** — Set volume level or do not disturb.
- **Storage** — Hard drive information.
- **Privacy** — Manage and protect your own data.
- **Security & Location** — Google features to help protect or find the device.
- **Accounts** — Adding and modifying accounts.
- **Accessibility** — Set screen readers, display, interaction, controls.
- **Digital Wellbeing & Parental Controls** — Set screen time, app time, bedtime schedules.
- **Google** — Set services & preferences.

- **System** — Set languages, time, backup, updates.

11. Managing Kid's Place


This chapter will guide you through steps to customize how Kid's Place works.

11. 1. Entering Kid's Place

If you are using the tablet in Grown-up mode, remember that your Grown-up PIN will be required to exit Kid's Place.


Step 1:

Locate and tap the **weelikeit** icon on the home screen to enter Kid's Place

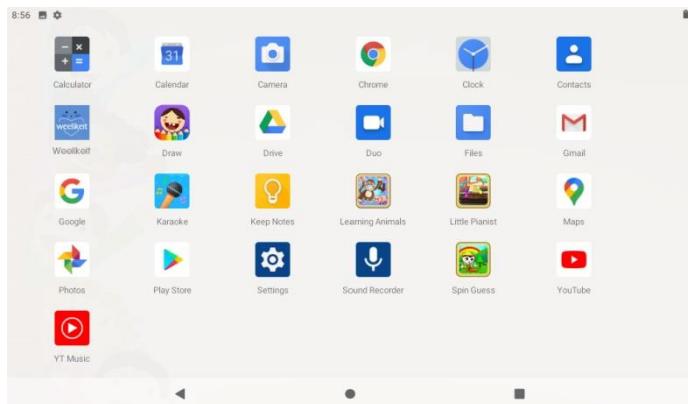


Step 2:

Click/Tap on **OK** license agreement (iWawa) after viewing it .

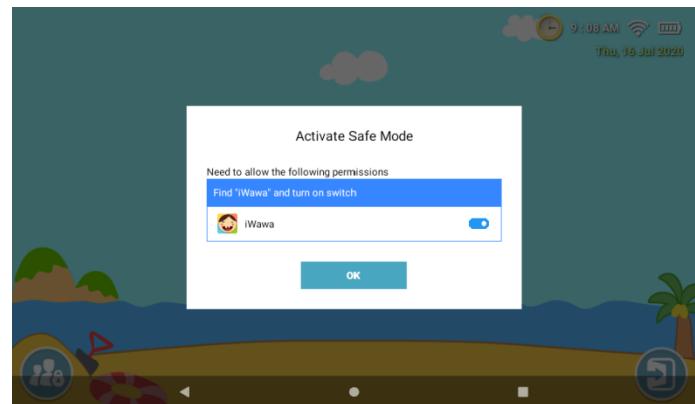


Step 3:

Click the icon in the lower left corner and create your 6 digit PIN and select "✓"

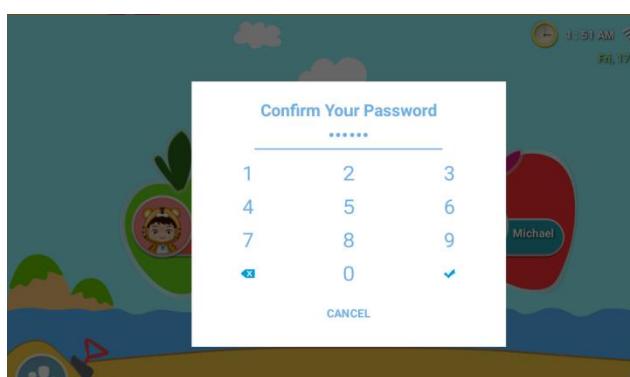

Step 4:

Choose a category

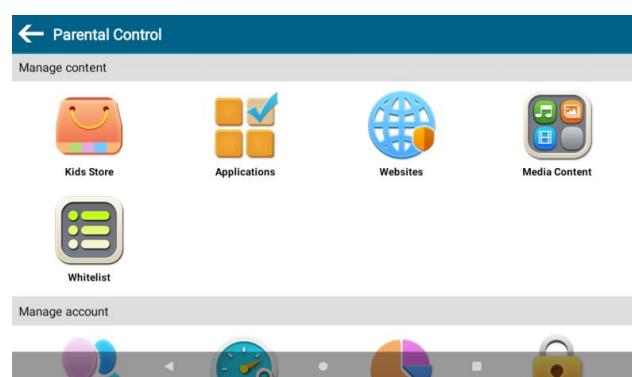

11. 2. Add/Remove Apps in Kid's Place

11. 3. Enable/Disable Internet Access for Apps

You may choose to allow or disallow certain apps from being used in Kid's Place. Kid's Place allows you to select which apps may connect to the internet. This option is useful, for example, to allow apps to receive updates, or to disallow apps that may display various advertisements.

Step 1:


Select Apps for Kids Place; You may choose to allow or disallow certain apps from being used in Kid's Place.



The screenshot shows a list of apps under the 'Applications | Kid' section. Each app has a small icon, the app name, a checkbox, and a three-dot menu. The apps listed are Montessori, First Learning, Brain Training, Mini Games, and Kids TV. The checkboxes for Montessori, First Learning, Brain Training, and Kids TV are checked, while the one for Mini Games is not.

Step 2:

Select Websites for Kids Place; You may enable/disable internet access for Apps, you can also add websites by clicking "Add" on the right corner.

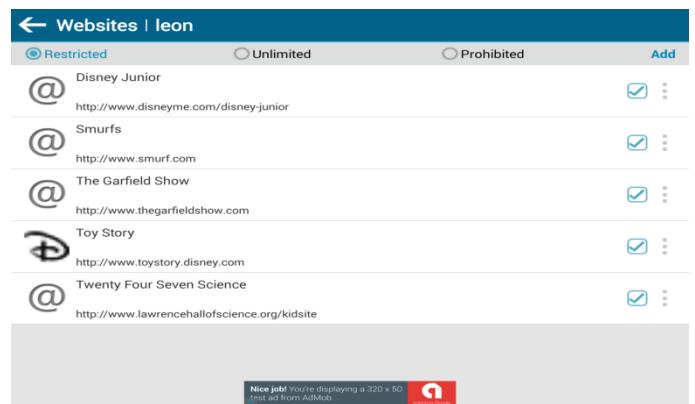

The screenshot shows a list of websites under the 'Websites | Leon' section. Each website has an '@' icon, the website name, a URL, a checkbox, and a three-dot menu. The websites listed are Disney Junior, Smurfs, The Garfield Show, Toy Story, and Twenty Four Seven Science. The checkboxes for Disney Junior, Smurfs, The Garfield Show, Toy Story, and Twenty Four Seven Science are checked.


Note: Selected app or websites (with chek mark) will show up as approved app or websites for kids on the Kids Place home screen. Scroll right for more apps or websites to choose.

11. 4. Time Management

This section allows you to define the time limits you wish your little one to apply to the profile. Session Control allows you to define the play time per session and the rest time in between sessions, while Global Control defines a start time and stop time during the day.

Step 1:


Tap/Click "Time Limit"

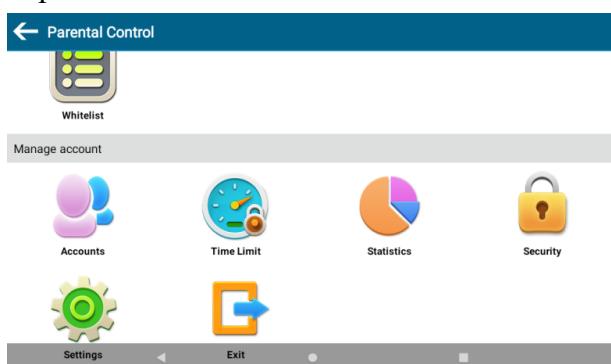

The screenshot shows the 'Parental Control' menu. It includes a 'Whitelist' section, a 'Manage account' button, and several icons for Accounts, Time Limit, Statistics, Security, Settings, and Exit. The 'Time Limit' icon is highlighted, indicating it is selected.

Step 2:


Select a timer mode option and then press "OK"

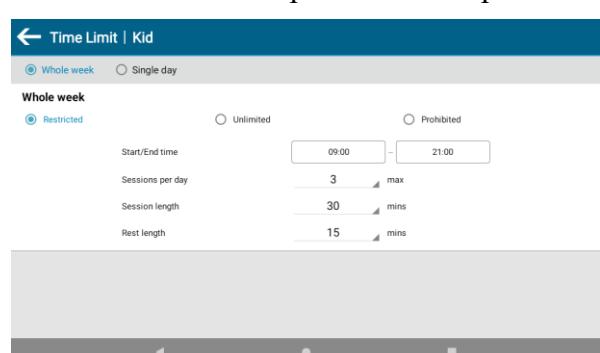

The screenshot shows the 'Time Limit | Kid' settings for a 'Whole week'. It includes radio buttons for 'Restricted', 'Unlimited', and 'Prohibited'. It also includes fields for 'Start/End time' (09:00 to 21:00), 'Sessions per day' (3 max), 'Session length' (30 mins), and 'Rest length' (15 mins). The 'Restricted' option is selected.


Step 3:

Tap on “EXIT” button in the lower left corner, Enter PIN

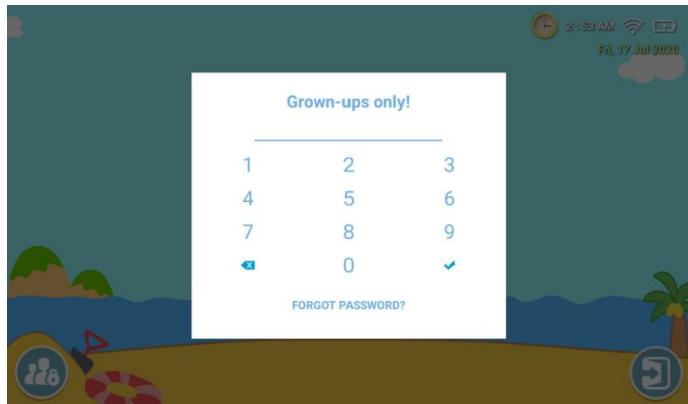

Step 4:

If you forget your PIN, please Enter **257518** reset Password

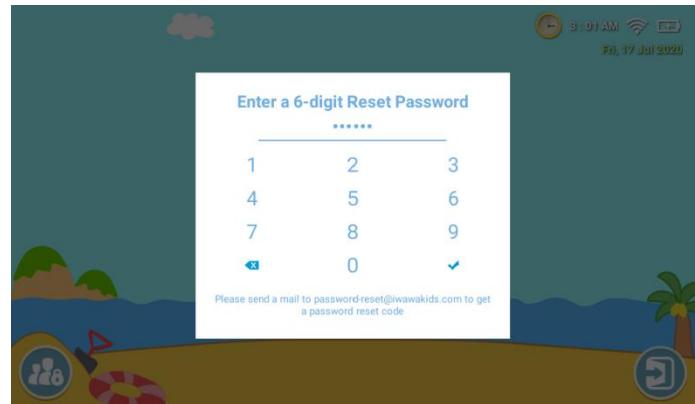

Note:

If you forget your password, please enter **257518** as reset password or send a mail to password-reset@iwawakids.com to get a reset password code.

12. Product Care

12. 1. Micro SD Card Slot

The tablet contains a Micro SD memory card slot. The Micro SD memory card is sold separately. Most software applications (apps) require to be installed on internal memory, so use the external memory to store music photos, movies, files, or other data. The memory card slot will read most SD Cards and supports up to 128GB. We recommend purchasing a memory card with a good brand reputation to help ensure comparability.

12. 2. Charging

Use the included Type-C USB cable and AC Adaptor to charge the tablet. If the cable becomes damaged or lost, you can order a replacement cable or charger from the manufacturer. Using a third party cable may void the warranty. It is not recommended to leave the battery charging for more than 8 hours. Do not use the charger in a wet or humid environment. Only charge the tablet in a safe environment.

13. Trouble Shooting

No.	Issue	Fix
1	Battery is draining too fast	Adjust screen brightness to a lower setting
2	Slowness or unresponsive programs	Close unused apps; clear app cache;
3	Network connectivity issues; no Wi-Fi connection	Reset network connection; toggle airplane mode on/off
4	Tablet is hot or overheating	Close unused apps; clear app cache;
5	App crashes	Reopen app; update app through Play Store
6	Unresponsive screen	Restart table by holding power button for 8 seconds
7	Google Play Store crashes	Clear app cache and restart
8	Apps won't download from Play Store	Clear Play Store cache; open app settings and clear local search
9	Can't turn tablet on/off	Hold power button for Power Menu options
10	Touch screen issue; not responding to	Low battery power; check for physical damage
11	Battery does not hold a charge	Check power cable; inspect power button if stuck
12	Sound is low	Check speaker port for blockage
13	Camera or SD Card not working	Corrupt Software / Reset to factory default
14	Download issues	Make sure it connect with PC properly. You`d better not to use the front Type-C port to connect to PC.
15	Device crashed or can't turn on	Once device crashed during the running time, It can be restarted via tap the RESET button at the side of device.
16	Out of run	Check the batteries whether it out of charge. Checking after get connected to the power adapter. If it still can not turn on after charging, please contact the customer service center.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information:

This C72W meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: C72W has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the phone kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the phone. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.



Find additional help and resources go to our website on Amazon or contact us.

Contact Us:

Customer Service Email: cfsalesuk02@chengfong.com

©2021 weelikeit Company. All right reserved. weelikeit ®, the weelikeit logo and associated characters.