


NECKBAND NOISE ISOLATING EARBUDS

29

NRR



LM1045


M

mipeace


Thank you for purchasing Mipeace Neckband Noise-Isolating Wireless Earplug Earbuds. Please read this user manual carefully and keep securely for further reference. If you need any further assistance, please contact our support team via email: support@mipeaceaudio.com

Package Contents


1




1 X Mipeace Neckband Wireless Earplug Earbuds




1 X Zippered case



2 X Clothes clips



1 X User Manual



1 X USB charging cable

Specifications

2

Profile Support

HSP/HFP/A2DP/AVRCP

Wireless Transmission Distance

10M/33 feet

Wireless ID

Mipeace

Wireless Version

5.0

Charging Method

Micro USB

Charging Adapter Output

5V/1A

Charging Time

3-3.5hours

Standby Time

270H

Talk Time

15H (at 70% volume)

Music Time

16H (at 70% volume)

Frequency response

50Hz-15KHz


Noise Reduction Rating

29

DECIBELS

(WHEN USED AS DIRECTED)

Federal law prohibits removal of this label prior to purchase




LABEL REQUIRED BY U.S. E.P.A. REGULATION 40 CFR Part 211, Subpart B

How to Wear

3

Insertion

1. Hold the stem of the earphone firmly behind the largest flange.
2. Reach over your head with the opposite hand and pull the top of your ear to open the canal. While you are still holding the ear open, push the smallest flange of the plug into your ear canal, twisting the plug slightly as you push.




Removal

Twist the silicone earbuds to break the seal and remove them slowly.

Earbuds Overview

4



Indicator Light

Multi-function Key

Previous Song/Volume

Voice Dial Key

USB Charging Port

Next Song/Volume

How to operate the earbuds

5

1.Power On/Off

Function	Operation	Indicator	Voice Prompts
Power On	Press and hold the multifunction button for 3 seconds	Blue light will be flashed for 3 times	Power On
Power Off	Press and hold the multifunction button for 3 seconds	Red light will be flashed for 3 times	Power Off

Remarks:

Since the battery may be low power, please charge the device before first use.

2.Charging

During the use, when the earbuds is low power, the earbuds emits "Low Power", it indicates low battery level and please charge it right away.

1) Turn on the cover of USB charging port and plug the USB charging cable.

2) Plug another side of USB cable to the USB port of PC or other DC 5V/1A charger.

Red light on: Charging

Blue light on: Full of charge

3) It will take about 3-3.5hours for a full charging.

3.Pairing and Connection

6

Connection with Bluetooth Mobile Phone

1) When turned off, press and hold the multifunction button for 5 seconds until the red and blue light flashes alternately, it enters pairing mode.
2) Turn on the Bluetooth of the phone you would like to pair with the earbuds and search for Bluetooth ID "Mipeace", then click it and wait until hearing a prompt voice "connected" then the pairing is finished.

Note:

•The earbuds will exit pairing mode if fail to connect within 2 minutes and will auto-turn off if fail to connect again within 5 minutes.

•After pairing is complete, the headphones will auto-connect to the device connected last time when powered on again.

Connect Two Bluetooth Devices Simultaneously

1) Pair the earbuds with the first device.
2) Turn off the Bluetooth function of the first device, then press and hold the multifunction button to let earbuds entering pairing status and connect to the second device.
3) Then turn on the Bluetooth function of the first device to select "Mipeace" and it completes to connect two Bluetooth devices simultaneously.

4.Calling

7

Function	Headphone status	Operation
Answer Incoming call	Incoming call ringing	Short press the multifunction button once
Hang up Incoming call	Talking	Short press the multifunction button once
Reject incoming call	Incoming call ringing	Press and hold the multifunction button for about 3 seconds
Call transfer	Talking	Press and hold the multifunction button for about 3 seconds
Last number Redial	Standby	Press the multifunction button twice
Voice Dial	Standby	Press and hold the voice dial button for about 3 seconds

5.Play Music

Function	Headphone status	Operation
Increase volume	Play music	Press the "+" button
Decrease volume	Play music	Press the "-" button
Previous track	Play music	Press and hold the "⏮" button for about 2 seconds
Next track	Play music	Press and hold the "⏭" button for about 2 seconds
Pause playing	Play music	Press the multifunction button
Resume playing	Pause playing	Press the multifunction button

Maintenance

8

During using, please read the following advices carefully to help you comply with warranty terms and extend the product's service life.

•Do not over charge or discharge the product. Over charging and over discharging will shorten the life span of the battery. Keep the product away from humid places to avoid affecting internal circuit.

•Do not put the product in places exposed to sun or with high temperature. High temperature will shorten service life of electronic components, damage battery and deform plastic components.

•Do not put the product in cold places to avoid damaging internal circuit board.

•Do not dismantle the product. Non-professional personnel may damage the product.

•Do not use drop, strongly vibrate, strike the product with hard object to avoid damaging internal circuit.

•Do not use drastic chemicals or cleaner to clean the product.

•Do not use sharp objects to scratch product surface to avoid damaging shell and affecting appearance.

If the product cannot operate properly, please feel free to contact our support team immediately.

FAQS

9

1.Can not turn the earbuds on

•Please charge the earbuds and make sure your device is fully charged before using for the first time.

2.No sound heard from the earbuds

•Please check if the earbuds are paired successfully with the device and operating.
•Please check if the earbuds volume is at an appropriate level.
•Please check if the earbuds are operated within an effective distance.

3.The earbuds calling effect is bad.

•Please check if mobile phone is in an area with strong signal.
•Please ensure the earbuds are within effective distance (33feet) and no obstacle between the earbuds and mobile phone.

4.Mobile phone can't find the earbuds ID


•Please check if the Bluetooth function of your phone is on.
•If the pairing time out, pairing mode will exit, if so, please re-enter pairing mode.
•Please re-start the mobile phone and earbuds then pair again.
•Please press and hold V+ and V- button for about 4 seconds, the earbuds will disconnect with previous device and enter the pairing mode.

CAUTION


10

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.


A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.



1."To prevent possible hearing damage, do not listen at high volume levels for long periods."
2."Fully understand user manual before use."
3."Ensure your player at low volume levels or power off before you leaving."



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household disposal, recycle it responsibly to promote the sustainable reuse of material resources.



Make in China

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ -Reorient or relocate the receiving antenna.
- ▶ -Increase the separation between the equipment and receiver.
- ▶ -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ -Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.