JobSafe Max Wireless Headset Engineered for the Jobsite



mipeace

Wireless Headset

securely for further reference. If you need any further assistance, please contact our support team via email:

mipeace

Thank you for purchasing Mipeace JobSafe Max Please read this user manual carefully and keep

support@mipeaceaudio.com

Website:www.mipeaceaudio.com



1X TYPE-C charging cable

Package Contents

2 X Replaceable Earbud Cables

Specifications

Profile Support:	HSP/HFP/A2DP/AVRCP
Wireless Transmission Distance:	20M/66 feet
Wireless ID:	Mipeace
Wireless Version:	6.0
Charging Method:	TYPE-C
Charging Adapter Output:	5V/1A
Charging Time:	1.5-2hours
Standby Time:	800H
Talk Time:	90H (at 70% volume)
Music Time:	100H (at 70% volume)
Frequency:	50-20KHZ

Noise Reduction Rating

prior to purchase

Federal law prohibits

LABEL REQUIRED BY U.S. E.P.A. REGULATION 40 CFR Part 211, Subpart B

(WHEN USED AS DIRECTED)

Install The Cables

1. Hold the magnetic cable connector near the port on each earbud, ensure the metal pins on the cable line up with the gold contacts on the headphone port. 2. The magnet will automatically guide and snap the cable into place

when correctly aligned. 3. Check the fit, ensure the connection feels firm and secure — no gaps

or looseness.



Remove/Change The Cables

Please gently disconnect the cables by holding the connector and pulling it out carefully. Avoid tugging or pulling the cable roughly for long-lasting use.







Earbuds Overview How To Wear 1. Check the markings "L" & "R" on each earbud, gently rest the

neckband on your shoulders, with the earbuds hanging in front.

2. Hold the stem of the earphone firmly behind the largest flange.

3. Reach over your head with the opposite hand and pull the top of your ear to open the canal. While you are still holding the ear open, push the smallest flange of the plug into your ear canal, twisting the plug slightly as you push.









Twist the silicone earbuds to break the seal and remove them slowly.

1 Power Button 6 Music Mode Button Song/Volume+ (7) Speaker Mode Battery Indicator Charging Port

How to operate the earbuds

1.Power On/Off Indicator ne screen turns on, vibrating 3 times Power On Button" for 2-3 seconds. Press "Sneaker Mode Butto Speaker mod ce in headphone mode ss "Speaker Mode Butto Headphon mode ss "Music Mode Button Activate Siri Press "Power Button" twice for 8 seconds when powed o e screen turns on, vibrating once Button" for 2-3 seconds

Remarks: Since the battery may be low power, please charge the device before first use.

During the use, when the earbuds is low power, the earbuds emits "Lov Battery", it indicates low battery level and please charge it rightaway.

- 1.Plug the USB side of the charging cable into a USB port (either a USB wall adapter DC 5V/1A, laptop, or power bank).
- 2. Turn on the charging port cover of headphones, plug the Type-C side of the charging cable into it.

Charging: The screen lights up, displaying the current battery evel, then the number gradually increases to 100. Full Of Charge: The screen turns off.

Check the battery level: Press "Power Button" once, the screen lights up 3 seconds then turns off automatically.

4.Once fully charged, unplug the charging cable from both the headset and the power source to prevent overcharging.

3. Pairing and Connection

Connection with Bluetooth Mobile Phone

3.It will take about 1.5-2hours for a full charging.

1) When turned off, press and hold the power button for 3-5 seconds until the screen is flickering and hear the pairing sound, it means that the headphone enters pairing mode.

2) Turn on the Bluetooth of the phone you would like to pair with the earbuds and search for Bluetooth ID "Mipeace", then click it and wait until hearing a prompt voice "connected" then the pairing is finished.

The earbuds will exit pairing mode if fail to connect within 2 minutes and will auto-turn off if fail to connect again within 5 minutes. After pairing is complete, the headphones will auto-connect to the device connected last time when powered on again.

Connect Two Bluetooth Devices Simultaneously:

1) Pair the earbuds with the first device.

2) Turn off the Bluetooth function of the first device, then press and hold the power button to let earbuds entering pairing status and connect to the second device. 3) Then turn on the Bluetooth function of the first device to select

"Mipeace" and it completes to connect two Bluetooth devices simultaneously.

Vibrating Call Notification: When you receive an incoming call, the headphone will vibrate to alert, ensuring that you never miss an important call.

Function	Headphone status	Operation
Answer Incoming call	Incoming call ringing	Short press the power button once
Hang up Incoming call	Talking	Short press the power button once
Reject incoming call	Incoming call ringing	Press the power button twice

5.Play Music

unction	Headphone status	Operation
crease volume	Play music	Press the "+"button
ecrease volume	Play music	Press the "-"button
evious track	Play music	Press and hold the "-" button for about 2 seconds
ext track	Play music	Press and hold the "+" button for about 2 seconds
use playing	Play music	Press the power button once
esume playing	Pause playing	Press the power button once

Maintenance

During using, please read the following advices carefully to help you comply with warranty terms and extend the product's service life.

- Do not over charge or discharge the product. Over charging and over discharging will shorten the life span of the battery. Keep the product away from humid places to avoid affecting internal circuit.
- Do not put the product in places exposed to sun or with high temperature. High temperature will shorten service life of electronic components, damage battery and deform plastic components.
- Do not put the product in cold places to avoid damaging internal circu
- the product.
- Do not use drop, strongly vibrate, strike the product with hard object avoid damaging internal circuit.
- Do not use drastic chemicals or cleaner to clean the product.
- Do not use sharp objects to scratch product surface to avoid damaging shell and affecting appearance.

If the product cannot operate properly, please feel free to contact our support team immediately.

FAQS

1.Can not turn the earbuds on

• Please charge the earbuds and make sure your device is fully charged before using for the first time.

2.No sound heard from the earbuds

- Please check if the earbuds are paired successfully with the device and
- Please check if the earbuds volume is at an appropriate level. •Please check if the earbuds are operated within an effective distance.
- 3.The earbuds calling effect is bad.

• Please check if mobile phone is in an area with strong signal.

• Please ensure the earbuds are within effective distance (33feet) and • Do not dismantle the product. Non-professional personnel may damage | no obstacle between the earbuds and mobile phone.

4. Mobile phone can't find the earbuds ID

 Please check if the Bluetooth function of your phone is on. • If the pairing time out, pairing mode will exit, if so, please re-enter pairing

will disconnect with previous device and enter the pairing mode.

• Please press and hold V+ and V- button for about 4 seconds, the earbuds

• Please re-start the mobile phone and earbuds then pair again.

To ensure the longevity of your headphones, please avoid pulling the earbuds too forcefully. Gently remove the earbuds by holding the base or the earbud itself to prevent any damage.

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like

CAUTION



- 1."To prevent possible hearing damage, do not listen at high volume levels for long periods.'
- 2. "Fully understand user manual before use."
- 3. "Ensure your player at low volume levels or power off before you leaving."



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household disposal. recycle it responsibly to promote the sustainable reuse of material

This equipment has been tested and found to comply with the limits for a Class B digital

FCC Warning

device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

•Increase the separation between the equipment and receiver •Connect the equipment into an outlet on a circuit different from that to which the receiver is

Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two

(1) This device may not cause harmful interference, and (2) this device must accept any Interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm





