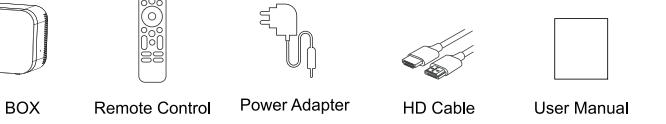
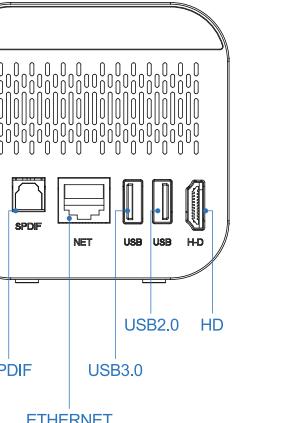
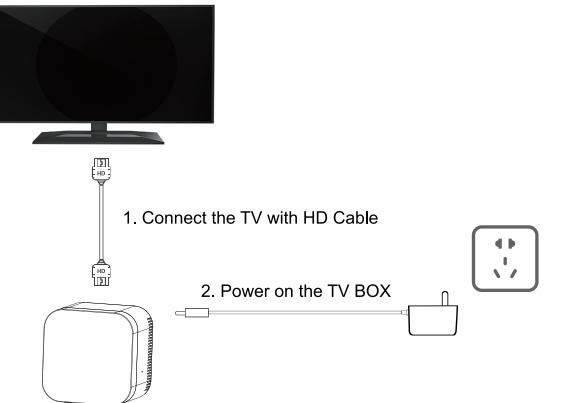
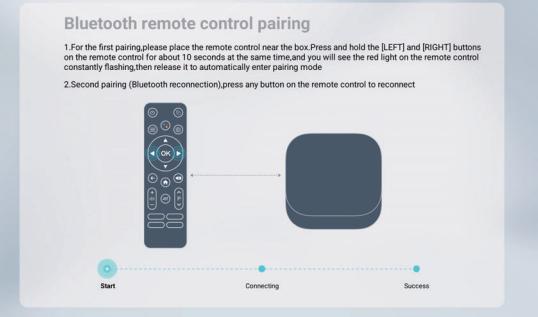


 <p>H96Max</p> <p>User Manual</p>	<p>Precautions before use</p> <p>To prevent fire, electronic shock and damage of product, please do not let the player come into contact with rain, moisture or liquid. Do not put vases or other water containers on the player.</p> <p>To ensure good ventilation, please do not put the player in bookcases, cabinet or other confined places. Keep well-ventilated to prevent fire or electronic shock caused by overheat of the player. Keep lit candles and other lit subjects away from the player. Please do not open the case of the player. Only a specialist is allowed to do this.</p> <p>Placement of unit Issues</p> <p>Please place the player on a flat area. Keep it away from sunlight and avoid heat.</p> <p>humidity and frequent shaking to avoid damage the case and other components of the player and shorten the service life of the player. For the best performance of the player, please do not place heavy objects on the player and keep it at least 6 inches away from the wall.</p> <p>Power Issues</p> <p>Please do not use over-voltage, otherwise the player would be damaged and might cause fire. Please connect the power cord correctly and make sure the cable is not damaged.</p> <p>In the United States, that means supplying 110 VAC to the device. Please unplug the power cord if you do not use the player for long time to prevent damage caused by lightning.</p>	<p>Cleaning Issues</p> <p>Please unplug the power cord before cleaning the player. Use a slightly wet rag to clean the player instead of liquid detergent. Do not use solvents like gas, because this might damage the case of the player.</p> <p>Moisture Issues</p> <p>Please keep the player away from any humid places, like a basement. Condensation of moisture might cause damage to the player. In this case, please turn on the player and the heat of the player may drive the humidity away.</p> <p>About the user manual</p> <p>Please read the user manual carefully and keep the manual in a safe place for review if necessary. The pictures in this user manual might be different with the Pictures shown on the TV because of a difference in firmware.</p> <p>If any of the components needs to be replaced, please make sure only authorized components are used. Otherwise it might cause fire, electronic shock or other damages.</p>	<p>Package Contents</p>  <p>Connection Interface</p> 	<p>Installation Steps</p> <ol style="list-style-type: none"> Connect the TV BOX to your TV with a HD cable. Connect the TV BOX with power supply. For wired connection, plug in Ethernet cable from the TV BOX to your modem or router. For wireless, choose your Wi-Fi network and input the password. 																									
<p>Bluetooth Pairing Method</p> <ol style="list-style-type: none"> For the first pairing, please place the remote control near the box. Press and hold the [LEFT] and [RIGHT] buttons on the remote control for about 10 seconds at the same time, and you will see the red light on the remote control constantly flashing, then release it to automatically enter pairing mode. Second pairing (Bluetooth reconnection), press any button on the remote control to reconnect. 	<p>Remote Indicator Status</p> <ol style="list-style-type: none"> Infrared status: When infrared is emitted, the LED blinks 2 times continuously when the key is pressed; the LED goes out when the key is pushed up. Bluetooth status: When sending Bluetooth, the LED will be on when the button is pressed; the LED will be off when the button is pushed up. <p>Virtual Empty Mouse (VOA)</p> <ol style="list-style-type: none"> Press the empty mouse button, at this time press the arrow key, you can see the arrow appear and move with the arrow key, press the empty mouse button again to turn off this function. 	<p>The Screen Casting</p> <p>Introduction: The TV box can meet your needs for playing photos, music, and videos from your smartphone or tablet computer on your TV.</p> <p>Preparation: Makes sure your device(s) and TV BOX are connected to the same network.</p> <p>How to use: After your device(s) and TV BOX are connected to the same network, the logo  will show up in the related applications of your device(s). Click the  and share the photos, music and videos on TV.</p>	<p>Features</p> <p>OS: Android 14.0 CPU: Allwinner H728 Octa-core ARM Cortex™-A55 GPU: ARM G57 MC1 WiFi: WiFi6 Video: Support 8K video decoding USB Port: USB3.0*1, USB2.0*1 BT: 5.X Ethernet: 1000M Audio output: Support Spdif Remote Control: Bluetooth remote control DC: 5V/2A</p> <p>Troubles hooting</p> <p>Under no circumstances should you attempt to repair the TV Box yourself as this will void the warranty. Do not open it as there is a risk of electric shock. If the TV Box fails, please check the points listed below before sending the TV Box for repair. If you are unable to resolve the problem following the prompts, consult your dealer for assistance.</p>	<table border="1"> <thead> <tr> <th>Problem</th><th>Solution</th></tr> </thead> <tbody> <tr> <td>No power</td><td>-Check if the power adaptor is properly connected to the power and the TV BOX. -Press the power on the remote controller to turn on the power.</td></tr> <tr> <td>No picture</td><td>-Re-connect with HDTV cable or YUV cable or AV cable. -Check if the TV is switched on.</td></tr> <tr> <td>No sound or distorted sound</td><td>-Adjust the volume. -Check that the speakers are connected correctly.</td></tr> <tr> <td>No audio or digital output</td><td>-Check the digital connections. -Check if your amplifier is set correctly.</td></tr> <tr> <td>The player does not respond to the Remote Control</td><td>-Aim the remote control directly at the sensor on the front of the TV BOX. -Reduce the distance to the TV BOX. -Replace the batteries in the remote control.</td></tr> <tr> <td>Player does not respond to some operating commands during playback</td><td>-Operations may not be permitted. Refer to the user manual. -Possibility of system halted, re-insert with power adaptor to restart.</td></tr> <tr> <td>No sound during movies playback</td><td>-The audio code may not be supported by the TV BOX. -You can change to the supported audio on playing menu. -Check the volume.</td></tr> <tr> <td>The contents of the USB flash drive cannot be read</td><td>-The USB flash drive format is not compatible with the box. -If one of the USB can not be read, please turn off the TV BOX for 30 seconds and restart the TV BOX.</td></tr> <tr> <td>Slow operation of the USB flash drive</td><td>-Big file size or high resolution USB flash drive takes longer time to read and display on the TV screen. -Check the connection between the TV and the HDTV jack of box.</td></tr> <tr> <td>No sound with HDTV connection</td><td>-Check your TV system setup. -Check the volume.</td></tr> <tr> <td>The TV screen is blank and the player LED is blinking</td><td>-Turn off your TV BOX, wait 30 seconds, turn it on again. -If under HDTV status, check if HDTV connection is correct, change another HDTV cable, set the output resolution of this TV BOX into 720p.</td></tr> </tbody> </table>	Problem	Solution	No power	-Check if the power adaptor is properly connected to the power and the TV BOX. -Press the power on the remote controller to turn on the power.	No picture	-Re-connect with HDTV cable or YUV cable or AV cable. -Check if the TV is switched on.	No sound or distorted sound	-Adjust the volume. -Check that the speakers are connected correctly.	No audio or digital output	-Check the digital connections. -Check if your amplifier is set correctly.	The player does not respond to the Remote Control	-Aim the remote control directly at the sensor on the front of the TV BOX. -Reduce the distance to the TV BOX. -Replace the batteries in the remote control.	Player does not respond to some operating commands during playback	-Operations may not be permitted. Refer to the user manual. -Possibility of system halted, re-insert with power adaptor to restart.	No sound during movies playback	-The audio code may not be supported by the TV BOX. -You can change to the supported audio on playing menu. -Check the volume.	The contents of the USB flash drive cannot be read	-The USB flash drive format is not compatible with the box. -If one of the USB can not be read, please turn off the TV BOX for 30 seconds and restart the TV BOX.	Slow operation of the USB flash drive	-Big file size or high resolution USB flash drive takes longer time to read and display on the TV screen. -Check the connection between the TV and the HDTV jack of box.	No sound with HDTV connection	-Check your TV system setup. -Check the volume.	The TV screen is blank and the player LED is blinking	-Turn off your TV BOX, wait 30 seconds, turn it on again. -If under HDTV status, check if HDTV connection is correct, change another HDTV cable, set the output resolution of this TV BOX into 720p.	 <p>Attention: Please read the instruction manual of this product carefully before use.</p>
Problem	Solution																												
No power	-Check if the power adaptor is properly connected to the power and the TV BOX. -Press the power on the remote controller to turn on the power.																												
No picture	-Re-connect with HDTV cable or YUV cable or AV cable. -Check if the TV is switched on.																												
No sound or distorted sound	-Adjust the volume. -Check that the speakers are connected correctly.																												
No audio or digital output	-Check the digital connections. -Check if your amplifier is set correctly.																												
The player does not respond to the Remote Control	-Aim the remote control directly at the sensor on the front of the TV BOX. -Reduce the distance to the TV BOX. -Replace the batteries in the remote control.																												
Player does not respond to some operating commands during playback	-Operations may not be permitted. Refer to the user manual. -Possibility of system halted, re-insert with power adaptor to restart.																												
No sound during movies playback	-The audio code may not be supported by the TV BOX. -You can change to the supported audio on playing menu. -Check the volume.																												
The contents of the USB flash drive cannot be read	-The USB flash drive format is not compatible with the box. -If one of the USB can not be read, please turn off the TV BOX for 30 seconds and restart the TV BOX.																												
Slow operation of the USB flash drive	-Big file size or high resolution USB flash drive takes longer time to read and display on the TV screen. -Check the connection between the TV and the HDTV jack of box.																												
No sound with HDTV connection	-Check your TV system setup. -Check the volume.																												
The TV screen is blank and the player LED is blinking	-Turn off your TV BOX, wait 30 seconds, turn it on again. -If under HDTV status, check if HDTV connection is correct, change another HDTV cable, set the output resolution of this TV BOX into 720p.																												

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.