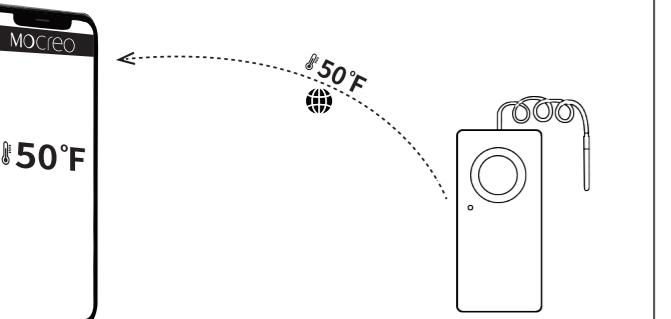
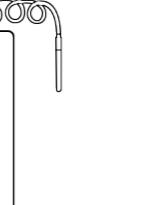


印刷成品尺寸 700x90mm

折页成品尺寸 100x90mm

<p>Introduction</p> <p>MOCREO ST7 temperature sensor is a sensor that can detect the ambient temperature in real time. It can set the alarm threshold through the APP and display the current temperature data. Low power consumption and easy to install.</p>  <p>Specification</p> <table border="1"><tr><td>Product model</td><td>ST7</td></tr><tr><td>Product size</td><td>98mm X 46.2mm X 22.3mm(High)</td></tr><tr><td>Weight</td><td>105g</td></tr><tr><td>Battery</td><td>9V 6LR61</td></tr><tr><td>Temperature Range</td><td>-40°F~257°F (-40°C~125°C)</td></tr><tr><td>Accuracy</td><td>±0.5°C</td></tr><tr><td>Working Distance</td><td>49ft/15m(No obstacles)</td></tr><tr><td>Cable length</td><td>1.5m</td></tr><tr><td>Cable cross section</td><td>4mm²1.3mm</td></tr><tr><td>Size of stainless steel shell</td><td>6mm in diameter</td></tr><tr><td>Buzzer</td><td>about 110db</td></tr></table>	Product model	ST7	Product size	98mm X 46.2mm X 22.3mm(High)	Weight	105g	Battery	9V 6LR61	Temperature Range	-40°F~257°F (-40°C~125°C)	Accuracy	±0.5°C	Working Distance	49ft/15m(No obstacles)	Cable length	1.5m	Cable cross section	4mm ² 1.3mm	Size of stainless steel shell	6mm in diameter	Buzzer	about 110db	<p>(1) Temperature Sensor(ST7)</p> 	<p>What's in the Box</p>  <p>Setup</p> <p>Download the BLE Sensor APP</p>  <p>Note: Not supported IOS</p>	<p>Alert Threshold Settings</p> <p>1. After downloading the App on the Android phone, install the App according to the prompts. After the installation is successful, open the App. 2. Start the ST7 device: Turn the side toggle switch to ON, and you will hear a "beep". 3. Select the ST7 device you want to set on the app and tap the gear button at the end of the card. 4. At this point, the upper threshold setting and lower threshold setting will pop up. Click the [OK] button after filling in. 5. At this time, the ST7 device threshold is successfully set.</p> <p>Set thresholds in batches</p> <p>The usage method is the same as setting the threshold for a single device, but before setting the threshold, you need to manually select one or more devices for which you need to set the threshold, and then click the batch setting button to set the same threshold for them.</p> <ol style="list-style-type: none">1. On the "Home" page of the app, click [SETTING] in the upper right corner.2. On the "Setting" page, tap [BATCH SETTING] at the bottom, and then select the device threshold you need to set. <p>Note</p> <ul style="list-style-type: none">- The data reading of the ST7 device is displayed after scanning the device through the Wireless of the mobile phone, so the ST7 device cannot be installed in a place with Wireless signal shielding.- The battery level of the ST7 device you scanned will be displayed on the Home page, and an icon will be displayed according to the battery level of the device. When the battery level is lower than 10%, the battery icon will display a red empty battery icon.	<p>Alert Threshold Settings</p> <p>1. After downloading the App on the Android phone, install the App according to the prompts. After the installation is successful, open the App. 2. Start the ST7 device: Turn the side toggle switch to ON, and you will hear a "beep". 3. Select the ST7 device you want to set on the app and tap the gear button at the end of the card. 4. At this point, the upper threshold setting and lower threshold setting will pop up. Click the [OK] button after filling in. 5. At this time, the ST7 device threshold is successfully set.</p> <p>Set thresholds in batches</p> <p>The usage method is the same as setting the threshold for a single device, but before setting the threshold, you need to manually select one or more devices for which you need to set the threshold, and then click the batch setting button to set the same threshold for them.</p> <ol style="list-style-type: none">1. On the "Home" page of the app, click [SETTING] in the upper right corner.2. On the "Setting" page, tap [BATCH SETTING] at the bottom, and then select the device threshold you need to set. <p>Note</p> <ul style="list-style-type: none">- The data reading of the ST7 device is displayed after scanning the device through the Wireless of the mobile phone, so the ST7 device cannot be installed in a place with Wireless signal shielding.- The battery level of the ST7 device you scanned will be displayed on the Home page, and an icon will be displayed according to the battery level of the device. When the battery level is lower than 10%, the battery icon will display a red empty battery icon.	<p>FCC Statement</p> <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none">-- Reorient or relocate the receiving antenna.-- Increase the separation between the equipment and receiver.-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.-- Consult the dealer or an experienced radio/TV technician for help. <p>Customer Service</p> <p>https://mocreo.com/doc/manual/support/faq.html +1 (530) 988-8608 contact@mocreo.com</p> <p>FAQ</p> <p>YouTube MOCREO Sensor</p> <p>Search [MOCREO Sensor] on YouTube to watch the setup video tutorial (v1.2)</p>	<p>MOCREO®</p> <p>Wireless Sensor</p> <p>ST7</p> <p>User Manual</p>
Product model	ST7																											
Product size	98mm X 46.2mm X 22.3mm(High)																											
Weight	105g																											
Battery	9V 6LR61																											
Temperature Range	-40°F~257°F (-40°C~125°C)																											
Accuracy	±0.5°C																											
Working Distance	49ft/15m(No obstacles)																											
Cable length	1.5m																											
Cable cross section	4mm ² 1.3mm																											
Size of stainless steel shell	6mm in diameter																											
Buzzer	about 110db																											