


USER GUIDE

Touch Top Wireless Speaker

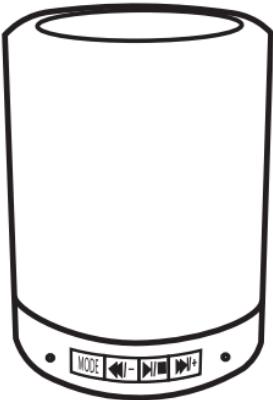

What's Included

- Touch Top Speaker
- Micro USB Charging Cable
- User Manual
- 1 Year limited warranty against defects

Charging

- Before using your Touch Top Speaker please charge using the included micro USB cable. Please note: Most USB chargers are compatible with Touch Top Speakers. For optimal AC charging, please use a 1.0A USB Charger.

On/Off

- SoundBound Touch Top Speaker can be powered On or Off via On/ Off switch.

Please note: (In case the battery voltage is too low, the speaker will sound & automatically shut down. If insufficient power is available, the speaker will need to be re-charged prior to powering back on)

Please note: Please note: Speaker does not need to be powered on for use with Aux Cable & can be used while powered off. Functions to switch tracks etc. cannot be used from speaker without pairing.

Pairing

- After powering on the headset via "Power On/Off button, the Touch Top Speaker will Power On & automatically enter "Wireless Mode" for pairing. A light will rapidly blink on the Touch Top Speaker.
- On your Mobile Device, search for the "Wireless Menu." A list of available devices will show available for pairing. Select "TOUCH TOP SPK" & the headset will automatically pair with your device for use.

- Once paired to your mobile device the Touch Top Speaker will automatically re-pair if shut down or powered off and back on.

Please note: If the Touch Top Speaker does not show up in your Wireless menu please turn off Wireless on your mobile device & turn back on. Sometimes, Wireless needs to refresh/reset to recognize available devices for pairing.

Aux Cable Port

- Simply plug in the included Aux cable in to the "Aux Cable Port" & Play audio from your device.

Please note: Speaker does not need to be powered on for use with Aux Cable & can be used while powered off. Functions to switch tracks etc. cannot be used from headset without pairing.

Volume/Audio Track Functions

- Raise Volume by long press multifunction button "Raise Volume/ Switch Tracks" or by adjusting volume on your mobile device
- Lower Volume by long press multifunction button "Lower Volume/ Switch Tracks" or by adjusting volume on your mobile device
- Short press "+" or "-" multifunction button to switch tracks forward or back.

Switching Modes

- Single tap multifunction "Mode" to switch through different modes.

USB Input

- Easily insert USB to port and play.

Phone Calls

- Click the Pause / Play button (▶/■) to answer and end calls. Double press the Pause / Play button (▶/■) to dial last call.

SD/TF Card Slot

- Simply place an SD or TF card into the slot & press play.

Wireless Mode Use

- After Pairing mobile device, begin playing audio from mobile device to stream audio. Short single press "Play/Pause" function button to play or pause streaming audio.
- To switch to the next audio track, short press "+" or "-" multifunction button.

True Wireless Pairing

To enable True Wireless Pairing (streaming audio from your mobile device to two speakers, follow the steps below.

Prior to connecting the speaker with any Mobile device, ensure both speakers are turned on. Next, long press the "Mode" button on either speaker to connect to the other one (does not matter which speaker is pressed). You will hear a sound alert announce to confirm the 2 speakers have paired successfully.

Next you can proceed with pairing to your mobile device as described under "Pairing" & search for "TOUCH TOP SPK" to connect. You will hear a sound alert announce once your device has paired to the speakers successfully.

(Please note-Touch Top Speaker will be displayed in the mobile device's Wireless Menu as one device listed after pairing in True Wireless Mode). Once paired with your mobile device, streaming audio will play from both speakers.

Style#: Touch Top Speaker

Material: Plastic

True Wireless 5.0

Provides ability to receive audio signals and control audio devices.

Working distance: Up to 10M

Driver Diameter: 52mm

Impedance: 4 Ohms

Charging Time: 1.5-2 Hours

Playing Time: 1.5 Hours

Battery: 3.7V 300mAh

*Playback Time mentioned may vary by user's operation mode & device settings



© 2019 Lifeware Group, SoundBound NY, NY 10018

The Bluetooth® word mark & logos are owned by Bluetooth® SIG, Inc. All other trademarks & trade names are those of their respective owners. The illustrated products may slightly differ from those supplied.

Made in China

USER GUIDE

Touch Top Wireless Speaker

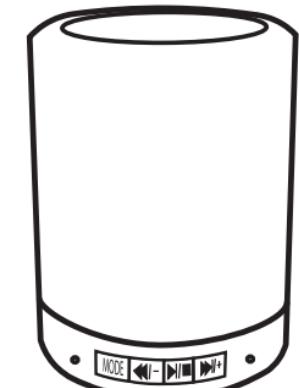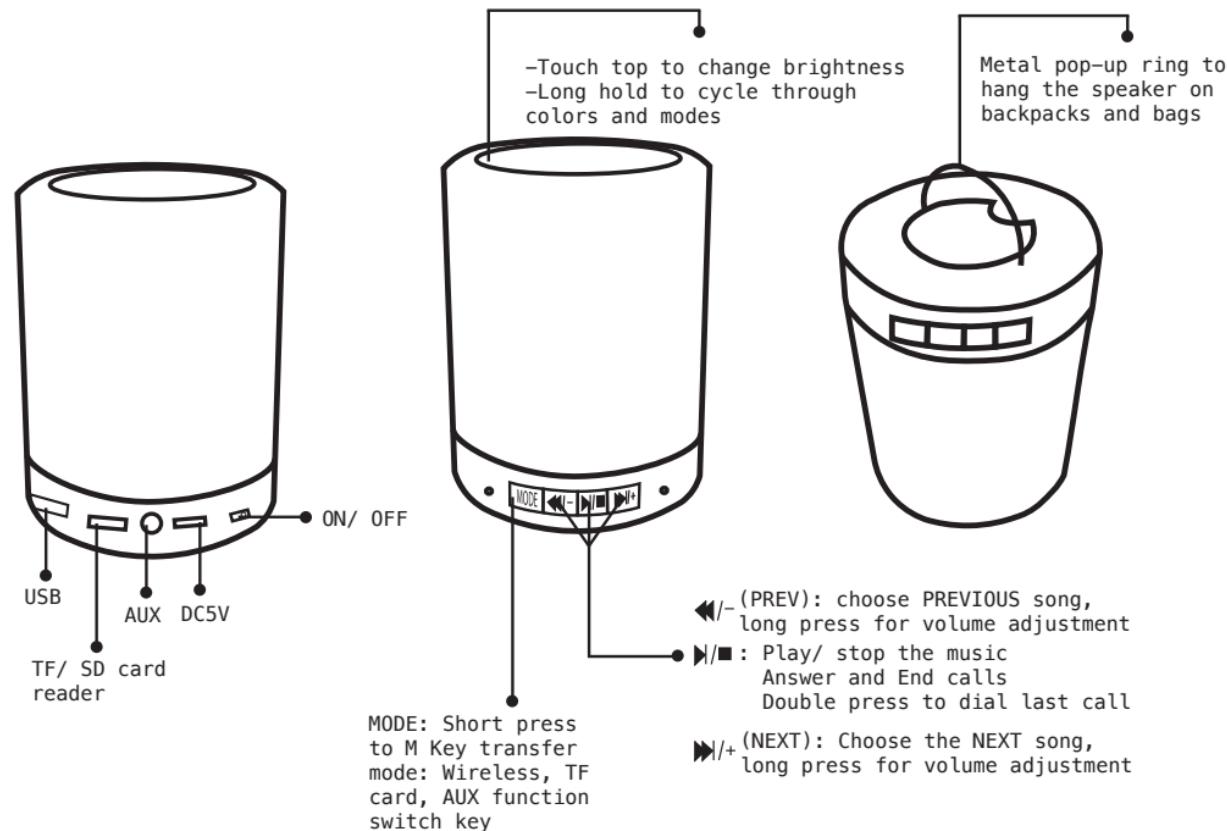

© 2019 Lifeware Group, SoundBound NY, NY 10018

The Bluetooth® word mark & logos are owned by Bluetooth® SIG, Inc. All other trademarks & trade names are those of their respective owners. The illustrated products may slightly differ from those supplied.

Made in China

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.