


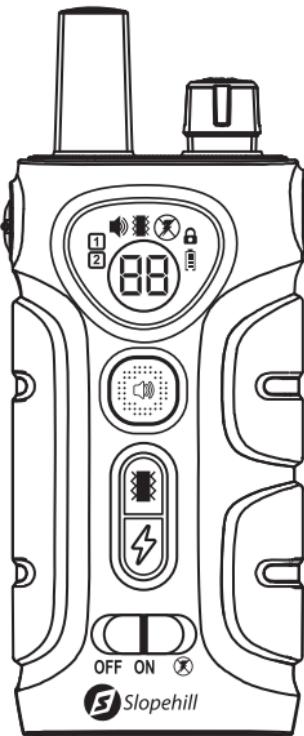

Dog Training Collar

User Manual
Model: D17T



support@aftersaleforvip.com



WARNING

1. Before using the product, please read the user manual and any safety information completely to avoid injury caused by inappropriate usage!
2. When using the product, please follow the directions in the manual. We are not responsible for any damages or injuries caused by improper usage!
3. Please retain the user manual carefully for future reference!

Important Safety Information

Please follow these Important Safety Informations while running the appliance to ensure your dog's safety and comfort!



WARNING

WARNING denotes a potentially dangerous scenario that, if ignored, might result in the dog's death or serious injury.

1. Do not give this training kit to children or anybody with little to no expertise teaching dogs.



Not For Children

5. Do not leave the collar on your dog for more than 8 hours per day!



< 8 hours
Maximum 8 hours
of daily wear

2. If your dog exhibits symptoms of growling, snarling, biting, or aggressiveness while wearing the collar, immediately stop using it and seek guidance from a professional trainer.



Not suitable for
aggressive dog

6. Don't charge this product with a charger of more than 5 volts.



Don't charge with a
charger above
5 volts

3. Do not attach the dog leashes to this training collar!



Don't attach a leash
to this collar

7. Daily check the skin health of the dog's neck and clean the dog's neck region and collar with a damp towel, if there are any anomalies, discontinue usage of this product and consult a veterinarian!




Daily check and clean
the dog's neck
and collar

4. Do not use the device on dogs who are less than three months old, weigh less than eight pounds, are old or pregnant, easily scared, aggressive, or in heat, or are otherwise in poor condition!



Age < 3 months or
Weight < 8 pounds

8. It is forbidden to use the product in extremely hot (above 40 degrees Celsius) or extremely cold (below 0 degrees Celsius) environments.

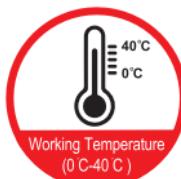

Working Temperature
(0 C-40 C)

Important Training Guide

Please follow these Important Training Guide while using the product to ensure your dog's safety and comfort!



WARNING






denotes a potentially dangerous scenario that, if ignored, might result in the dog's death or serious injury.

1. Do not rely exclusively on this product to train your dog. Certain dog's will have an adverse reaction to this product. We cannot guarantee that this or any other trainer will be beneficial to your dog.
2. It is critical that the collar fits properly on your dog. Fit it on your dog's neck according to the instructions in this booklet.
3. Use a separate collar for a lead, don't put pressure on the electronic collar.
4. Ascertain that the leash is sturdy enough and long enough to keep the dog within a safe range at all times and that you can easily draw the dog back if it escapes unexpectedly.
5. Shock mode is always the last choice! Before using the shock mode, you should first try the Beep/Light/Vibration mode for your pet in turn.
6. Training start with the lowest level of stimulation.
7. Rewarding your dog with food will usually contribute to the achievement of the best result.
8. Utilize verbal commands initially, and only when necessary, complement with a corrective stimulus. Keep your verbal commands constant by utilizing the same phrases each time. To avoid it, work with your pet on a single habit at a time.
9. As possible and only as required to reinforce spoken orders. Avoid excessive corrections with your dog. For instance, by pushing the Beep Button, you may utilize the sounds as a warning. The dog will develop a tolerance for the beep preceding the corrective stimuli and will quickly learn to associate the beep with your spoken order.
10. Eliminate or teach one misbehavior or obedience order at a time; If training becomes too rapid, your pet may get confused and repellent.
11. Always keep an eye on the dog's reaction and make sure the training isn't too strenuous.
12. Check the receiver and the collar every 1–2h, adjust the position and tightness if necessary to prevent excessive pressure.

Contents

Activate Your Warranty	I
Important Safety Information	II
Important Training Guide	III
Package Content	1
Product Overview	2
Operating Guide	
Charging Prior to Use	4
Product Switching ON/OFF	5
Pairing the Remote Control and the Receiver	7
Pairing Additional Receivers	7
Test the electric shock function	8
Test the vibration function	9
Test the beep function	9
Test the LED lights function	10
Proper Fit of the Collar	11
Training Guide	
Find the best Vibration/Shock Level	13
Teach Basic Commands	14
How to Get a Free Dog Training Collar	18
Frequently Asked Questions (FAQs)	18
Operating Environment & Maintenance	20
Warranty Service	21
Terms of Use and Limitation of Liability	22


Package Content

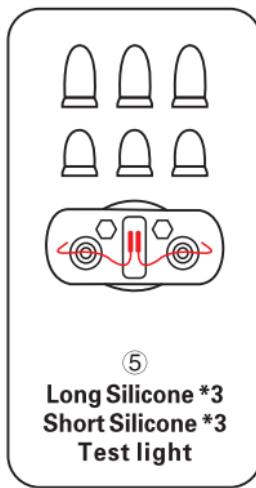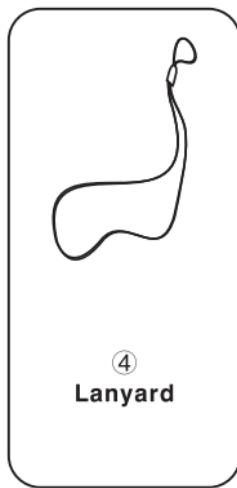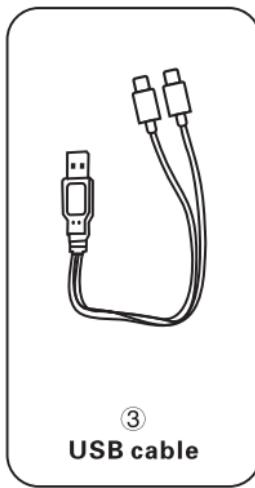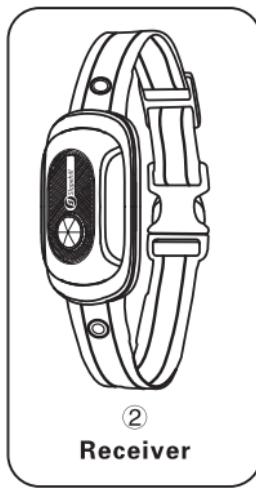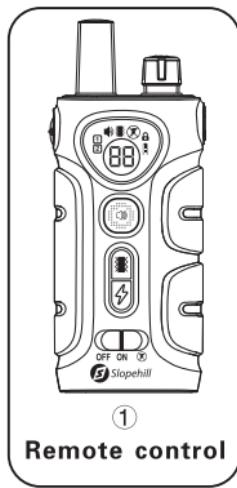

Product Overview

Function description of the mode gear adjustment

1. When you need to adjust the beep/vibration/shock
2. Press downward the gear adjustment button shortly, the beep/vibration/shock symbol will flash, and then rotate the button within 10 seconds to increase/decrease the gears.
3. Tips: When press downward the gear adjustment button, you will find the currently selected level of the beep/vibration/shock mode in sequence (it will not be directly work at this moment) The gear adjustment needs to be pressed downward first and then be able to rotate the button. It's to avoid the product function was triggered accidentally.

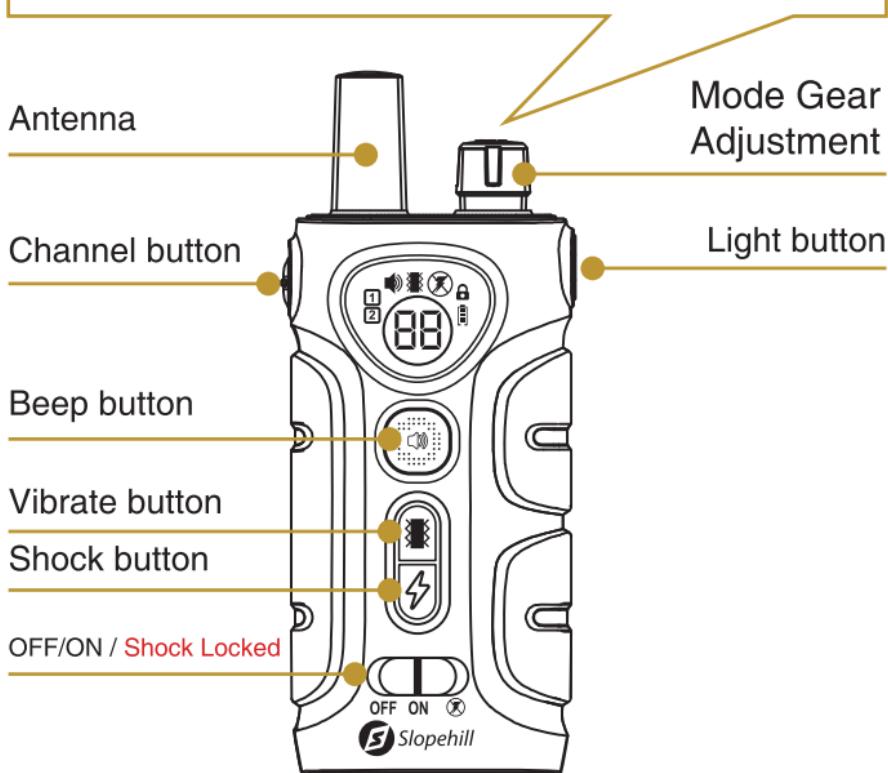

Product Overview

Training mode

Shock Vibrate Beep

Shock Locked
shock function is unavailable
if the shock status switch
at Locked position

Channel
CH(1-2)

Locked

Training level

Battery status

Beep: 1-8
Vibrate: 0-8
Shock: 0-99



Static electrode


Speaker holes

Static electrode


Power button

Charging port

LED status light

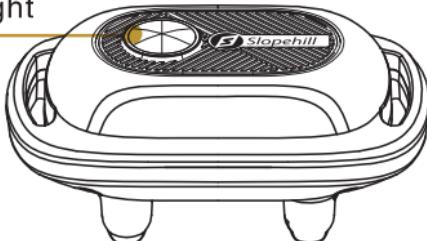

Charging Prior to Use

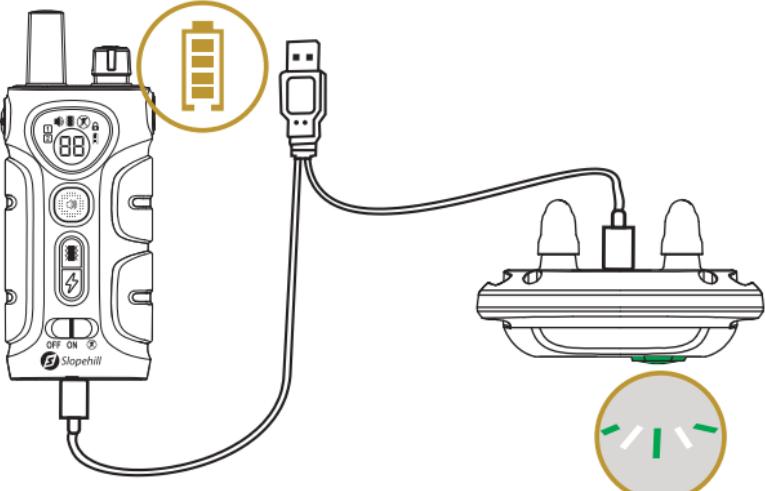


2 hours separate charging with USB charging cable.

Notes :

1. While the remote control is charging, the battery icon on the display will blink. When the battery is fully charged, the battery icon will stop flashing and display a full status. If the remote control loses power, the battery symbol on the display will indicate a space status.
2. While charging, the receiver's green LED status light will illuminate and flash in a breathing pattern; After fully charged, the green LED status light will stop flashing and remain on. While charging, the receiver enters sleep mode, which prevents it from receiving signals and being operated by the remote control. When the receiver is low, the indicator light will flash every second.
3. Make sure the charging port is dry before charging the device.


Product Switching ON/OFF

1. To switch on the remote control, press and hold the ON/OFF Button on the remote control's side to the ON position.
2. To switch off the remote control, press and hold the ON/OFF Button in the OFF position.

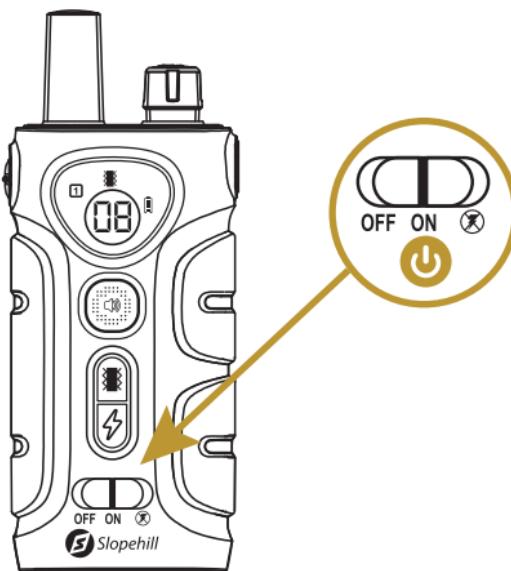

Note :

1. After the remote control is switched on, the display backlight will remain on for 5 seconds; If no further activity is done, the backlight will switch off. To activate the lighting, press any remote control button.
2. If there is no additional operation, the LCD display will switch off after 1 hour and can be switched back on by hitting any button on the Remote control.

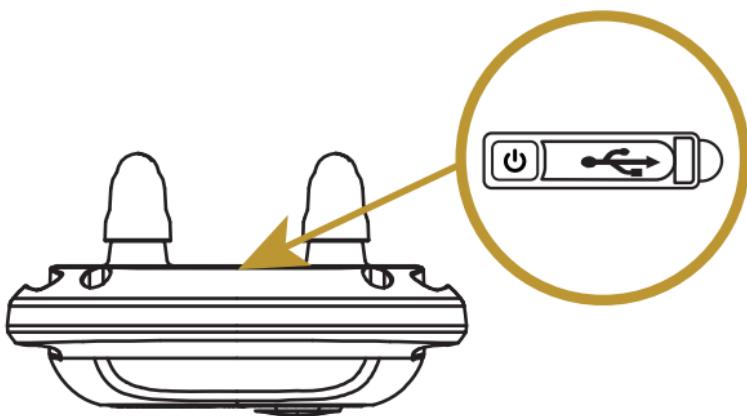


1. Press the receiver's power switch button, the receiver is switched on, the LED indicator will flash once, while the receiver makes a tick sound.
2. Press the receiver's power switch button again, the receiver is switched off, the LED indicator will flash again, while the receiver makes a tick sound twice.
3. When the receiver is switched on, the green LED blinks every 7 seconds to indicate that it is operational and ready to receive signals from the remote control.

Note :

1. After 2 hours of inactivity, the receiver enters standby mode, which may be activated by pressing the electric shock or vibration buttons on the remote control for more than 1 second.
2. Turn the Receiver off when it is not in use to extend the life of the batteries.

Pairing the Remote Control and the Receiver


You may skip this step as the product is already matched up in the factory. (The paired channel is CH1)

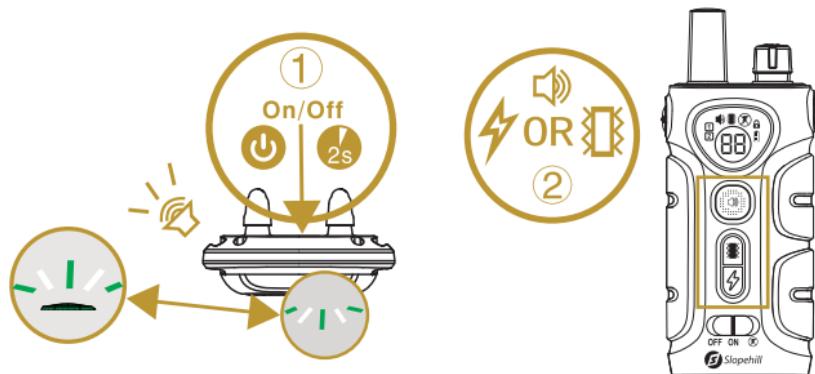


1. Turn on the remote control and press the CH button to choose "CH1";
2. Turn on a Receiver and press the power button of the Receiver by 2 seconds, you hear a beep sound, and the Receiver's green LED status light is flashing;
3. Press the vibrate button/shock button/beep button of the Remote control within 10 seconds after the beep sound, hearing a beep sound again that means the pairing successful.

Pairing Additional Receivers

You can select a different pairing channel to couple an extra receiver or two in the same manner as described above.

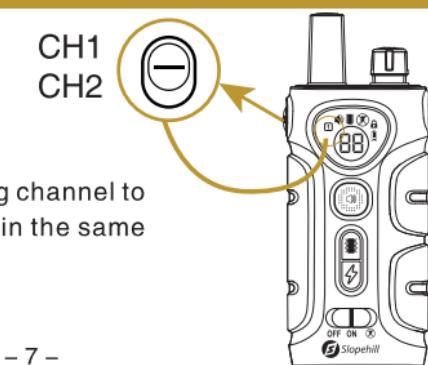

Test Training Modes

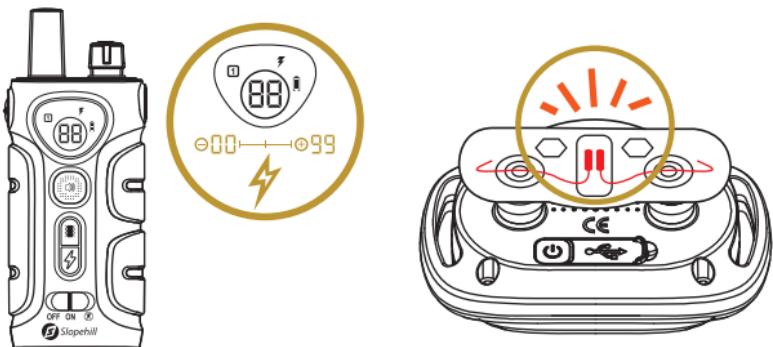

1. Test the electric shock function.

Connect the test light to the receiver's two electric shock pins, push the remote control's electric shock button (ensure the intensity level is more than 0), and the test light will illuminate.



Shock status switch


Tips :

- 1.Under the shock lock state, the shock function is unavailable.
2. The shock mode is always the last choice. Before using the shock mode, you should first try the Beep/Light/Vibration mode for your dog in turn.
3. If you want to use the shock mode, please start from the low level.
4. If you do not want to use the shock mode, you can push the front switch button to the lock shock symbol to turn off the shock mode.




2. Beep Mode Description

Beep mode adjustment: In Beep mode, press the top knob down and then the beep symbol will flash on the screen. Rotate the gear adjustment button within 10 seconds to adjust the intensity between 0-8 levels.

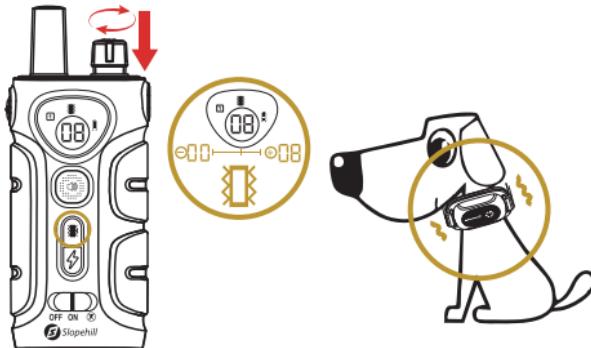

3. Vibration Mode Description

Vibration mode adjustment: In vibration mode, press the top knob down and then the vibration symbol will flash on the screen. Rotate the gear adjustment button within 10 seconds to adjust the intensity between 1-8 levels.

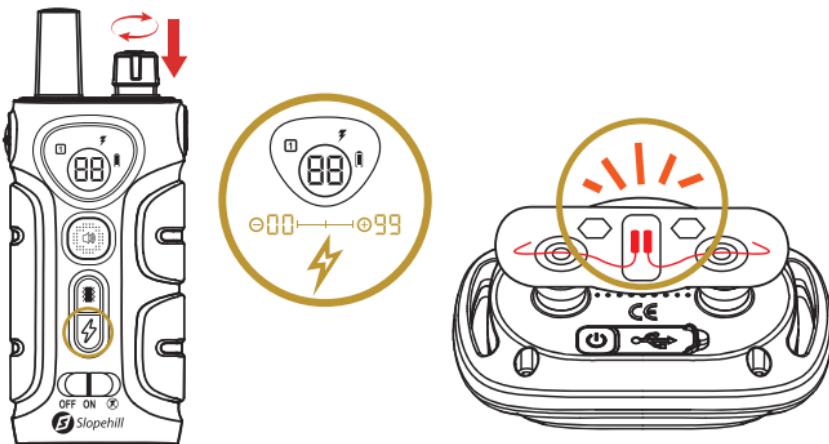



4. Shock Mode Description

Shock mode adjustment: In shock mode, press the top knob down and then the shock symbol will flash on the screen. Rotate the gear adjustment button within 10 seconds to adjust the intensity between 0-99 levels.

Special instructions: When the shock is not required, the switch can be turned to the lock shock position to turn off the shock function.




Scan the QR Code for
More Operation Steps

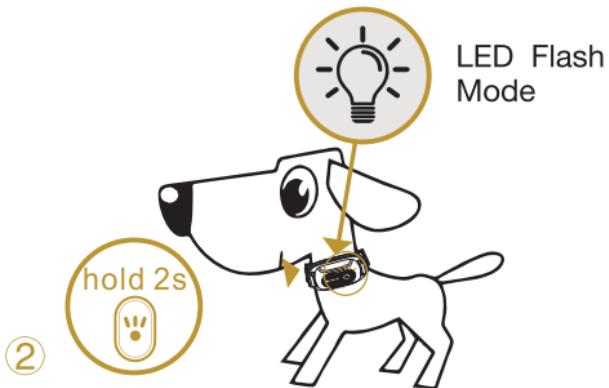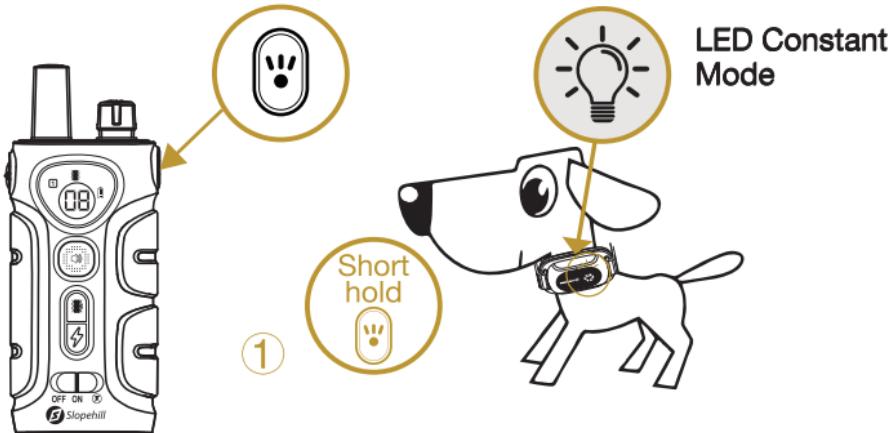

5. Test the LED Light

- **Short press** the light button on the right side of the remote control, the LED light of the receiver will stay on, short press again to turn it off.
- **Long press** the light button for 2 seconds, the LED light of the receiver will enter the flashing mode (the flashing mode lasts for 60 seconds, and it will automatically turn off after 60 seconds).
- In the flashing mode, short press the light button again to turn off the LED.


Proper Fit of the Collar

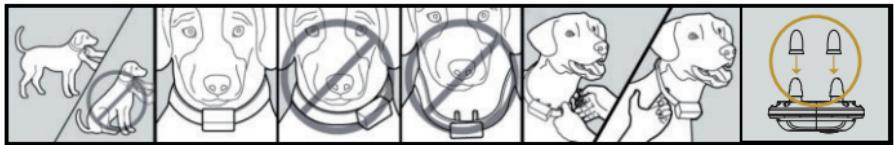

1. Turn off the collar before attaching it to your dog – this is to avoid inadvertent stimulation, which you do not want your dog to associate with you (but with the behavior you are attempting to address).
2. Allow your dog to stand comfortably. DO NOT fit the collar while your dog is sitting down – your dog's neck is a bit smaller in a sitting position.
3. If your dog has thick fur, please use a comb to separate the fur around the electrodes to allow them to reach the skin.
4. Place the Receiver around the neck of the dog. The collar should be tight, but the contact areas should feel comparable to how you would push on someone's neck or wrist to detect their pulse.
5. Fit your dog's collar by inserting one finger or your thumb between the collar strap and the dog's neck. If one finger can be placed beneath, the fit is optimal.
6. The silicone caps may help to dull the static sensation; You should determine whether or not to wear them. Additionally, the soft caps prevent your dog from direct contact with the electrodes, since in some cases might cause pain in some dogs.
7. Allow your dog to become accustomed to the collar by allowing him to wear it for a few minutes.
8. Recheck the collar for proper fit.
9. Turn on the collar to test it or begin training.

⚠️ **WARNING**

1. The metal probes is already installed on the collar. There are couples silicone probe covers in the box, the silicone protective cover can be applied to the probes to protect the dog's skin from shock or irritation. You could choose long silicone cover or short silicone cover according to the dog's hair. If the dog's hair is very long, just shave the dog's neck.

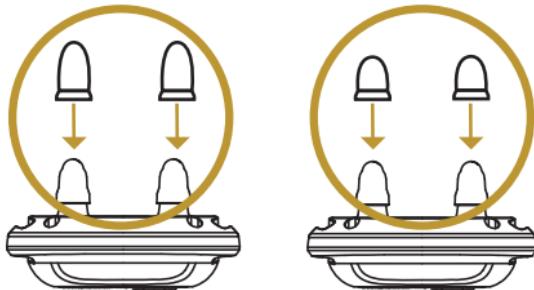

2. Allow your dog to wear the electric training collar for a few days to a week before to beginning active training. This is to establish the belief in your dog that the collar is just like any other collar—this will prevent your dog from being "collar-wise". Thus, your dog will identify the reprimand with the undesirable behavior and NOT with the remote training collar.

3. Not Too Tight When Fitting the Electric Dog Collar! The pain on your dog's neck is frequently caused by over-tightening the electric dog collar. This is a typical error made by the majority of dog owners. (I know you're an amazing fur parent; Thus, please refrain from doing the same). To avoid these pressure injuries, you should allow the skin on your dog's neck to breathe.

4. Attaching a lead to the electronic dog collar will increase the collar's tightness, which we want to PREVENT. As your dog pulls against the lead, the contact points—the rubber points on the collar—push deeper into your dog's neck, eventually causing soreness. As a result, contact sores occur. The best course of action is to allow your dog to wear another non-metallic collar for the lead or to purchase a body leash or harness for your dog.

Finding the Most Appropriate Level of Electric Shock for your Dog

To begin teaching your dog efficiently, first select an area with few distractions – your dog should feel secure and comfortable.

Ascertain that both the portable remote (transmitter) and the collar (receiver) of your dog are completely charged.

1. Follow these steps to smoothly start training your dog with the tone button :

- Spend 10–15 minutes per day for 2–3 days helping your dog understand the tone.
- Associate the tone with reward and praise (some also use the tone as a warning).
- Push the tone button for 2 seconds.
- Reward your dog with verbal praise when you release.
- Allow 2–5 seconds before you repeat the process.

Quick Tip : Vary the rewards while training for the tone function. As soon as your dog starts to anticipate a reward with the tone, you've succeeded in this phase.

2. How to find the best Vibration/Shock Level – the level of correction he or she responds to, do these steps :

- Start with the lowest(01) level of stimulation.
- Look for a slight change in your dog's behaviour.
- Looking around in curiosity.
- Scratching at his remote training collar.
- Flicking his ears.
- If you do not see any changes at his behaviour, move up to the next level of stimulation.
- Look out for your dog's reaction to the stimulation.
- Take note of his recognition level – the level you use for communicating with your dog.

Teach Basic Commands

There are a few easy instructions that you may teach your dog, like "sit", "come", "stay", and "heel" – these orders may seem simple, but they can definitely come in handy.

1. The Sit Command.

So, how do you teach the "SIT" command to your dog? It's pretty simple... once you find your dog's recognition level with the remote training collar, do these following steps :

- Put a separate collar on your pet's neck.
- It should be above the remote training (receiver) collar.
- Attach the training leash.
- The extra collar should not put pressure on the remote training collar's contact points (the two tiny prongs).
- Hold the leash and the Dog Remote Trainer on one hand.
- Use your free hand to guide your dog into the sitting position.
- Press and hold the stimulation button.
- Immediately give the "SIT" command.
- Continue holding the button.
- Release the stimulation button as soon as your dog is in the sitting position.
- Praise your do.
- Allow your dog to move from the sitting position.
- Play for a few moments.
- Repeat the process until your pet understands the command.

2. The Come Command.

Recalling your dog regardless of your location might be a critical safety step. Using a remote dog training collar, this is how you educate your dog to "come" when called :

- Keep the remote training collar on your dog.
- Hold the leash and the Dog Remote Trainer on one hand.
- Wait for your dog to walk away.
- Press the stimulation level on your remote – using your dog's recognition level.
- Immediately give the command "COME".
- Hold the stimulation button.
- Use the leash to gently guide your dog towards you.
- Release the stimulation button as soon as your dog steps towards you.
- Praise your dog verbally or with food treats.

3. The Stay Command.

Oftentimes, when people arrive at your house, you want your dog to remain in a particular location. Utilize a training collar to teach your dog to "STAY" :

- Put your dog on his designated spot.
- Walk within the perimeter of the spot but stay within 3 feet.
- Don't say anything unless your dog tries to leave.
- When he tries to leave, press the stimulation button.
- Immediately give the "STAY" command.
- Hold the button until your dog is back at his spot.
- After he's settled for a few moments, allow him to move.
- Praise your dog or give him treats.

4. The Heel Command.

On walks, good leash behavior is critical, as is keeping your dog near to you off-leash. Utilize an Electric Dog Training Collar to teach your dog to "heel". Here's how :

- Shorten the leash so your dog can walk right beside you.
- Slowly release the leash.
- If your dog moves away, press the stimulation button.
- Immediately give the command "HEEL".
- Use the leash to gently pull your dog back to make him understand where you want him.
- When your dog returns to your side, release the stimulation button.
- Praise your dog or give him food treats.

As soon as your dog masters these basic commands, it will be easier for you to reinforce positive behaviors.

Now, unpleasant behaviors such as jumping on people, digging in your garden beds, chasing people and cars and excessive barking can also be corrected by using remote dog trainers.

5. Jumping on People.

Jumping can be an obnoxious behavior that makes other people feel uneasy. Dogs usually leap to get attention, which is not a desirable trait to promote. With a Remote Trainer, you may take control of your dog's leaping antics :

- Let your dog sit before he can have any attention.
- Choose a stimulation level that is one step higher than your dog's recognition level.
- As soon as your dog starts jumping on someone, press the stimulation button.
- Give the command "SIT".
- Immediately release the stimulation button once your dog sits down.
- Praise your dog.
- Practice the exercise in several locations and use different people as a distraction.

Quick Tip : If your dog ignores the stimulation, repeat the "SIT" command several times before increasing the stimulation by one.

6. Digging up Garden Beds.

Now, your dog may squander hours of your labor and money invested on your garden by digging up your garden beds. Dogs dig mostly to find a cool, shady spot to lie down; Occasionally, it is out of boredom, but more often than not, it is just in their nature.

If you offer a nice, shaded location for your dog to lie down and lots of opportunities for exercise, you may be able to limit this digging behavior. However, some dogs are extremely strong-willed... and utilizing an electric dog training collar may help resolve this issue. How to use a Dog Remote Trainer to manage your dog's digging behavior :

- Choose a stimulation level one step higher than your dog's recognition level.
- Give your dog a few minutes wearing the receiver collar in the house.
- Let your dog out to the yard.
- No other people or pet should be in the area so your dog does not associate the stimulation with them.
- Stay on a spot where your dog cannot see you.
- Wait for your dog to dig.
- As soon as your dog digs, press the stimulation level.
- Release the stimulation button as soon as your dog stops digging.
- Wait for a few moments because your dog may start digging in a different spot.
- If your dog ignores the stimulation, increase the level by one.

Quick Tip : ONLY press the button while your dog is in the act of digging and do not say anything.

7. Chasing Cars and People.

Keeping your dog safe might be a concern, especially if your dog enjoys chasing cars on walks. Dogs adore chasing, don't they? Yes... it is inherent in their character.

Remote Dog Training can assist you in resolving this very dangerous pursuing behavior.

Here's how : Small dog on a chase – needs to be trained for recall using a remote trainer.

- Make sure your dog understands and masters the "COME" command.
- Choose a stimulation level one step higher than your dog's recognition level.
- Set up a scenario where your dog is likely to chase something :
 - A friend riding a bicycle on the side walk.
 - A friend riding a car.
 - A friend going for a jog or a run.
- Make sure to hold the leash with a firm grip.
- As soon as your dog starts to chase, give the "COME" command.
- Press and hold the stimulation button until your dog stops chasing.
- Once your dog starts coming back to you, slowly walk backwards – give the "COME" command.
- Praise your dog or give some food treats as soon as he returns to you.

Quick Tip : If your dog spends the most of his time in the yard and your standard fence is costing you money while ineffectively restricting him, you may require an Electric Dog Collar – no need for a physical fence. As with your dog's remote trainer's "invisible leash", you may envision a "invisible fence" that securely confines your dog while protecting your garden beds.

8. Excessive Barking (Quiet Command).

Oftentimes we need our dogs to be quiet and excessive barking can be a real problem. Why does your dog excessively bark? There a few reasons :

- To alert you.
- To say hello to other dogs.
- Boredom; But when it comes to nuisance barking, you can use a Remote Training Collar to solve it. Here's how.
- Choose a stimulation level one step higher than your dog's recognition level.
- Once your dog excessively barks, press the stimulation button.
- Give the command "QUIET".
- If your pet does not respond, increase the stimulation level one step higher.
- Praise your dog once he is quiet.

Quick Tip : If you have a strong-willed dog that you must leave in the yard and who is a nuisance to the neighbors due to his excessive barking... and you are unable to distract him with your remote trainer, a Bark Collar will be the most effective solution.

Frequently Asked Questions (FAQs)

Q : What could I do if the receiver did not respond to the operational signals from the remote control?

A :

1. Verify the Receiver Collar is on had been matched.
2. Check your Remote, make sure the Receiver is in the correct channel.
3. Check your Remote and Receiver, make sure both devices have enough power. If the Indicator Light does not come on when any button is pressed on the Transmitter, ensure that the batteries are fully charged.
4. If did not resolve the problem, see page 6 to rematch them.

Q : What can I do if I press the remote control button, my pet does not react?

A :

1. Ensure the receiver is turned on.
2. It's possible that a low battery in the remote control and receiver is causing the remote control distance to be lowered when you first use it.
3. The remote control distance can be affected by a variety of factors such as topography, weather, vegetation, and the transmission of other radio equipment.
4. Increase the electric shock or vibration's intensity level. Refer to "How to find the best Vibration/Shock Level" for more information.
5. Ensure that the receiver's electric shock post contacts are close to the dog's skin.

Q : What should I do if the dog trainer does not work?

A :

1. Check the power level of the remote control receiver and recharge it if it is low.
2. In vibration or electrical shock mode, check the intensity level and ensure that the level is over 0.
3. If the receiver is enabled, please press the power switch button to activate it.
4. Check the Channel, press the CH button to turn it back on if you have picked another channel.
5. Re-pairing the remote control and receiver.

Q : What should the duration of each dog training session be?

A : 10–15 minutes.

Q : Receiver Beeps, Vibrates, sending Static by itself constantly or occasionally.

A : Make sure no button of Remote has been pressed or gotten stuck; Match Receiver to the Remote Control again.

Q : The training mode fails to sync up even in a short distance.

A : Make sure there is no strong signal interference in your surroundings. The Remote's range could fluctuate subjects to obstacles, electromagnetic fields, or even stormy weather.

Q : The Receiver Collar will not turn on.

A : Make sure the Receiver Collar has been charged. For the initial charge, be sure to charge it for 3–5 hours. Subsequent charges only take 1.5–2 hours.

Operating Environment & Maintenance

Do not use the product in the circumstances as follow :

1. It is prohibited to use the product near open flames or delicate objects.
2. It is prohibited to use the product in extremely hot (above 40 degrees Celsius) or extremely cold (below 0 degrees Celsius) environments.
3. Avoid using the Remote while it is snowing; This may result in water seeping into the controller, causing damage.
4. Avoid using the set in areas with high levels of electromagnetic interference. This will significantly impair the product's performance.
5. Avoid dropping the devices on hard surfaces inflict excessive force on them.
6. Avoid using the devices in an environment flooded with corrosive chemicals, this may lead to color degrading, deforming, or cracking of the exterior of the devices.
7. It is completely prohibited under any circumstance to open the Receiver. This will very certainly affect the waterproof function of the product, voiding the warranty.

Maintenance

1. Do not use the product if it becomes ineffective due to a drop, damage, outdoor use, or water infiltration. To avoid harm, the manufacturer or its after-sales service should repair the product.
2. When the device is not in use, disconnect it from the power source and wipe both the Remote and Receiver clean with a mild detergent. Switch off the Remote, turn off the receiver, cover the rubber lid tightly on the Receiver's charging port, and store the set in a cool, dry location.
3. Wipe with a soft cloth and a light detergent while cleaning. Avoid using bristly brushes that might scratch the device's surface.
4. If the Receiver has become filthy, secure the rubber cap on the charging port.
5. This product is intended for professional dog training purposes only and should not be used for any other reason. Please do not use this product in violation of any local laws.

Warranty Service

1-Year Limited Quality Warranty

The warranty is effective as of the purchase date. Kindly scan the QR code located on page I or visit support@aftersaleforvip.com to register for your one-year quality guarantee.

A one-year warranty is included with this device for the original purchaser. The year of warranty service is limited to parts such as the USB charging wire, remote, collar straps, and receiver.

After the first year, the client is fully liable for all shipping, accessory, and labor charges associated with repairs. Labor costs are proportional to labor availability.

Not covered by the warranty

1. All product must be accompanied by evidence of purchase in order to begin warranty repair service.
2. If you purchase a secondary product or a product that has been resold by another vendor, we cannot provide a guarantee.
3. We are not responsible for the cost of repairs or replacements caused by owner or dog abuse, incorrect maintenance, or lost units.
4. Any water damage to our product series 'Rainproof Resistant' Transmitters will not be covered. The owner is responsible for any transmitter replacement expenses.
5. The warranty is invalid if the product has been modified or if an unauthorized individual has caused damage to the product during repair attempts.
6. We strongly advise customers not to change the batteries within the first year of the warranty period; If they do, we will not be responsible for any harm to the device during the replacement time, and the product guarantee will be null and void.
7. We reserve the right to keep or discard any accessories that are damaged during replacement or repair.

Terms of Use and Limitation of Liability

1. By using this product, you agree to all of its terms and conditions.
2. This product is a high-quality professional dog training equipment. It is not advised that you use this product if your dog is intelligent or weighs less than 8 pounds. If you have any doubts about the suitability of a product for your companion dog, please consult a professional handler or contact us.
3. This product is intended for professional dog training purposes only and should not be used for any other reason. Please do not use this product in violation of any local laws.
4. We disclaim all liability for direct or indirect damages resulting from the use or abuse of this product; All risks associated with its usage will be borne by the user.
5. We retain the right to make changes to the terms, conditions, and notices associated with this product.



Scan the QR Code for
More Operation Steps

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

Product Specification

Model	D17T
Package Dimension	180*115*50 MM
Neck Circumference	800*20*2 MM
Receiver's Casing	IP68 waterproof
Remote's Casing	Non-waterproof
Remote/Receiver's battery	3.7V/300mAh LIP
Charging Voltage	TYPE-C 5V
Remote/Receiver Charging Time	2 hours
Charging Port	TYPE-C
Wireless Power	10mW
Operating Environment	0-40°C
Remote/Receiver Standby Time	Remote: 120 days Receiver: 45 days
Frequency	433 MHz



support@ aftersaleforvip.com

Made in China
FCC ID:2A37P-D11T