

Instruction Manual

Folded Size: 7"H.x5"W. / 178mmH.x127mmW.

Sheet Size: 7"H.x20"W. / 178mmH.x508mmW.

Please read this manual before first usage. If you have any issues while using our product, feel free to contact us for after sale service. We will take care of your issue as seen as possible.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

©2022 MiLife Health, LLC. 715 W. Park Ave., Unit 107 Oakhurst, NJ 07755

Phone: 732.220.0210 Option 3 for Customer Service
ALL RIGHTS RESERVED. All designs, logos and images are the exclusive property of MiLife Health. This image contains material protected under International and Federal Copyright Laws and Treaties. Any unauthorized reprint or use of this material is prohibited. No part of the image may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or by any information storage and retrieval system without express written permission from MiLife Health.

Products distributed by MiLife Health, LLC. As part of our commitment to excellence in our products, MiLife Health routinely improve the designs, materials or production methods of its existing products. Because it is impractical to publicize all changes in every product, we reserve the right to make such changes without notice.

U.S. AND FOREIGN PATENTS PENDING.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth® SIG, Inc. and any use of such marks is under license. Other trademarks and trade names are those of their respective owners.



Made in China

Pairing your device with Bluetooth Speaker

Your **Bluetooth Speaker** can wirelessly stream audio from any Bluetooth enabled device within the distance of 27-33 Feet. Simply follow the below steps.

1. Press and hold the "Power" button for 2-4 seconds until you hear the indication tone.
2. LED light will turn on and blink, your speaker is now ON and is entering "pairing" mode.
3. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
4. It will search for various devices.
5. The pairing name of our Bluetooth Speaker is "MLB-100-DHL", pair it with this device.
6. If required, enter the password "0000" to confirm the finalised pairing.
7. Once paired successfully, you would hear another indication tone.
8. If you fail to pair it within the time frame or you want to pair it with a new device please follows the steps outlined above.

Select your favorite song on your Bluetooth device and the music should then stream through the Bluetooth speaker.

Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Increase / Decrease Volume	Playing music	Adjust volume from the source device.

Do's and Don'ts

Do not play music at excessive levels. Damage to hearing and/or equipment may result. Do not use outdoors in excessive rain or extreme weather conditions.

Specification

Bluetooth version	: 5.0
Speaker Output	: 5 Watts
Play time	: Up to 6 hours none max volume
Charge Voltage	: DC5V (USB)
Fully charging time	: Around 2-4 hours
Bluetooth Range	: 27-33 Feet
Built-In Rechargeable Battery	: 3.7V / 1200mAh

(Note: Battery life & charging time may vary based on usage & types of devices used.)

Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low.	Adjust source volume.
	Battery dead	Charge Battery.
Sound distorted	Battery nearly dead	Charge Battery.
No sound at all.	Source (Tablet, Mobile Phone, Laptop) turned off.	Turn the source on.
	Speaker turned off.	Turn the speaker on.
	Volume turned down source. Media paused on source.	Adjust volume source. Play media from source.



MLB-100-DHL

Bluetooth® Bluetooth Speaker



INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE

PLEASE CHARGE SPEAKER 100% BEFORE USE

BACK

K

DieCut

FRONT

Package Contents

- Bluetooth Speaker with Colour Changing LED Lantern
- USB rechargeable cable
- Remote controller
- Instruction Manual


Key Features

- Bluetooth Colour Changing Speaker
- Multi-coloured lights
- Connects via Bluetooth to most smartphones, tablets, computers and other Bluetooth enabled devices
- Built-in rechargeable battery
- Carrying handle
- Weather resistant

SAFETY INSTRUCTIONS


- Read all instructions before using this product.
- Do not leave this product unattended while connected to the power supply.
- Do not immerse in water or any other liquids.
- Keep the unit away from heat sources, direct sunlight, humidity, dust and any prolonged contact with water or liquids.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician.
- Improper repairs may place the user at serious risk. Do not
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This appliance is not a toy.
- Do not use the handset at excessive levels as damage to hearing may occur.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat, such as sunshine, fire etc.
- If the unit has not been used for a long period, make sure you charge the unit fully before you start using it again.

Description of Parts: Unit

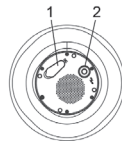

1	DC charging port
2	Power On/OFF button / LED light

Remote Controller

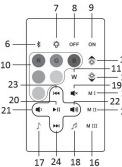

No	Function	Operation
6	Bluetooth connect/disconnect	Short press for disconnecting/re-connecting Bluetooth
7	Light on/off	Short press to turn light on/off
8	Power off (standby)	To turn power off

9	Power on (valid only when the speaker is in Standby mode)	To turn power on
10	Colour selection	To change the favorite colour light
11	White light	To change to white colour LED light
12	Increase the light (valid for R/G/B light only)	Short press to increase the light brightness
13	Decrease the light (valid for R/G/B light only)	Short press to decrease the light brightness
14	Light mode 1	Colour changing light
15	Light mode 2	Colour changing light with changing light brightness
16	Light mode 3	Colour changing light with rapid flash
17	One colour light dances to the music	Use one LED colour light with the music, short press to change another colour
18	Multicolour light dances to the music	Use Multicolour LED colour light with the music
19	Mute the speaker	Short press will off the sound and the next press will resume the sound
20	Play/Pause	Short press will stop the music and the next press will resume the music
21	Volume decrease	Long press will decrease the volume
22	Volume increase	Long press will increase the volume
23	Previous track	Short press the button to the previous track
24	Next track	Short press the button to the next track

 
Battery Installation

In first time use, remove the insulation tab from the battery compartment of the Remote Control.



Remote Control includes the battery (1 CR2025/32 Lithium battery); when battery is drained, replace battery as below:

1. Pull the battery tray out of the battery compartment of Remote Control.
2. Place new CR2025/32 button cell battery in the tray slot, as per the indicated polarity.
3. Close the battery tray.



INSTRUCTIONS FOR USE

Charging the speaker

For best results, fully charge the speaker before its first use.

1. Connect the USB charging cord (included) to the DC 5V charging port of the speaker and insert the other end into a port on your computer or similar power source.
2. Red LED glows indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It will take around 4 - 5 hours to fully charge the battery.

Turn On/Off the Speaker with LED Lantern

Press and hold the "Power" button for 2-4 seconds until you hear the indication tone. LED light will turn on and blink, your speaker is now ON and is entering "pairing" mode.

Press and hold the "Power" button for 2-4 seconds to turn off the speaker.

Turn the speaker to Bluetooth pairing mode.

1. Press and hold the "Power" button for 2-4 seconds until you hear the indication tone.
 2. LED light will turn on and blink, your speaker is now ON and is entering "pairing" mode.
- (Note: Speaker automatically pairs with the previously paired devices)

1

2

3

4

K

DieCut

