



FCC ID: 2A38B-TYS202

## Installation Guide

印刷颜色 ► PANTONE 541 U  
PANTONE Cool Gray 11 C  
成品尺寸 ► 80 x 80mm


物料材质 ► 100g晨鸣云镜双胶  
特种工艺 ► 骑马钉装订（两钉）

图号 ► 6099Y28A00AR1A (旺源) / 6099Y28A00AR12(海天)  
料号 ► Y28A6099AAAP

# Installation Guide

1

## 1. What's in the box

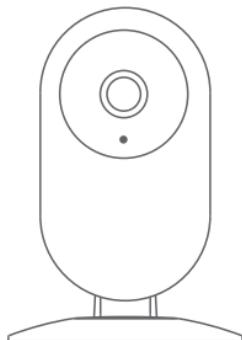

Camera x 1



Power Cable x 1




Manual x 1



Adapter x 1

2

## 2. Camera parts

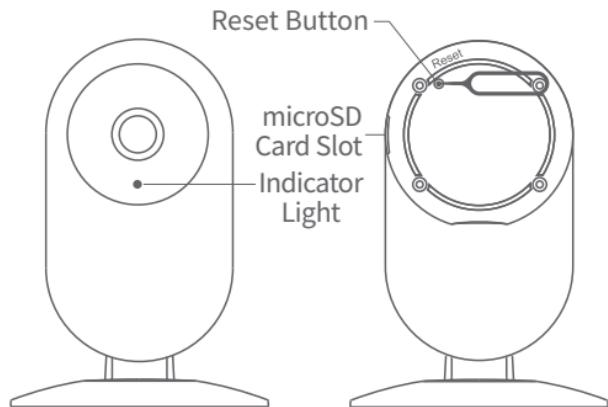

Note: To enable local recording, ensure that you have inserted a microSD card into the slot shown below.

\*Supports up to 128GB microSD cards.

## 3. Getting started

### Step 1

Download the Kami Home App. Register a Kami account and login.

### Step 2

After logging into your Kami Home App, tap the "+" sign and select "Kami Mini Camera".

### Step 3

Ensure that your cell phone is on the 2.4GHz Wi-Fi network.

### Step 4

Press the Reset Button to power on the camera. When the Indicator Light starts blinking, you will hear "Waiting to connect", tap "I heard 'Waiting to Connect'" on your screen.

### Step 5

2.4Ghz Wi-Fi required

Enter your network's SSID and Wi-Fi password, and then use your Kami Mini camera to scan the QR code.


### Step 6

When the QR code has been successfully scanned, tap "Next Step". You will hear the voice prompt "Pairing is successful" shortly.

Your Kami Mini Camera is now ready to use.

## 4. Power on the Camera

Place the camera close to the router, and make sure Wi-Fi access is available, then connect the cable to the Micro USB port on the back of the camera to power the outlet as shown.

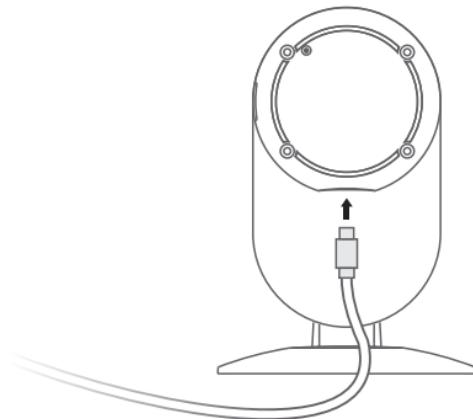

## 5. Switch Wi-Fi Networks

When you need to switch Wi-Fi networks or update your Wi-Fi password, follow the instructions below:

1. Use a clip to press the reset button on the back of the camera, and wait until the yellow light comes on.
2. Open the Kami Home App on your phone, and connect the camera to your phone again. Your videos stored on your microSD card will not be affected.

## 6. Important safety guidelines

1. Read these instructions.
2. Clean only with dry cloth.
3. This camera is for indoor use only.
4. Only use the attachments/accessories specified by the manufacturer.
5. Unplug this apparatus during lightning storms or when unused for long periods of time.
6. To get the best usage out this product, please consistently update to the latest versions of our app and firmware.

## FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The distance between user and products should be no less than 20cm

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



FCC ID: 2A38B-TYS202