

USER MANUAL

© CHERESON

NO.CX-10

PLEASE CAREFULLY READ THE INSTRUCTION MANUAL BEFORE FLYING.

**AGES
14+**

Lithium Battery Safety Instruction

Under the condition of wrong operation, charging to the lithium battery may cause fire or injury or loss of property. The user should well notice the risk hidden when using this kind of product. The manufacturer or sales agent or retailer won't take any responsibility for any accident happened. Please read carefully the safe guidance and charging instruction before using this product.

Please put the battery on the place where is far away from the children or pets. User on or less than 18 years old should use this product under the guidance of adult. Children under 14 years old should not operate it by its own.

Guarantee of the Lithium Battery

The guarantee of this product is only for the raw materials and workshop but no guarantee is given to this product. Under any circumstances, our company won't compensate the amount that higher than the retail price value.

1. It is highly forbidden to charge it for a long time under unattended condition so as to avoid the accident.

2. Please use the original USB Charging Line included for charging this product.

3. It is highly forbidden to decompose or disassemble the battery.

4. Batteries are forbidden to be used or kept under high temperature or heat source or near the flammable product.

5. When charging the battery, covering the charger or battery is highly forbidden. Please keep ventilation and make sure that it should be charged under the condition of fire safety.

6. If the battery sends out smelly odor or gets heated or deformed or there is any abnormal phenomenon happened during the process of charging, please remove the batteries from the charging device or charger and move to the safety outdoor place (if there are batteries which appear abnormal phenomenon, please DO NOT litter around. Please dispose it by taking safe measure) so as not to cause combustion or explosion.

7. Batteries are forbidden to be stored or transported together with the metallic object.

8. Batteries are forbidden to be thrown into the fire or get heated.

9. Metal is forbidden to connect directly with the "+" "-" polarity of the battery.

10. It is highly forbidden to upside down the "+" "-" polarity of the battery.

11. If there any battery leakage happened or electrolyte liquid mistakenly goes into the eyes, please do not rub the eyes but rinse the eyes with clear water.

12. When the battery is not used, please store it in the cool or dry environment.

Transmitter

Each Functions Introduction of Transmitter

Power Indicator

Throttle/ Direction / High-speed and Low-speed Stick

Switch

Aileron Left/ Right Sidewall Fly Trimming

Ascend/ Descend (Forward/ Backward) Trimming

Left Throttle (MODE2)

Right Throttle (MODE1)

Blade

USB Charging Line

Main Motor

Quad Copter

Illustration of Each Part

Warning

Main Rotor

Power Indicator

Ascend / Descend (Forward / Backward) Trimming

Throttle/ Aileron (Left/ Right Sidewall Fly / High-speed and Low-speed) Stick

Switch

Aileron Left/ Right Sidewall Fly Trimming

Right Throttle (MODE1)

Left Throttle (MODE2)

Blade

USB Charging Line

Main Motor

Quad Copter

Illustration of Each Part

Warning

Main Rotor

Power Indicator

Ascend / Descend (Forward / Backward) Trimming

Throttle/ Aileron (Left/ Right Sidewall Fly / High-speed and Low-speed) Stick

Switch

Aileron Left/ Right Sidewall Fly Trimming

Right Throttle (MODE1)

Left Throttle (MODE2)

Blade

USB Charging Line

Main Motor

Quad Copter

Illustration of Each Part

Warning

Main Rotor

Power Indicator

Ascend / Descend (Forward / Backward) Trimming

Throttle/ Aileron (Left/ Right Sidewall Fly / High-speed and Low-speed) Stick

Switch

Aileron Left/ Right Sidewall Fly Trimming

Right Throttle (MODE1)

Left Throttle (MODE2)

Blade

USB Charging Line

Main Motor

Quad Copter

Illustration of Each Part

Warning

Main Rotor

Power Indicator

Ascend / Descend (Forward / Backward) Trimming

Throttle/ Aileron (Left/ Right Sidewall Fly / High-speed and Low-speed) Stick

Switch

Aileron Left/ Right Sidewall Fly Trimming

Right Throttle (MODE1)

Left Throttle (MODE2)

Blade

USB Charging Line

Main Motor

Quad Copter

Illustration of Each Part

Warning

Main Rotor

Power Indicator

Ascend / Descend (Forward / Backward) Trimming

Throttle/ Aileron (Left/ Right Sidewall Fly / High-speed and Low-speed) Stick

Switch

Aileron Left/ Right Sidewall Fly Trimming

Right Throttle (MODE1)

Left Throttle (MODE2)

Blade

USB Charging Line

Main Motor

Quad Copter

Illustration of Each Part

Warning

Main Rotor

Power Indicator

Ascend / Descend (Forward / Backward) Trimming

Throttle/ Aileron (Left/ Right Sidewall Fly / High-speed and Low-speed) Stick

Switch

Aileron Left/ Right Sidewall Fly Trimming

Right Throttle (MODE1)

Left Throttle (MODE2)

Blade

USB Charging Line

Main Motor

Quad Copter

Illustration of Each Part

Warning

Main Rotor

Power Indicator

Ascend / Descend (Forward / Backward) Trimming

Throttle/ Aileron (Left/ Right Sidewall Fly / High-speed and Low-speed) Stick

Switch

Aileron Left/ Right Sidewall Fly Trimming

Right Throttle (MODE1)

Left Throttle (MODE2)

Blade

USB Charging Line

Main Motor

Quad Copter

Illustration of Each Part

Warning

Main Rotor

Power Indicator

Ascend / Descend (Forward / Backward) Trimming

Throttle/ Aileron (Left/ Right Sidewall Fly / High-speed and Low-speed) Stick

Switch

Aileron Left/ Right Sidewall Fly Trimming

Right Throttle (MODE1)

Left Throttle (MODE2)

Blade

USB Charging Line

Main Motor

Quad Copter

Illustration of Each Part

Warning

Main Rotor

Power Indicator

Ascend / Descend (Forward / Backward) Trimming

Throttle/ Aileron (Left/ Right Sidewall Fly / High-speed and Low-speed) Stick

Switch

Aileron Left/ Right Sidewall Fly Trimming

Right Throttle (MODE1)

Left Throttle (MODE2)

Blade

USB Charging Line

Main Motor

Quad Copter

Illustration of Each Part

Warning

Main Rotor

Power Indicator

Ascend / Descend (Forward / Backward) Trimming

Throttle/ Aileron (Left/ Right Sidewall Fly / High-speed and Low-speed) Stick

Switch

Aileron Left/ Right Sidewall Fly Trimming

Right Throttle (MODE1)

Left Throttle (MODE2)

Blade

USB Charging Line

Main Motor

Quad Copter

Illustration of Each Part

Warning

Main Rotor

Power Indicator

Ascend / Descend (Forward / Backward) Trimming

Throttle/ Aileron (Left/ Right Sidewall Fly / High-speed and Low-speed) Stick

Switch