

# Instruction Manual

Folded Size: 7" H.x5" W. / 178mmH.x127mmW.  
Sheet Size: 7" H.MLB-1000SB" W. / 178mmH.x254mmW.

Please read this manual before first usage. If you have any issues while using our product, feel free to contact us for after sale service. We will take care of your issue as seen as possible.

©2022 MiLife Health, LLC. 715 W. Park Ave., Unit 107 Oakhurst, NJ 07755  
Phone: 732.720.0210 Option 3 for Customer Service  
ALL RIGHTS RESERVED. All designs, logos and images are the exclusive property of MiLife Health. This image contains material protected under International and Federal Copyright Laws and Treaties. Any unauthorized reprint or use of this material is prohibited. No part of the image may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or by any information storage and retrieval system without express written permission from MiLife Health.  
Products distributed by MiLife Health, LLC. As part of our commitment to excellence in our products, MiLife Health routinely improve the designs, materials or production methods of its existing products. Because it is impractical to publicize all changes in every product, we reserve the right to make such changes without notice.  
U.S. AND FOREIGN PATENTS PENDING.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth® SIG, Inc. and any use of such marks is under license. Other trademarks and trade names are those of their respective owners.

 This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Made In China

**MiLife™**

MLB-1000SB

## Bluetooth® LED COLOR CHANGING SOUND BAR



**HI-FI  
AUDIO**

**V5.1  
BTVERSION**


















### INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY  
AND RETAIN FOR FUTURE USE  
PLEASE CHARGE SPEAKER 100% BEFORE USE

**K**


**DieCut**

### Control Panel

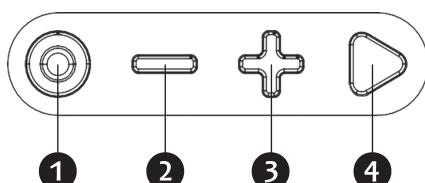

- 1 Mode button (switch Bluetooth/TF card playback/ FM broadcast)
- 2 Previous song/Long press to decrease the volume
- 3 Next song/Long press to increase volume
- 4 Pause/Play/Long press to unpair in Bluetooth mode/Short press to search station in FM mode

### Back Panel

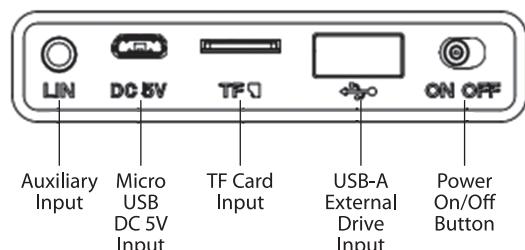

### Specifications

Speaker type:	Wireless Speaker	Frequency response:	100Hz-20KHz
Speaker:	4Ω 5W Ø2"	Working Voltage:	3.7V
The output power:	3W x 2	Battery specification:	2000mAh
Bluetooth standard:	5.1+EDR	Input Voltage:	DC 5V 4000mAh
Transmission distance:	10M	Play time:	Up to 6 hours none max volume

### Bluetooth Connection

When the product is turned on, the blue light of the product flashes, and it is in the pairing state at this time.

1. Turn on the Bluetooth function of your device.
2. Search for the Bluetooth device, and find the "MLB-1000SB" Bluetooth device name.
3. Select the "MLB-1000SB" Bluetooth device name for pairing.

### Radio Operation

First, you must switch the radio function of the Bluetooth speaker. You can press the "1" button to switch to enter the FM mode, and then press the "4" button to start automatic channel search. When the indicator light flashes, it means the channel search is started. After finishing, the station will be saved automatically. At this time, you can press the "-" or "+" key to tune the station and choose to listen.

### Operation:

- I. There is no sound when playing multiple times when the pairing is unsuccessful  
1. In case of scanning, the device cannot be found or cannot be connected, please confirm that the Bluetooth is in the pairing state.
2. If the mobile phone or computer freezes or there is no search result, please confirm whether the mode is Bluetooth mode, or start the Bluetooth of your device before using.
3. Too many peripheral Bluetooth devices cause difficulty in searching, please turn off other Bluetooth devices.

### II. No sound when playing

1. Check if the phone volume is adjusted to the minimum.
2. Check whether the audio is in a paused state.

### III. Interrupted sound or freeze when playing music

1. Whether the connected device exceeds the effective connection distance, or there is an obstacle between the speaker and the connected device.
2. Check if the phone running memory is insufficient, try restarting the phone.

### IV. Can not boot

It may be that the battery is low, please recharge and try again.

### V. Can not charge, the red light does not turn on

1. Try another charging cable.
2. Try restarting.

### Precautions:

- A. Keep away from high temperature and high humidity environments.
- B. Keep away from other high-frequency transmitting devices such as WiFi and routers, which will affect the signal reception of the unit, and cause the sound to freeze and disconnected.

**K**

**DieCut**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.