


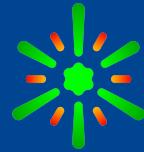

# Kibeam Wand™ Learning System

How To Guide v2.5

# How To & More...



## Links on website

### Frequently Asked Questions

#### Kibeam App

- ★ My email is not recognized by the Kibeam App
- ★ Do I need an account to use the Kibeam Wand App?
- ★ What is the Kibeam Wand app?
- ★ Where can I download the Kibeam Wand App?
- ★ I can't pair the Kibeam Wand
- ★ How do I create a Kibeam account?

[See all 21 articles](#)



#### Kibeam Wand

- ★ How do I contact Kibeam Customer Support?
- ★ How to select books for the Kibeam Wand
- ★ What is the Kibeam Wand?
- ★ What is Kibeam?
- ★ How do I turn the Kibeam Wand on and off?
- ★ How do I charge the Kibeam Wand?

[See all 32 articles](#)

# Wand - Updates

- The App will check for updates when first pairing to the Wand
- Updates will also be checked when attempting to download a book
- Users can manually check for updates in the Wand Status screen pictured below

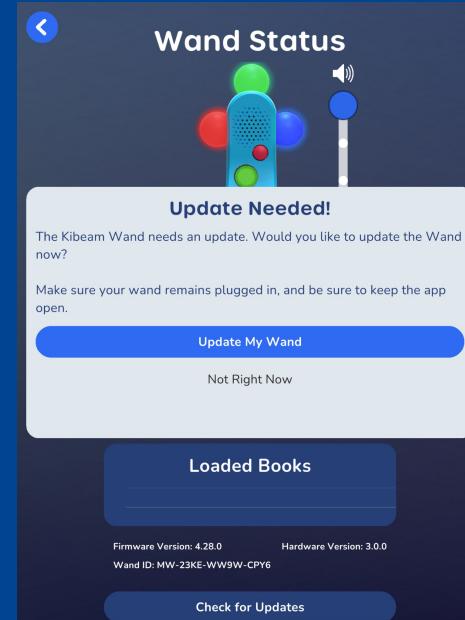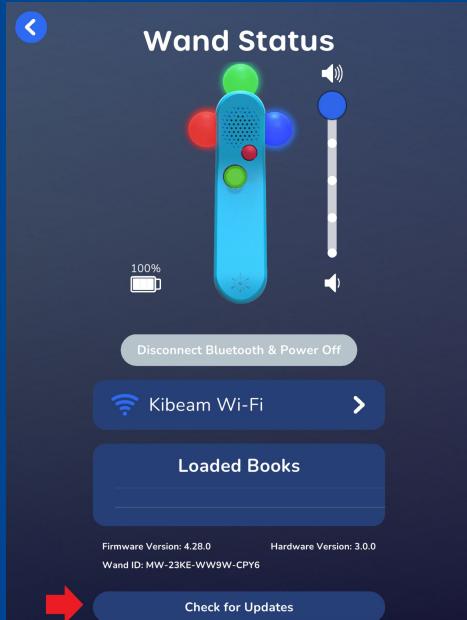

# Wand - Power



## Powering, charging and resetting the Wand

### Turn On

To turn the Kibeam Wand on, press and release the power button on the left side of the wand. You can also press the big green button. You'll know it's on when you hear instructions.

### Turn Off

To turn the Kibeam Wand off, press and hold the power button on the left side of the wand. You can also press the small red button for about 4 seconds, until the orbs turn off.

### Reset

Reset the Wand by pushing a paperclip in the small hole in back of the wand. You should feel a click once the reset button is pressed.

### Charging

Connect one end of the USB cable to the Wand and the other end to a USB power adapter (not included). Then plug the adapter into an electrical outlet.

While charging, the wand's lights can be turned off by pushing the small red button.

If you would like to turn the lights back on, unplug the wand, wait for the lights to turn orange and then plug the USB cable back into the wand.

# Wand - Orb Lights



## Colors and lighting

### **Blue Orbs**

The orbs will light Blue when ready or reading.

### **Flashing Blue Orbs**

The orbs will flash Blue when waiting for input.

### **Flashing Green Orbs**

The orbs will flash Green when an input is accepted.

### **Red, Green, Blue**

When charging or connected to the App the orb will light up in Red, Green and Blue

### **Orbs not lighting**

If none of the orbs are turning on the Wand may be out of power. Try charging it for 30 minutes then using it.

Try resetting the Wand by pushing a paperclip in the small hole in the back of the wand. You should feel a click once the reset button is pressed.

# Wand - Sound



## Adjusting the Wand volume

### On the Wand


- After turning on your Wand, press and release the volume button on the left side of the wand.
- Continue to press the volume button to cycle through raising the volume higher and when it reaches maximum sound level continuing to press the volume button will cycle to the lowest volume setting,

### Through the App

- Open the Kibeam Wand App and go to the 'My Shelf' page.
- Tap the Wand icon in the upper left corner. This will take you to the 'My Wands' screen.
- Tap on the Wand that you want to adjust the volume. This will take you to the 'Wand Status' screen.
- Drag the volume slider next to the image of the Wand to adjust the volume.
- The wand will play a chime at the selected volume.

# Wand - Wi-Fi Pairing


First time pairing the Wand to a Wi-Fi network

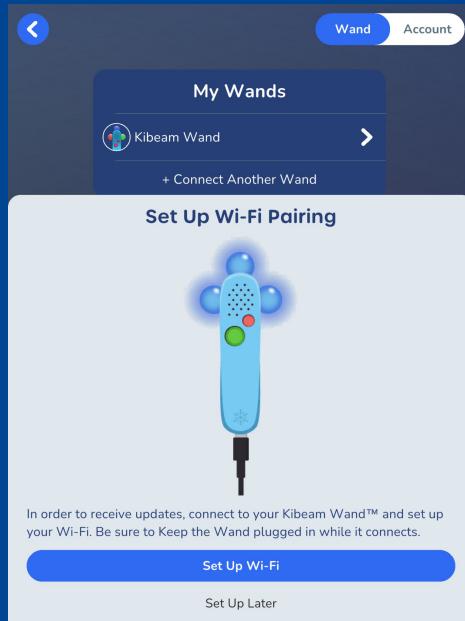

Initial Wi-Fi setup screen



Searching supported networks

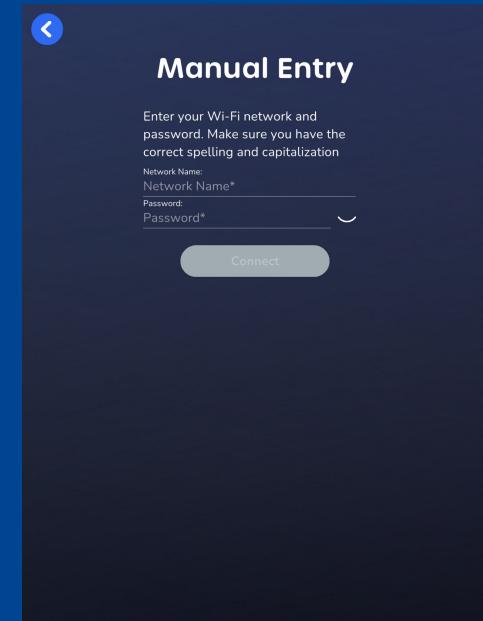

Tapping on "Enter It Manually"


# Wand - Wi-Fi Reconnecting



## Connecting to a new Wi-Fi Network

### Connecting to a Wi-Fi Network

- Plug the USB cable into the Wand and a power source
- With the App open, go to 'My Wands'
- Tap on the Wand you want to connect, this will take you to the Wand Status screen
- Tap the 'Connect to Wi-Fi' button
- Look for and tap the Wi-Fi Network name you would like to connect to
- Enter the Wi-Fi password and tap the 'Connect' button
- When the Wand connects to Wi-Fi, the App will return to the My Wands screen

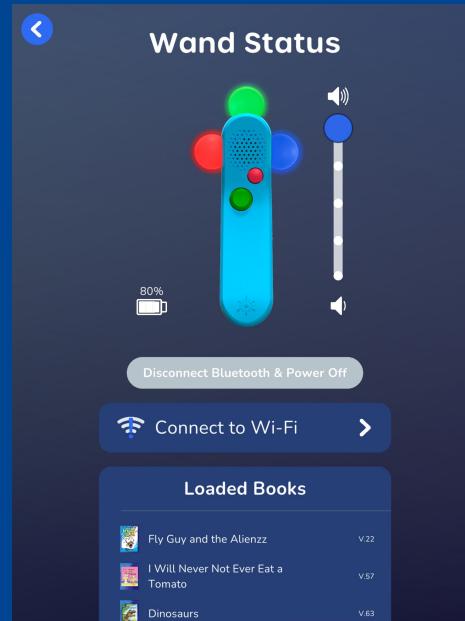


# Wand - Wi-Fi Switching



## Switching Wi-Fi Networks

### Switching Wi-Fi Networks

- Tap on the Wand you want to switch Wi-Fi Networks, this will take you to the Wand Status screen
- Tap the current network name, which will have a Wi-Fi icon next to it
- The current network will appear on the Wi-Fi Network list
- At the bottom of the screen, tap the 'Unpair Current Wi-Fi' button
- When asked if you are sure you want to unpair, tap the 'Unpair Current Wi-Fi' button again

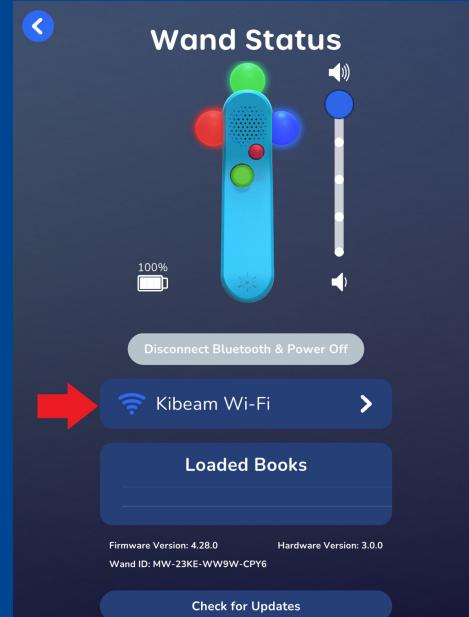

# Wand - Beam



To turn your Wand on, press and release the power button on the left side of the wand. You may also press the big green button.

To turn your Wand off, press and release the power button on the left side of the wand. You may also press and hold the small red button until the orbs turn off.

Your Wand works best when held about 5 inches from your book with the smiley beam in focus.

Your Wand works best when reading books in natural or ambient light rather than a dark room. Also, avoid hard shadows or glare on the page.

Your Wand's beam is completely safe but like a flashlight it should NOT be pointed at someone's eyes.

Example




# Wand - Reading

To start a book point at the cover with the smiley beam in focus (about 5 inches from your book) or until your Wand announces the book title.

To start reading press the big green button.

After turning to the page you want to read, point your smiley beam to the center of the page. To select other options, you can use the small red button.

Remember to always hold your Wand about 5 inches from the book with the smiley beam in focus.




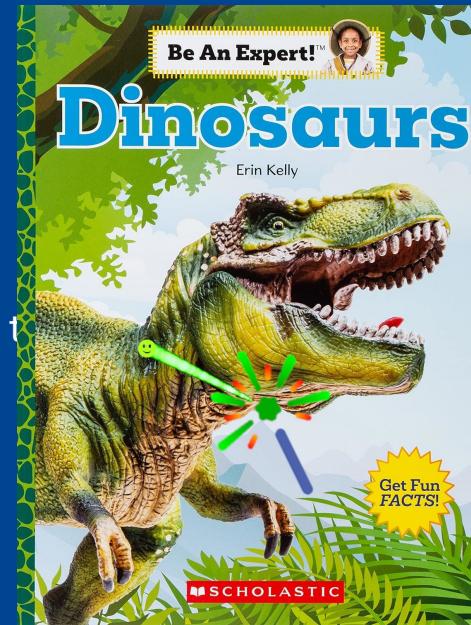


Example

# App - Books



More coming soon!

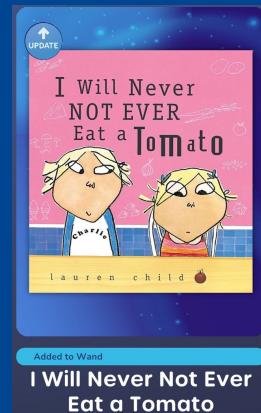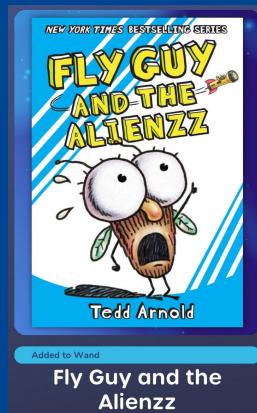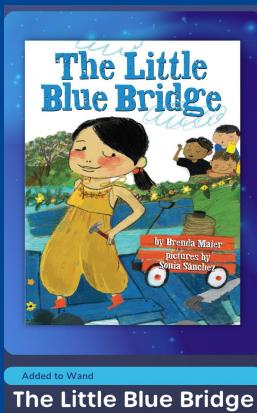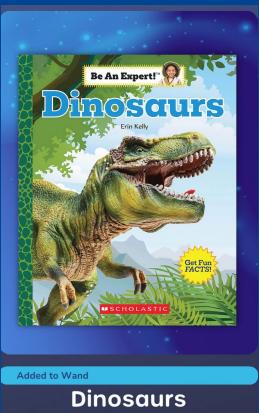

# Quick Start Guide



Page 1



**How to use your Kibeam Wand™**

**POWER**  
Press the power button to turn the wand on and off.

**VOLUME**  
Press the volume button to hear each level and choose yours.

**MENU**  
Press the small red button to hear your first option. Press again to hear other options.

**SELECT**  
To select an option from the menu, press the big green button.

**READ**  
Hold your wand and slowly bring it closer to the page until the Happy Beam is in focus, then listen for instructions.

**CHARGE**  
Plug the enclosed USB cable into your wand and a power source near your Wi-Fi router.

P/N: 955-00024 | ©2024 Kibean Learning, Inc.  
ELM-00024-00001 | Kibean is a trademark of Kibean Learning, Inc. ©2020 by Scholastic Inc.  
Used by permission of Scholastic Inc. All rights reserved.  
Scholastic Item Number 769252



**Quick Start Guide**

## The magic begins with your first book!

- 1** Scan the QR code on your box
- 2** Download the Kibeam Wand™ App
- 3** Read & Play with your first book



**Want a SNEAK PEEK at the fun?**  
Turn on your Wand, turn the page and point the Happy Beam at the dinosaur.



# Quick Start Guide



Page 2

**Spinosaurus**

They lived on land and in water.

**Dino Info**

**Q:** Why do paleontologists think these dinosaurs hunted food in the water?

**A:** Because fish scales were found in their stomachs!

more on back

# FCC Regulatory Statement



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Specific Absorption Rate (SAR) information

The SAR limit of USA (FCC) is 4W/kg averaged over ten grams of tissue. This model (FCC ID: 2A3DM-ESPS3WROOM1) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at an extremity is 0.15W/kg.

Note: Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.