


# Product Manual

## Aroma Diffuser

- A-H333S-B  A-H333S-W
- A-H333M-B  A-H333M-W
- A-H333L-B  A-H333L-W

Please read the function introduction based on the product model.

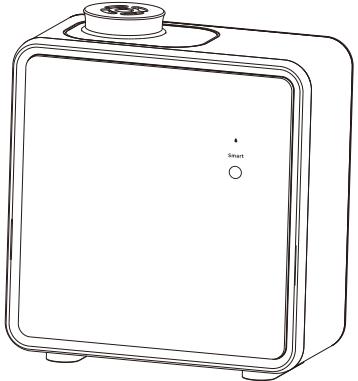

Download the App



Scent Home


### Grade and Working Period

Grade	Work Time(s)	Stop Time(s)	Consumption(g/h) & Estimated Days of Use					
			A-H333S-B A-H333S-W		A-H333M-B A-H333M-W		A-H333L-B A-H333L-W	
G1	15s	300s	0.13	153	0.31	161	0.40	250
G2	15s	150s	0.24	83	0.59	84	0.76	131
G3	20s	120s	0.38	52	0.93	53	1.20	83
G4	20s	85s	0.50	40	1.24	40	1.60	62
G5	25s	80s	0.63	31	1.55	32	2.00	50
G6	30s	75s	0.75	26	1.86	26	2.40	41
G7	30s	60s	0.88	22	2.17	23	2.80	35
G8	30s	50s	0.98	20	2.44	20	3.15	31
G9	30s	40s	1.13	17	2.79	17	3.60	27
G10	30s	33s	1.23	16	3.10	16	4.00	25
G11	33s	30s	1.38	14	3.41	14	4.40	22
G12	40s	30s	1.50	13	3.72	13	4.80	20
G13	50s	30s	1.64	12	4.07	12	5.25	19
G14	60s	30s	1.75	11	4.34	11	5.60	17
G15	75s	30s	1.88	10	4.65	10	6.00	16
G16	80s	25s	2.10	9	5.21	9	6.72	14
G17	85s	20s	2.13	9	5.27	9	6.80	14
G18	120s	20s	2.25	8	5.58	8	7.20	13
G19	150s	15s	2.25	8	5.58	8	7.20	13
G20	300s	15s	2.50	8	6.20	8	8.00	12

#### Note:

- 1.The above data is based on company internal laboratory tests. The data may vary depending on the type of essential oil and environmental conditions. Please refer to actual usage.
- 2.It is recommended to use essential oils with a viscosity not exceeding 30 mPa·s.
- 3.The estimated days of use are calculated based on the bottle capacity and 10 hours of working per day.

### Wall Mount Installation Steps

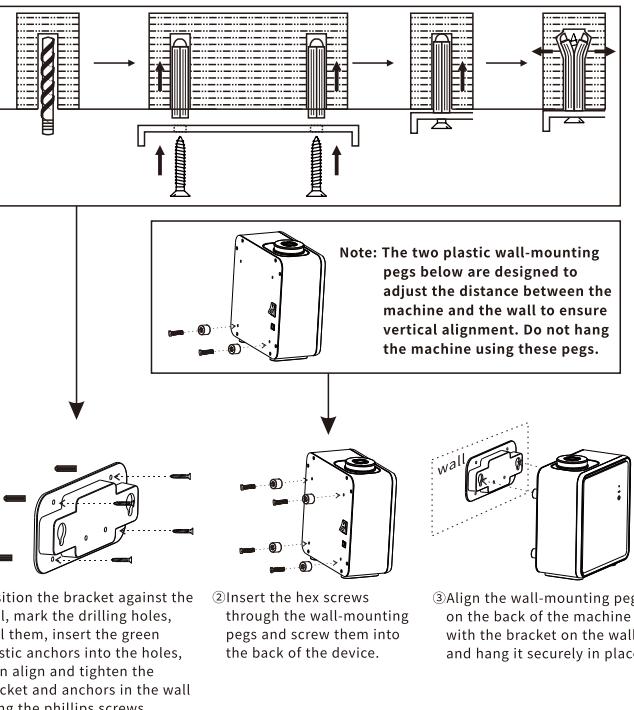

Note: The two plastic wall-mounting pegs below are designed to adjust the distance between the machine and the wall to ensure vertical alignment. Do not hang the machine using these pegs.


## 【How to Connect the App to the Device】

### Steps


- 1.Download the App  
Open the Google Play Store or App Store, search for the "Scent Home" app, and download it. If you're unable to find it, scan the QR code on the first page of the product manual to download.
- 2.Add Device & Log In (Make sure the machine is powered on): For Bluetooth / WiFi / 4G Versions
  - ①Press and hold the "O" button on the machine until you hear a long beep, which indicates that the device has entered network configuration mode.
  - Note: During the long press, the machine will beep twice first, which means the electronic lock is opened. Keep holding the button until you hear a long beep—this confirms the device is in pairing mode. The unlocked state will automatically close after 10 seconds.
  - ②Enable Bluetooth/WiFi/4G on your phone..
  - ③Open the app, register an account, and log in.
- 3.Add Device
  - ④Tap the "+" icon in the top right corner.
  - ⑤Select your device model.
  - ⑥Tap "Next".
  - ⑦Choose the corresponding device ID, enter the default password "8888", then tap "Confirm" to connect to WiFi.
  - ⑧Select your WiFi network and tap "Connect" to configure the device. (Skip this step if using the Bluetooth version.)
  - ⑨Please wait patiently during this step. Do not exit the app.

## 【Product Information】


### Packing List

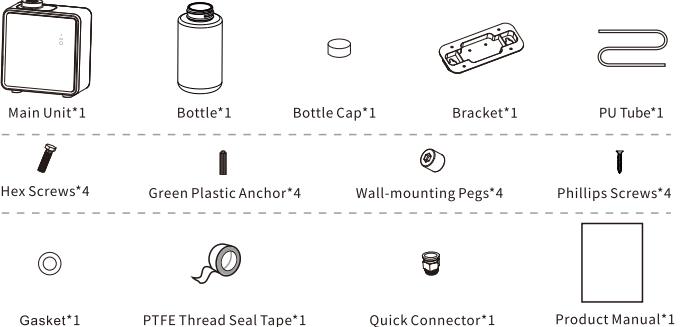


## 【Function Description】

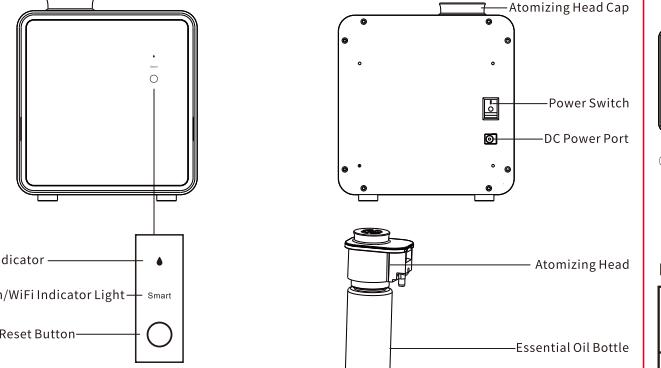

### How to Add Essential Oil

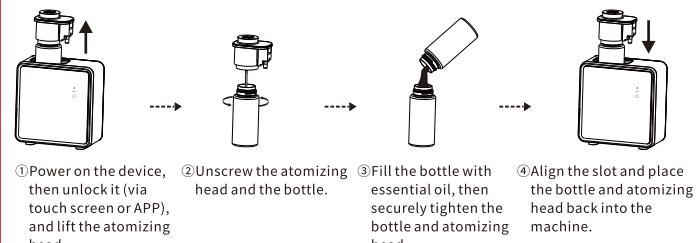

### Steps for Installing the HVAC Quick Connector

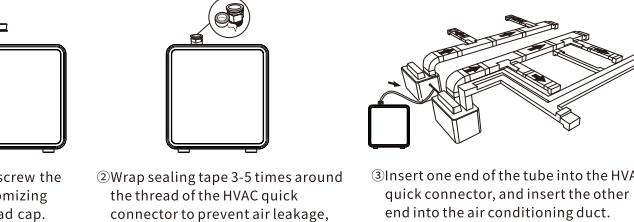

### Button / Indicator Light / Buzzer Description

Button Functions	Press 4 times quickly	Unlocks the electronic lock; it will auto-lock after 10 seconds.
	Press and hold for 8 seconds	Restores factory settings and enters network pairing mode (WiFi version).
Indicator Lights	Low Oil Indicator (Red)	Steady ON: Essential oil level < 10%. OFF: Essential oil level > 10%.
	Bluetooth Indicator (Blue)	1. When powered on: Stays on for 3 seconds, then turns off. 2. Connected successfully: Always on. 3. Receives Bluetooth signal: Flashes once (off for 0.1s, then back on). 4. Disconnected: Off.
	WiFi Indicator (Blue & Red)	1. When powered on: Blue light stays on for 3 seconds, then follows these states: 1)Pairing mode: Red and blue alternate flashing. 2)Router not connected (disconnected): Red light stays on. 3)Router connected but server not connected (disconnected): Blue light flashes. 4)Router and server connected: Blue light stays on. 2. Receiving data: Blue light flashes once (off for 0.1s, then back on).
Buzzer Sounds		1. Power on: Long beep. 2. Press 4 times to unlock: Two short beeps. 3. Press and hold for 8 seconds (factory reset): Long beep. 4. Bluetooth connected: Three short beeps. 5. Electronic lock unlocks or auto-locks: Two short beeps.
	Note:	Short beep: 50ms Long beep: 200ms Interval between sounds: 5ms

