



RubensTab

Quickstart Guide

Warranty card

Your tablet comes with a 1-year manufacturer's warranty for any manufacturing defects

To register your product, please go to the following link:

<https://www.frunsi.com>

Also fill in the details below for your own reference and keep this card in a safe place.

Order Number: _____
Model Number: _____
Serial Number: _____

Terms and Conditions

Following are the terms and conditions for the warranty:

1. The warranty covers only the product listed on this card.
2. Warranty covers any manufacturing defects which occurred within one year of the purchase. Normal wear and tear is not covered.
3. The retailer will cover the expenses for the return shipping if the defect occurs within first 30 days. After first 30 days of the purchase, buyer is responsible to pay the shipping cost for sending the item for repair.
4. The average time to repair and send the unit back is about 6 weeks.
5. The manufacturer may send a replacement unit instead of repairing the defective one at his own discretion.
6. Please remove all your personal information before sending the unit for repair. The manufacturer is not responsible for any loss of data or information.

Quick Start Guide

This is a quick start guide only.

Ceci est un guide de démarrage rapide seulement.

Dies ist eine Kurzanleitung nur.

Questa è solo una guida rapida.

Esta es sólo una guía de inicio rápido.

For full user manual, please visit

Pour le mode d'emploi complet , s'il vous plaît visitez

Für vollständige Bedienungsanleitung finden Sie unter

Per manuale utente completo , visitare il sito

El manual de usuario completo, visitar

<https://www.frunsi.com>

Read me first

Please read this manual before operating your tablet and keep it for future reference.

The descriptions in this manual are based on the default settings.

Images and screenshots used in this manual may differ from the actual product.

Available features and additional services may vary by device, software or service provider.


Our company is not liable for performance issues caused by third-party applications.

What's in the box



Charger configurations

US

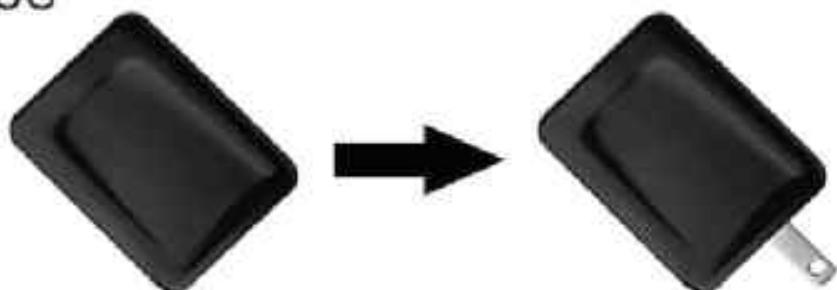

Know your ports and buttons



- ← **On/off button**
- ← **Volume up**
- ← **Volume down**
- ← **Reset button**
- ← **USB Type-C**
- ← **Micro-HDMI**
- ← **Headphone jack**
- ← **Microphone**
- ← **SD Card slot**

Charging and Data transfer


1 Power on



2 File transfer



3 SD card tray

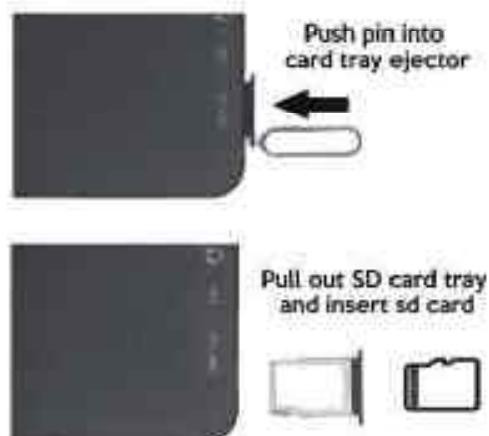

4 Charging



Accessories

(A) Screen protector film

- The RubensTab comes with a free screen protector film, which has been pre-applied to the screen of the tablet. It protects your tablet from dirt, dust and scratches.


(B) Leather case

- The RubensTab comes with a leather case for free. There are touch fasteners at the bottom of the case, where you can open the case and insert the tablet into the case.
- It has a flip which is capable to transform the case into a horizontal viewing stand. Perfect for typing and viewing.



(C) Frunsi Active Pen

- Frunsi Active Pen is delicately designed for writing, drawing, sketching, and painting on Frunsi RubensTab.
- It runs with AAAA battery. (Extra battery included)
 - o If the pen stops responding, please open the cap above the Frunsi logo and change the battery.
- It has palm rejection.
 - o Please bring the Pen close to the screen before putting your palm on the screen.
 - o The touch screen becomes inactive when it senses the Pen nearby.
- It has pressure sensitivity.
 - o The Pen has 1024 levels of pressure sensitivity.

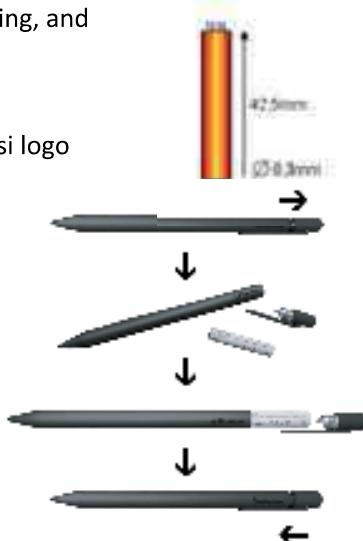

Getting Started

1. Charge the Tablet

The Tablet comes with a built-in rechargeable lithium-polymer battery. It is recommended to fully charge the battery for at least **4 hours** before first use.

- To charge the Tablet, plug the charger to an electrical socket with the other end of the adapter inserted to the charging slot on the Tablet (Refer to Step 1 on the previous page).
- You may continue to use the Tablet while it is charging. You may stop charging any time even when it is not 100% charged.
- The battery charge status will be indicated in the middle of the screen.



- Disconnect the power adapter when the Tablet is fully charged after 4 hours.
- If the tablet does not power up after charging, please insert a paper clip pin inside the Reset hole on the back and recharge the tablet again.

Note: When the Tablet is connected to a computer via the USB cable, the battery will charge via the USB socket, but at a much slower rate than via the DC 5V power adapter.

⚠ Do not use any other power adapters than the one supplied. Using an incompatible power adapter could damage the tablet and poses the potential risk of fire.

2. Turn on the Tablet

- Press the power key for 5 seconds.
- The Frunsi logo will show up in the middle of the screen, followed by the Android™ logo. •

Wait for about 30-60 seconds for Android system to load.

- You will then see the welcome page.

3. Touch Screen Actions

You can control all the functions of the Tablet by using the touch screen in combination with the three touch keys located at the bottom of the screen. To control the Tablet, use your finger to select the icons, buttons, menu, on-screen keyboard, and other items displayed on the screen.

You can perform the following actions with your fingers:

- A. Touch an option to select it
- B. “Touch and drag” to move items or to scroll through lists by touching and holding, then gliding your finger over the screen.
- C. Use a finger and thumb to “pinch zoom” on-screen items such as photographs and web pages.

