

Meet Your 39g



- Hold to Power On / Off
- Press to Play / Pause Audio
- Press to Answer / End Call



- Pairing Mode  flash
- Connected  flash
- Charging  solid
- Full Charge  solid



3.5mm Headphone Output

Micro USB Charging Input

Clip / Magnetic Clip

Power, Pair & Charge

Hold  to power on

The 39g automatically enters Bluetooth pairing when you first power on.

Pair the 39g to a device via Bluetooth

Pairing mode is indicated by the LED flashing blue and red

- ▶ On the device you are pairing to, open the Bluetooth menu
- ▶ Locate your Noxgear 39g in the Bluetooth menu and connect
- ▶ When connected the 39g will announce "connected" and is ready to play audio

Charge the 39g

- ▶ Connect the micro USB charging cable to a power source
- ▶ Plug USB cable in to the 39g's charging port
- ▶ While charging the LED glows solid red
- ▶ LED illuminates green when fully charged

Charge time is approximately 3 hours. May not arrive with full charge.

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: The grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Canadian Compliance Statement


This device complies with Innovation, Science and Economic Development Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Magnetic Mount

Mount the 39g to any magnetic surface.

Note: Do not remove magnetic clip when mounting

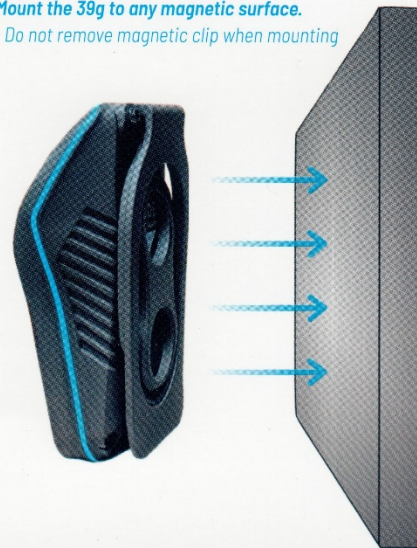


...and many more




Armband



Belt

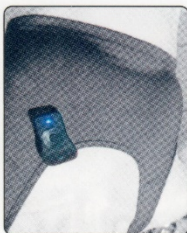

Sports Bra

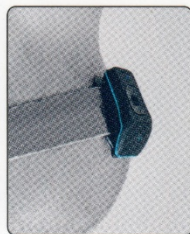

Visor



Backpack



Shirt

Wear with Clip



facebook.com/noxgear



@noxgear_nation



www.noxgear.com

Need Help?

We're here for you.

Contact us for support or feedback:

support@noxgear.com

(937) 317-0199

Align the 39g to the magnetic clip for a secure hold

Note: Always place the magnetic clip back on the 39g when not in use.

Position the magnetic clip on the inside of your clothing

Magnet should face outward

Slide the magnetic clip downward with your thumb to remove

The magnetic clip can securely hold the speaker during vigorous activity through a shirt, rain jacket, hoodie, fleece and more.



Wear with Magnet

PRODUCT GUIDE

39TM_g

 noxgear®