

型号: 313pro说明书

尺寸: 148*170mm

材质: 105g铜版纸 正反印刷

图纸编号: YGH-QM-03-7354

版本号: A-0

日期: 2023.01.11

先风琴折, 后左右一折, 封面在上

Before use
Thanks a lot for choosing our product. Please read the following information carefully:
1. This product is designed to be used with the original adaptor provided in the package.
2. The built-in battery inside the product is only for time backup in case of a power outage.
3. Please follow the instructions to set up the product.
We hope you have a nice experience using our product.

Precautions:
1. Do not expose the unit to extreme temperatures, direct sunlight, dust or humidity.
2. A cloth or other protective material should be placed between the clock and the furniture.
3. Plug off the power before cleaning the clock with a soft cloth moistened only with mild soap and water.
4. You must use the original adapter.
5. Do not disassemble the clock or touch any components.

Chapter 1 Diagram

1. FM Radio 6. Projection Button 11. Radio Volume Adjustment 16. Reset
2. Digit Decrease 7. Projection Len 12. Display Brightness Adjustment
3. Digit Increase 8. Projection Pillar 13. Alarm Volume Adjustment
4. Snooze/Display Button 9. USB Charging Port 14. Alarm Setting
5. Time Setting 10. Type-C Power Supply Port

Chapter 2 Time Setting
In time display mode, long press to enter HOUR setting, short press / to adjust time and long press to quickly adjust. Short press again to enter MINUTE setting. After setting is finished, short press to save.

12/24-Hour Time Format Conversion
In time display mode, short press to switch between 12 and 24 hour format. The setting automatically saved after 3s.

Chapter 3 Alarm Setting
In time display mode, long press to set alarm 1, short press / to set HOUR, long press to quickly adjust. Short press again to set MINUTE. Short press to save settings.
NOTE: Setting steps of alarm 2 is the same as the alarm 1.

Alarm Ringtones Setting
1. In time display mode, short press / to choose ringtones, short press it again to next ringtone. When you setting, the display will simultaneously show the correspond icon namely, 01, 02, 03, BU, and RD. The last ringtone you choose will be the alarm ringtone.
NOTE: If you set the FM radio as your alarm ringtone, the last radio channel you listen will be alarm ringtone.

Chapter 4 FM Setting
FM Station Searching
1. Short press to turn on/off FM radio, Long press / to manually search radio channels.
NOTE: Long press the FM radio will automatically search and save up to 30 channels when you use it at the first time.
2. When you listening to the radio, short press / to switch saved radio channels.
3. Adjust FM volume via the button on the back.

Chapter 5 Projection
Brightness adjustment
In time display mode, short press to turn on the projection, and short press again to adjust projection brightness (Low-Medium-High-OFF). Long pressing can flip the time projection in 180 degrees.
Note: a. The best projection distance is from 0.5m to 3m, so please maintain the projection distance in this range.
b. The projection cannot be used in a strong light environment, so the projection brightness may be weak in the day.
c. After power outage, the projection brightness and display direction are the same as the last time.

Projection Setting
In projection mode, rotate the projection pillar to adjust projection angle from -90 degrees to 90 degrees.

Chapter 6 Display Brightness Setting
1. Steplessly adjust display brightness via the switch on the back.
2. Long press to turn on or off the display, the projection brightness will not change.
Note: If you adjust the display to low brightness before sleeping, please adjust the brightness to the highest via on the next day.

Chapter 7 USB Charging Function
1. The Type-C port on the back is used for the power supply of the clock.
2. The USB port on the side is used for charging your phone, tablets, etc.
Note: Please use the original adapter while charging.

Chapter 8 Specifications

Input	5V=1.5A	Usb Output	5V=1.2A(Max)
Projection Angle	-90°~90°	Projection Distance	0.5-3m
Projection Brightness	3 levels	Alarm Ringtones	4 ringtones + FM radio

Chapter 9 Package Contents

Alarm Clock x1	Charging Cable x1	Adapter x1	User Manual x1
----------------	-------------------	------------	----------------

FAQ
How to set up the projection correctly?
1. First determine the clock screen orientation
2. Rotate the projection column and the screen in the same direction
3. Press and hold the projection button for 3s to rotate the projection 180 degrees on the ceiling.
The best projection distance is between 0.5m and 3m, please keep the projection distance in this range.

Here are some tips for FM function:
1. Enter FM settings, press and hold the radio button, the FM radio will automatically search and save up to 30 radio stations when you use it for the first time.
2. If you want to change the saved 30 radio stations, you can only change them by resetting the clock and then search for radio stations again.
3. Reset the clock to clear the record. There is a "RESET" hole on the back of the clock, just poke it with a needle.
4. Note that FM stations cannot be saved manually, they must be searched automatically, if it happens to find the station you want, it can be saved!

How do you reset the clock?
Insert a needle into the RESET HOLE on the back, and the clock will be reset and restore factory setting. The time is displayed as AM 12:00.

Why does the clock not get FM radio signals?
1. Make sure that the FM antenna on the back is completely untied.
2. Please check whether the location is remote and whether other signal receptions are normal.
3. Move the clock to an open space to check whether it can receive signals.
4. Check if there are any interference signals or devices to affect the signal such as mobile phones, keys, and so on.

Correct Disposal of this product
 This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

WARNING:
Do not ingest the battery. Chemical Burn Hazard (the remote control supplied with). This product contains a coinbutton cell battery. If the coinbutton cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
Keep new and used batteries away from children. If the battery compartment isn't closed securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
This appliance can be used by children over 8 years old, and children shall not play with the appliance.
CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

FCC Statement
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Note:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

Projection Alarm Clock

**• 6 Months Return
• 24 Months Warranty
• Lifetime Support**